MAGNUM™
PRODUCTS LLC

DIESEL GENERATOR
MMG150

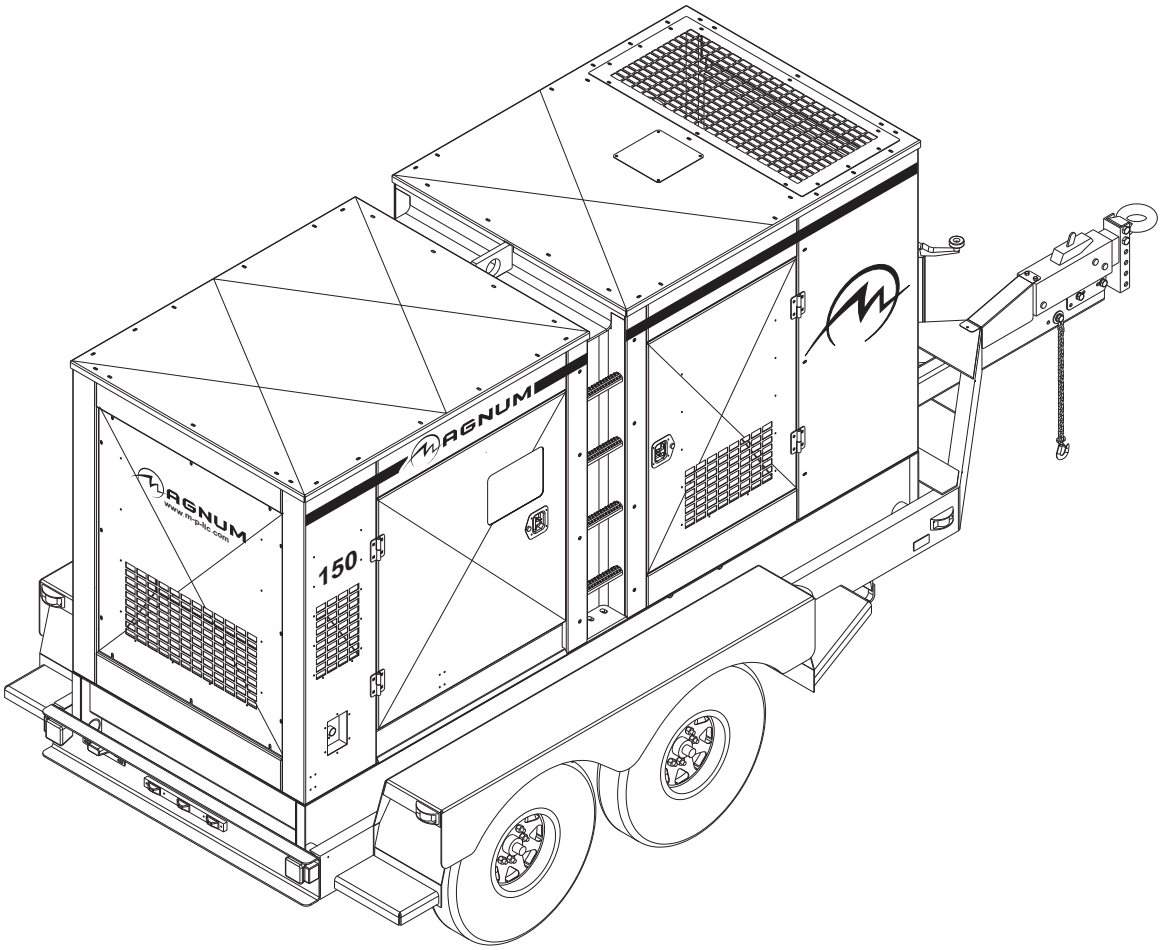

PARTS MANUAL

INTRODUCTION

Before servicing this machine, make sure the engine start switch is turned to off “O”, the circuit breakers are open (off, “O”), the emergency stop switch is closed (pushed in), and the negative (-) terminal on battery is disconnected. Attach a “DO NOT START” sign to the control panel. This will notify everyone that the unit is being serviced and will reduce the chance of someone inadvertently trying to start the unit. If the unit is connected to a remote start or transfer switch, make sure the remote switch is also off and tagged.

⚠ WARNING

Before operating or servicing this equipment, read and understand the Magnum Operating Manual which was included with the unit when shipped form the factory. Failure to do so increases the risk of injury to yourself or others.

MAGNUM PRODUCTS LLC

215 Power Drive • Berlin, WI 54923

U.S.A.

Phone: 920-361-4442

FAX: 920-361-4416

Toll Free: 1-800-926-9768

www.m-p-llc.com

For technical or parts QUESTIONS, please contact Magnum Products’ Customer Support or Technical Support team at 920-361-4442 or toll free at 1-800-926-9768. Please have your serial number available.

To ORDER SERVICE PARTS, please contact the dealer from which you purchased the unit, or call Magnum Products to locate a dealer in your area.

Engine Make:_____

Engine Serial Number:_____

Engine Model Number: _____

Generator Make: _____

Generator Model Number:_____

Generator Serial Number: _____

Unit Model Number:_____

Unit Serial Number: _____

⚠ WARNING

CALIFORNIA PROPOSITION 65 WARNING:
Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.

TABLE OF CONTENTS

	Page
INTRODUCTION	2
TABLE OF CONTENTS	3
ENCLOSURE PANELS	4
UNIT DECALS	6 - 7
LUG BOX DOOR	8
LUG PLATE ASSEMBLY	9
LUG BOX ASSEMBLY	10
LEFT CONTROL PANEL ASSEMBLY	11
RIGHT CONTROL PANEL ASSEMBLY	12 - 13
CONTROL BOX ASSEMBLY	14 - 15
OUTLET PANEL ASSEMBLY	16
OUTLET PANEL ASSEMBLY FOR CAM LOCK OPTIONS	17
CAM LOCK PANEL ASSEMBLY OPTIONS	18
CAM LOCK DOOR ASSEMBLY (OPTIONAL)	19
AIR FILTER ASSEMBLY	20
EXHAUST SYSTEM ASSEMBLY	21
ENGINE MOUNT ASSEMBLY	22
FUEL LEVEL SENDING UNIT ASSEMBLY	23
FUEL TANK ASSEMBLY	24
EXTENDED RUN OPTIONS	25
COOLING SYSTEM HOSES	26 - 27
GENERATOR TO ENGINE ASSEMBLY	28
GENERATOR BOX ASSEMBLY	29 - 35
ENGINE ASSEMBLY	36 - 37
OIL VAPOR RECIRCULATION SYSTEM ASSEMBLY	38 - 39
FUEL TANK AND SKID ASSEMBLY	40 - 41
ENGINE TO SKID ASSEMBLY	42 - 43
COOLING SYSTEM ASSEMBLY	44 - 45
LEFT FRONT DOOR ASSEMBLY	46 - 47
LEFT REAR DOOR ASSEMBLY	48 - 49
RIGHT FRONT DOOR ASSEMBLY	50 - 51
CONTROL DOOR ASSEMBLY	52 - 53
LEFT SIDE CENTER PANEL ASSEMBLY	54
RIGHT SIDE CENTER PANEL ASSEMBLY	55
LEFT FRONT CORNER ASSEMBLY	56
RIGHT FRONT CORNER ASSEMBLY	57
FRONT PANEL ASSEMBLY	58
REAR PANEL ASSEMBLY	59
FRONT ROOF PANEL ASSEMBLY	60
REAR ROOF PANEL ASSEMBLY	61
LEFT REAR CORNER ASSEMBLY	62 - 63
RIGHT REAR CORNER ASSEMBLY	64 - 65
END AND LOWER SIDE PANEL ASSEMBLY	66
UPPER SIDE PANEL ASSEMBLY	67
TRAILER ASSEMBLY	68 - 69
TRAILER BRAKE LINES	70
RECOMMENDED SPARE PARTS LIST	71
ELECTRIC BRAKE WIRING HARNESS	71
TRAILER LIGHT WIRING DIAGRAM	72
AC WIRING DIAGRAM	73
DC WIRING DIAGRAM	74
AC WIRING DIAGRAM - FOUR POSITION OPTION	75

ENCLOSURE PANELS

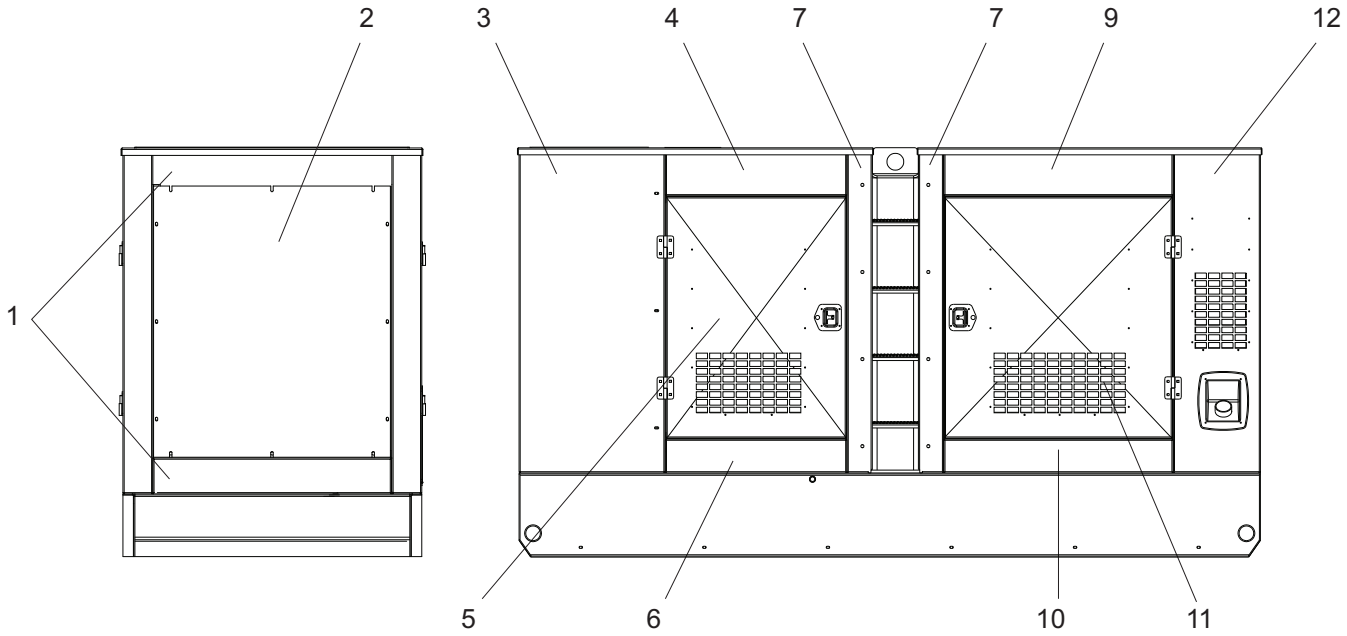

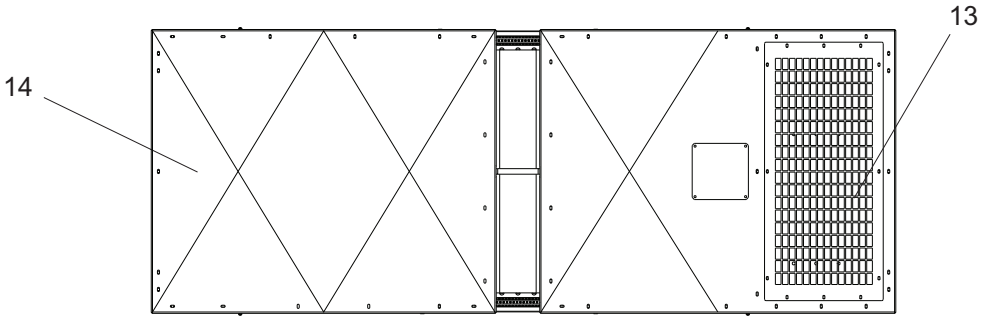

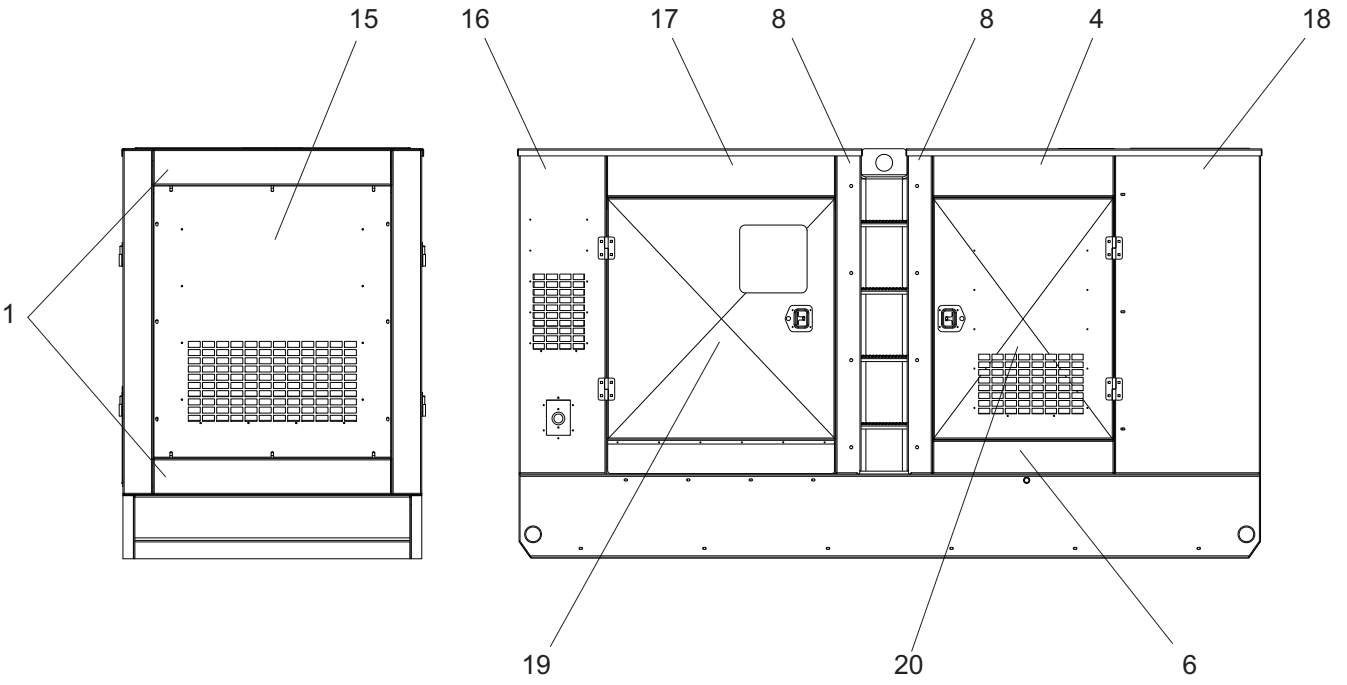

ITEM	PART NO.	QTY	DESCRIPTION
1	Page 66	4	End panel assembly
2	Page 58	1	Front panel assembly
3	Page 56	1	Left front corner assembly
4	Page 67	2	Upper side panel assembly
5	Page 46	1	Left front door assembly
6	Page 66	2	Lower side panel assembly
7	Page 54	1	Left side center panel assembly
8	Page 55	1	Right side center panel assembly
9	Page 67	1	Upper side panel assembly
10	Page 66	1	Lower side panel assembly
11	Page 48	1	Left rear door assembly
12	Page 62	1	Left rear corner assembly
13	Page 60	1	Front roof panel assembly
14	Page 61	1	Rear roof panel assembly
15	Page 59	1	Rear panel assembly
16	Page 64	1	Right rear corner assembly
17	Page 67	1	Upper side panel assembly
18	Page 57	1	Right front corner assembly
19	Page 52	1	Control door assembly
20	Page 50	1	Right front door assembly

UNIT DECALS

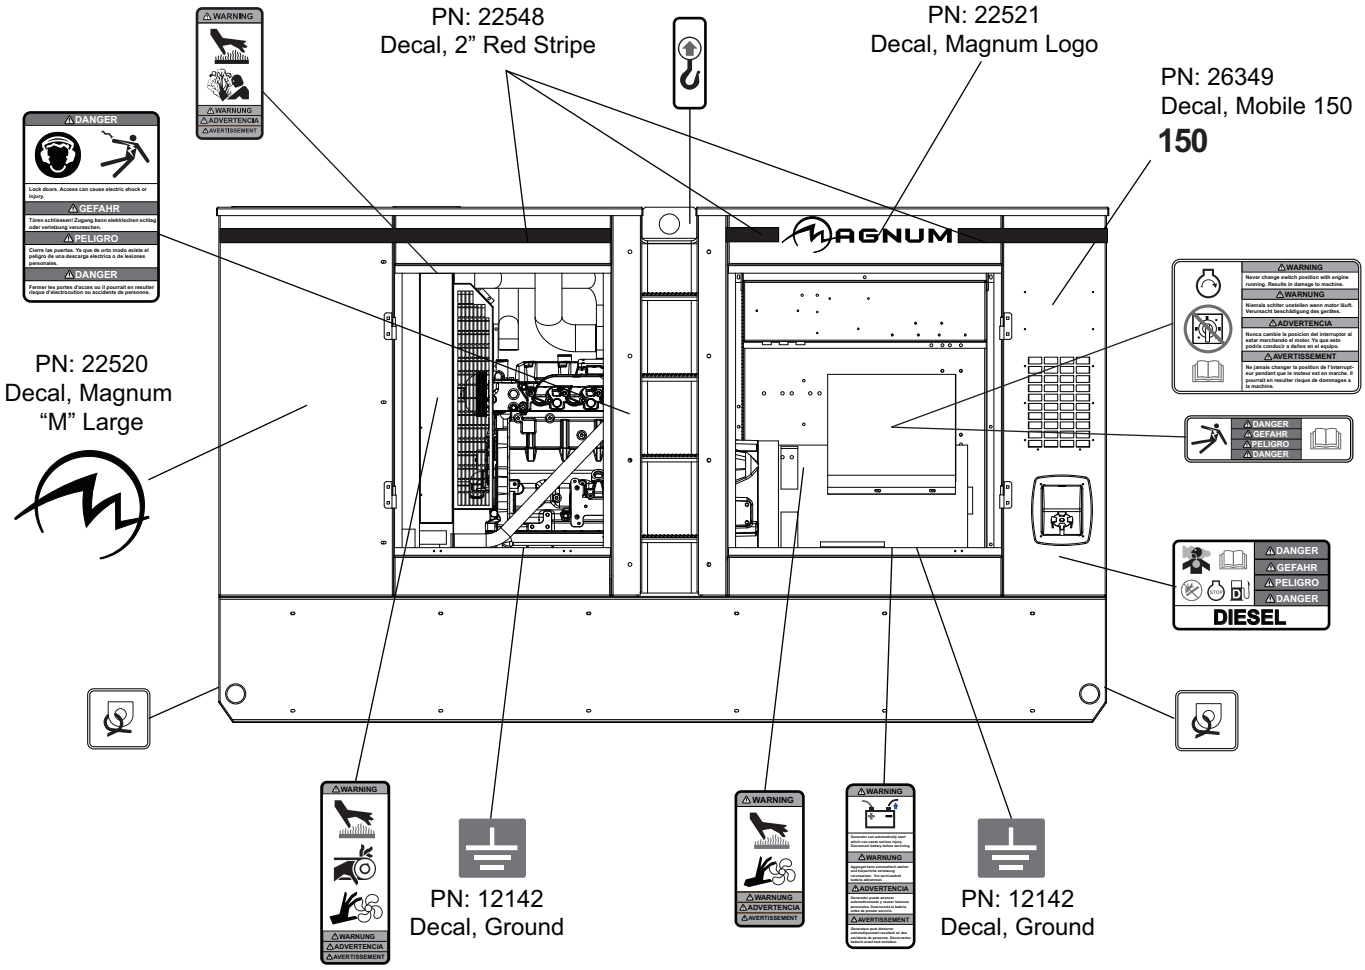

Located on tongue of trailered units.

Note: All safety and operating decals are located on decal sheet 23599, unless otherwise noted.

UNIT DECALS

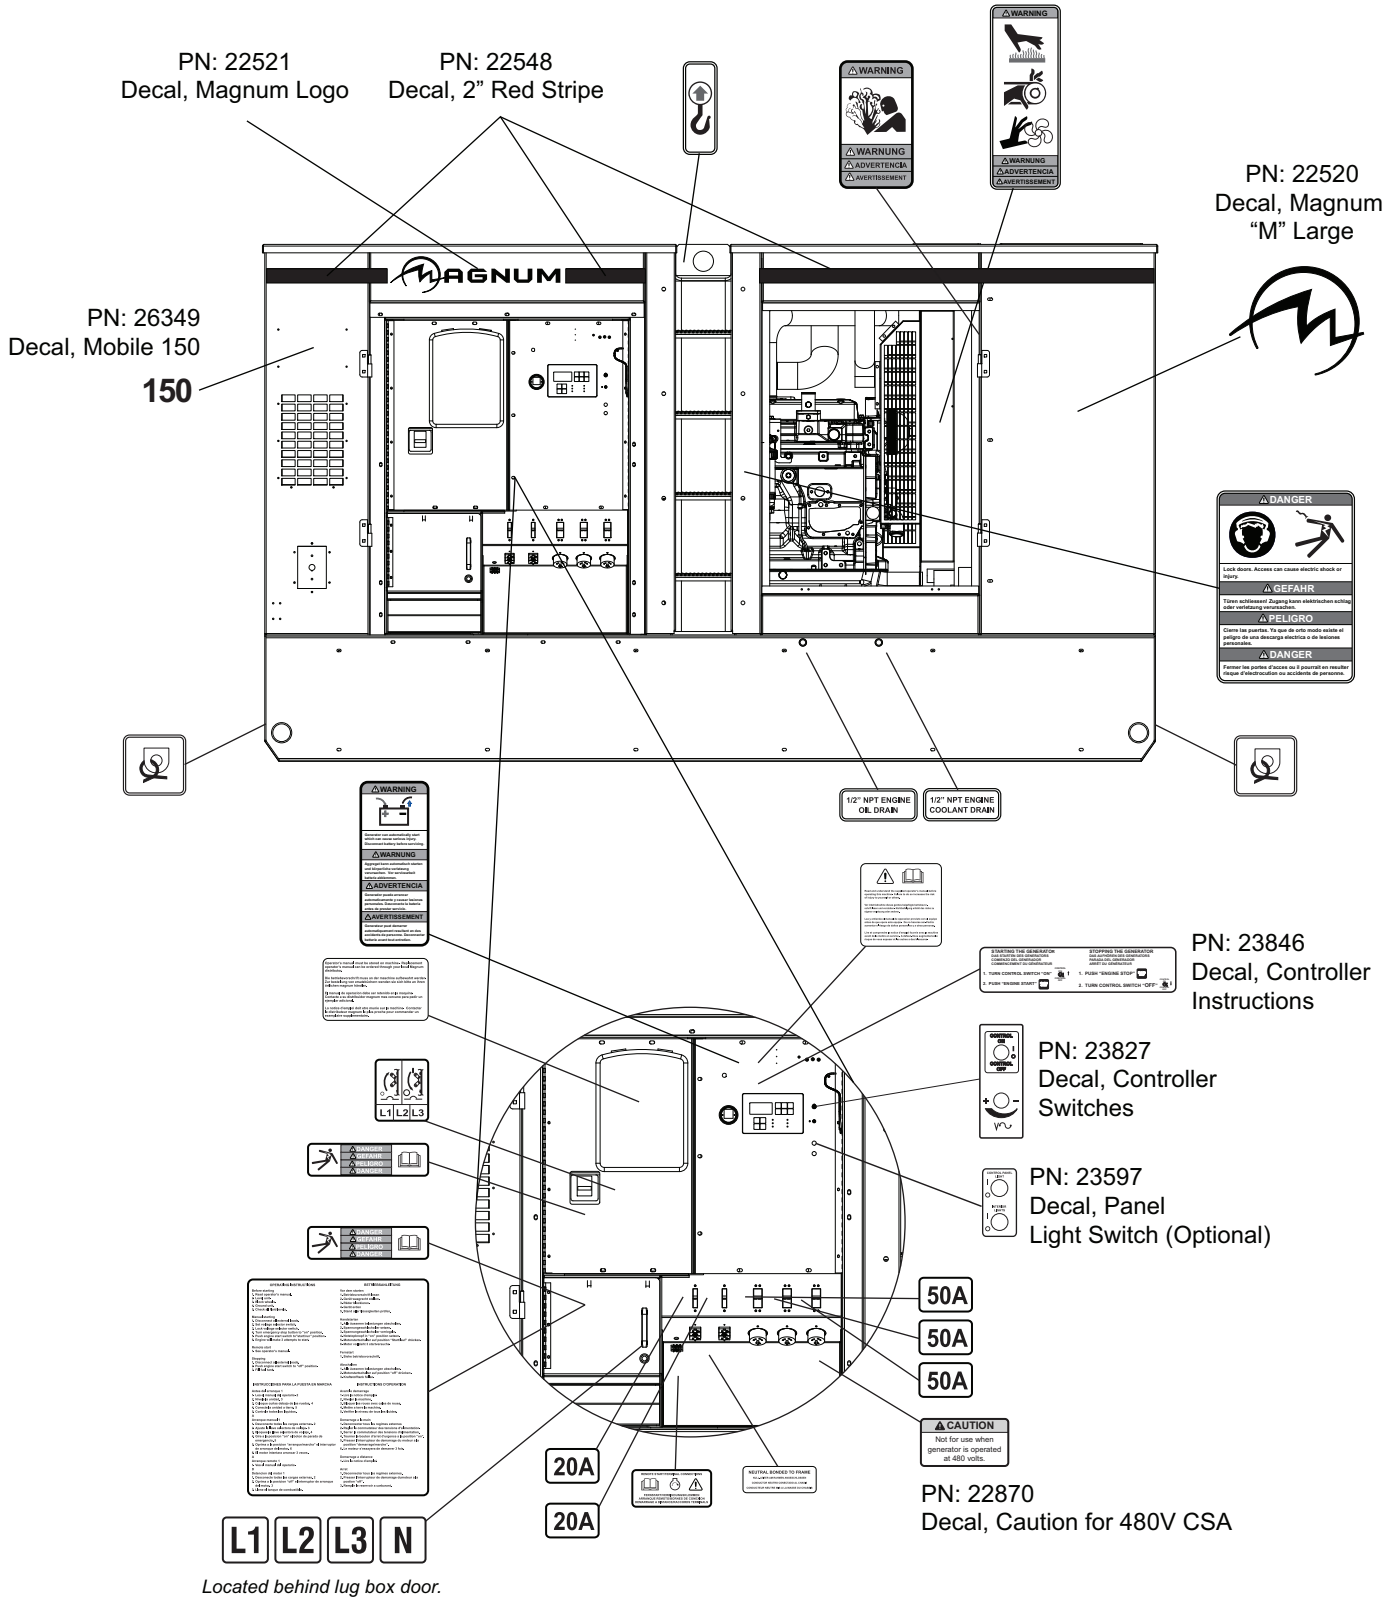

Note: All safety and operating decals are located on decal sheet 23599, unless otherwise noted.

LUG BOX DOOR

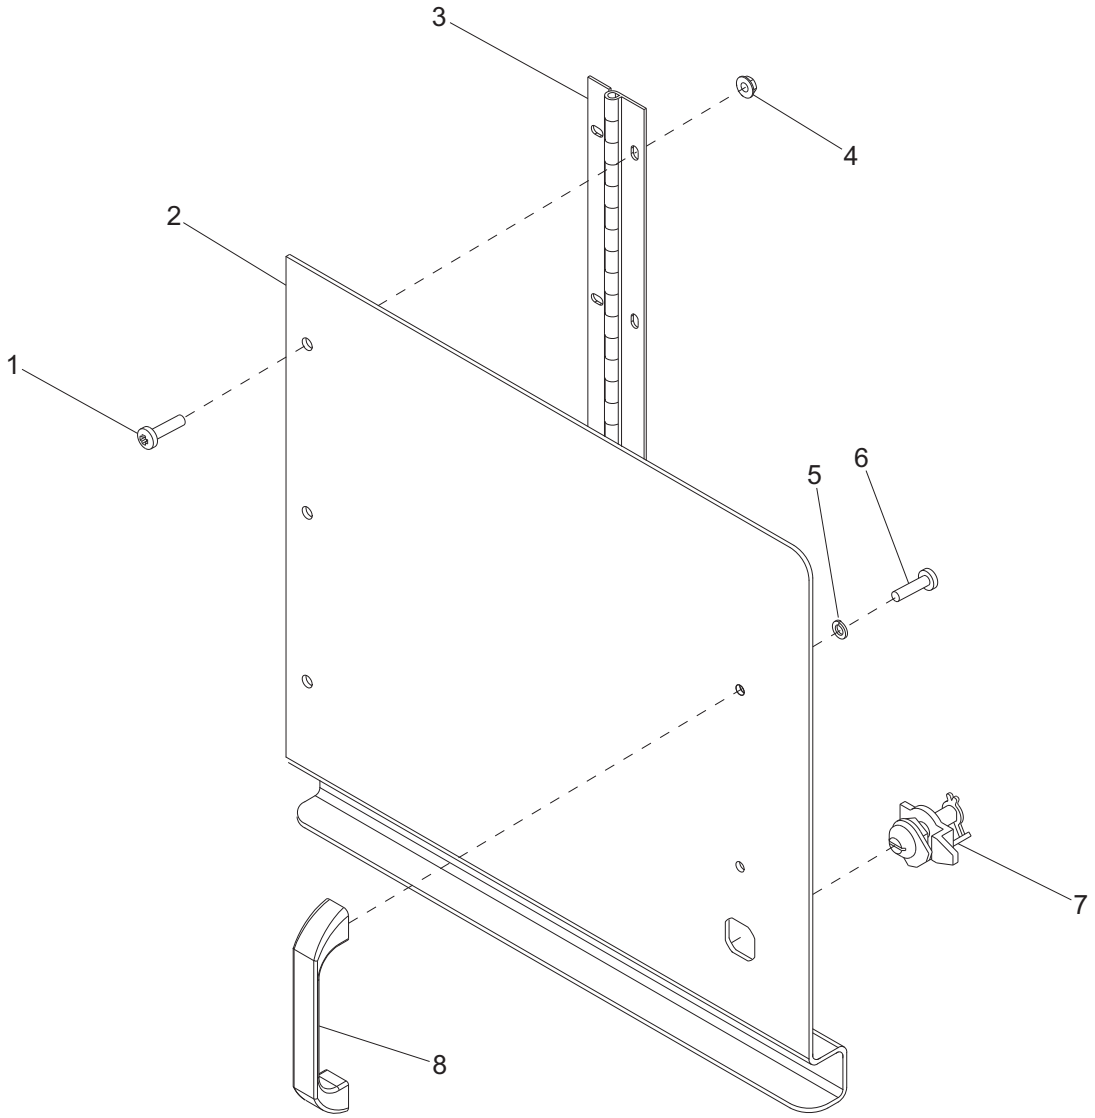

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	60398	3	Screw, 10-32X.500 pan phil	
2	28570W	1	Door, lug box	
3	22018	1	Hinge, continuous - 10.25	
4	61045	3	Nut, 10-32 ser flg	
5	60252	2	Washer, split lock #10	
6	60068	2	Screw, 10-24X.500 pan phil	
7	12547	1	Assembly, cam lock, qrtr turn	
8	18893	1	Handle, lug door	

LUG PLATE ASSEMBLY

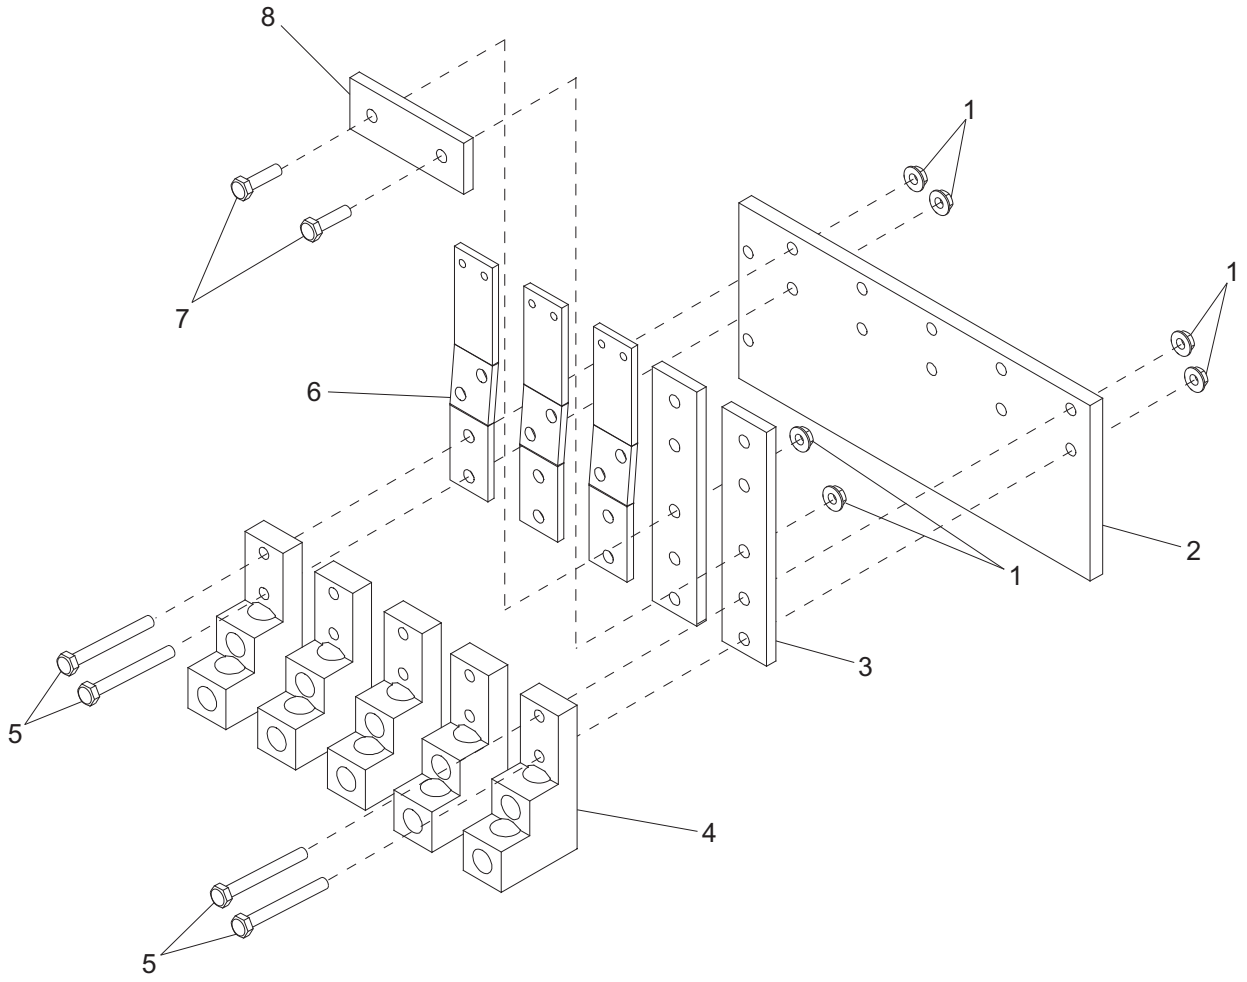

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	60145	12	Nut, .375-16 ser flg lock	
2	28568	1	Panel, lug box glastic	
3	28584	2	Bus, lug extension	
4	65890	5	Lug, terminal dual	
5	60478	10	Screw, .375-16X2.000 hx hd	
6	28567	3	Bus, main breaker out	
7	60205	2	Screw, .375-16X1.000 std hex	
8	28585	1	Bus, grounding link	

LUG BOX ASSEMBLY

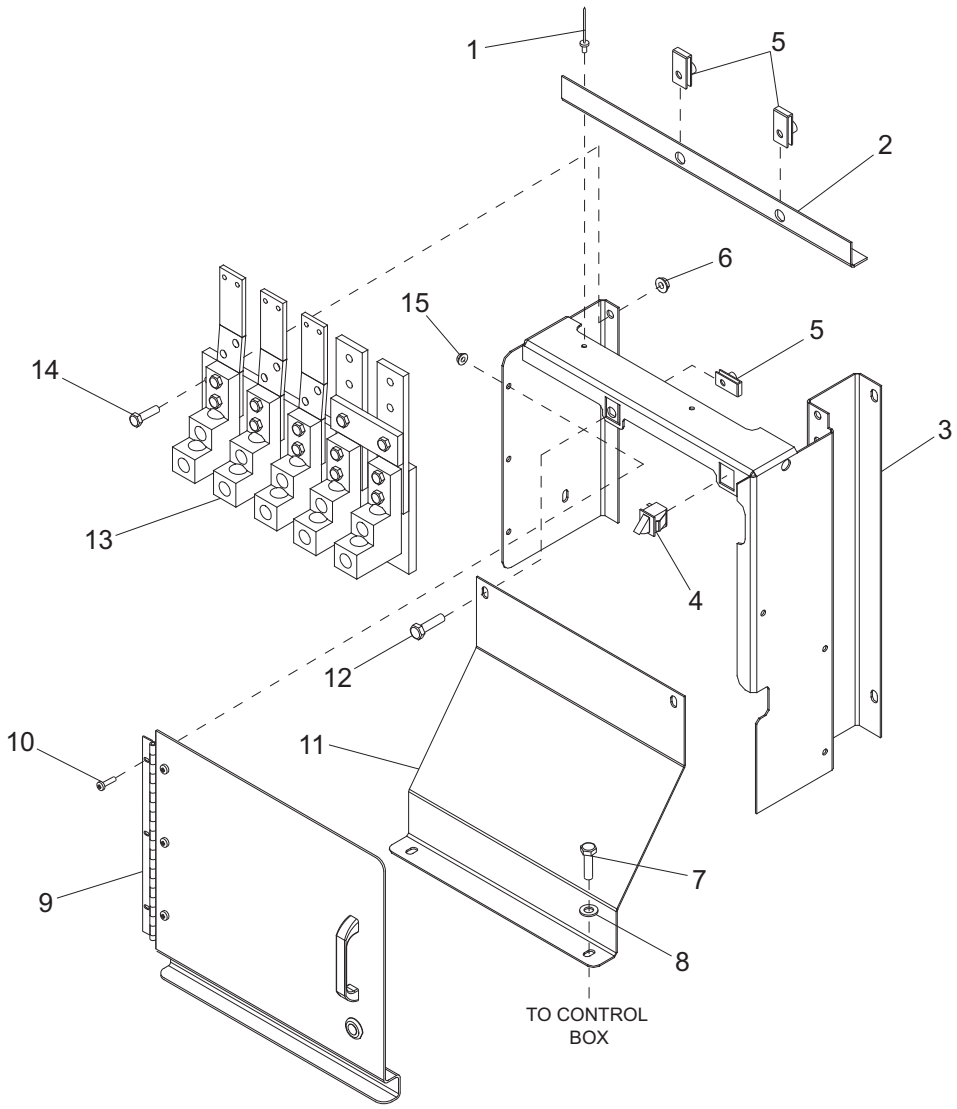

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	60268	2	Rivet, .188 dia	
2	28583W	1	Angle, top lug box	
3	28561W	1	Box, lug enclosure	
4	12632	2	Switch, trigger safety	N.O. & N.C.
5	60505	4	Nut, U-clip, .312-18	
6	60145	2	Nut, .375-16 ser flg lock	
7	60507	2	Screw, .312-18X1.000 hx hd	
8	60452	2	Washer, flat .313 - bonded rubber	
9	Page 8	1	Assembly, lug door	
10	60398	3	Screw, 10-32X.500 pan phil	
11	28569W	1	Panel, lug box outlet	
12	60168	2	Screw, .312-18X.750 hx hd	
13	Page 9	1	Assembly, lug plate	
14	60205	2	Screw, .375-16X1.000 hx hd	
15	61045	3	Nut, 10-32 ser flg	

LEFT CONTROL PANEL ASSEMBLY

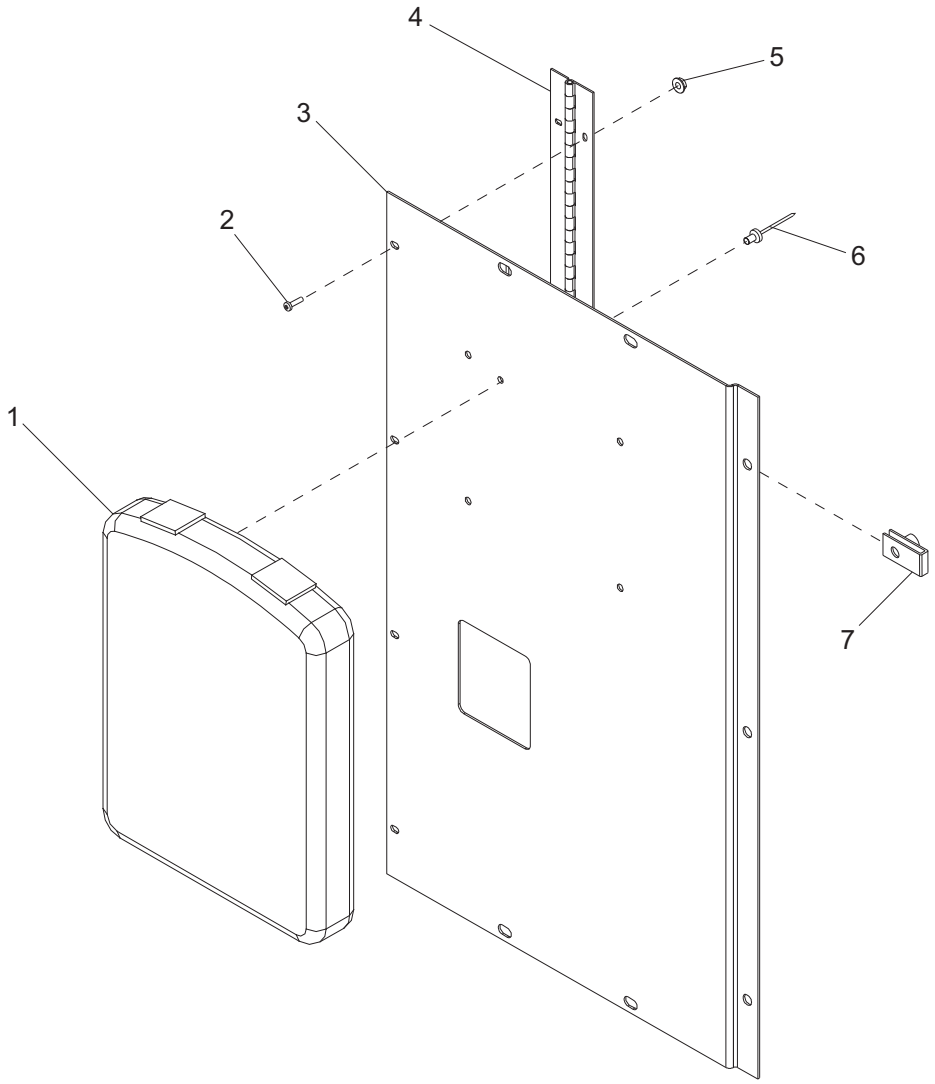

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	18715	1	Holder, manual	
2	60398	4	Screw, 10-32X.500 pan phil	
3	28564W	1	Panel, control left	
4	22208	1	Hinge, left control panel	
5	61045	4	Nut, 10-32 sflg G5	
6	60473	4	Rivet, .188, closed end, alum.	
7	60505	3	Nut, U-clip, .312-18	

RIGHT CONTROL PANEL ASSEMBLY

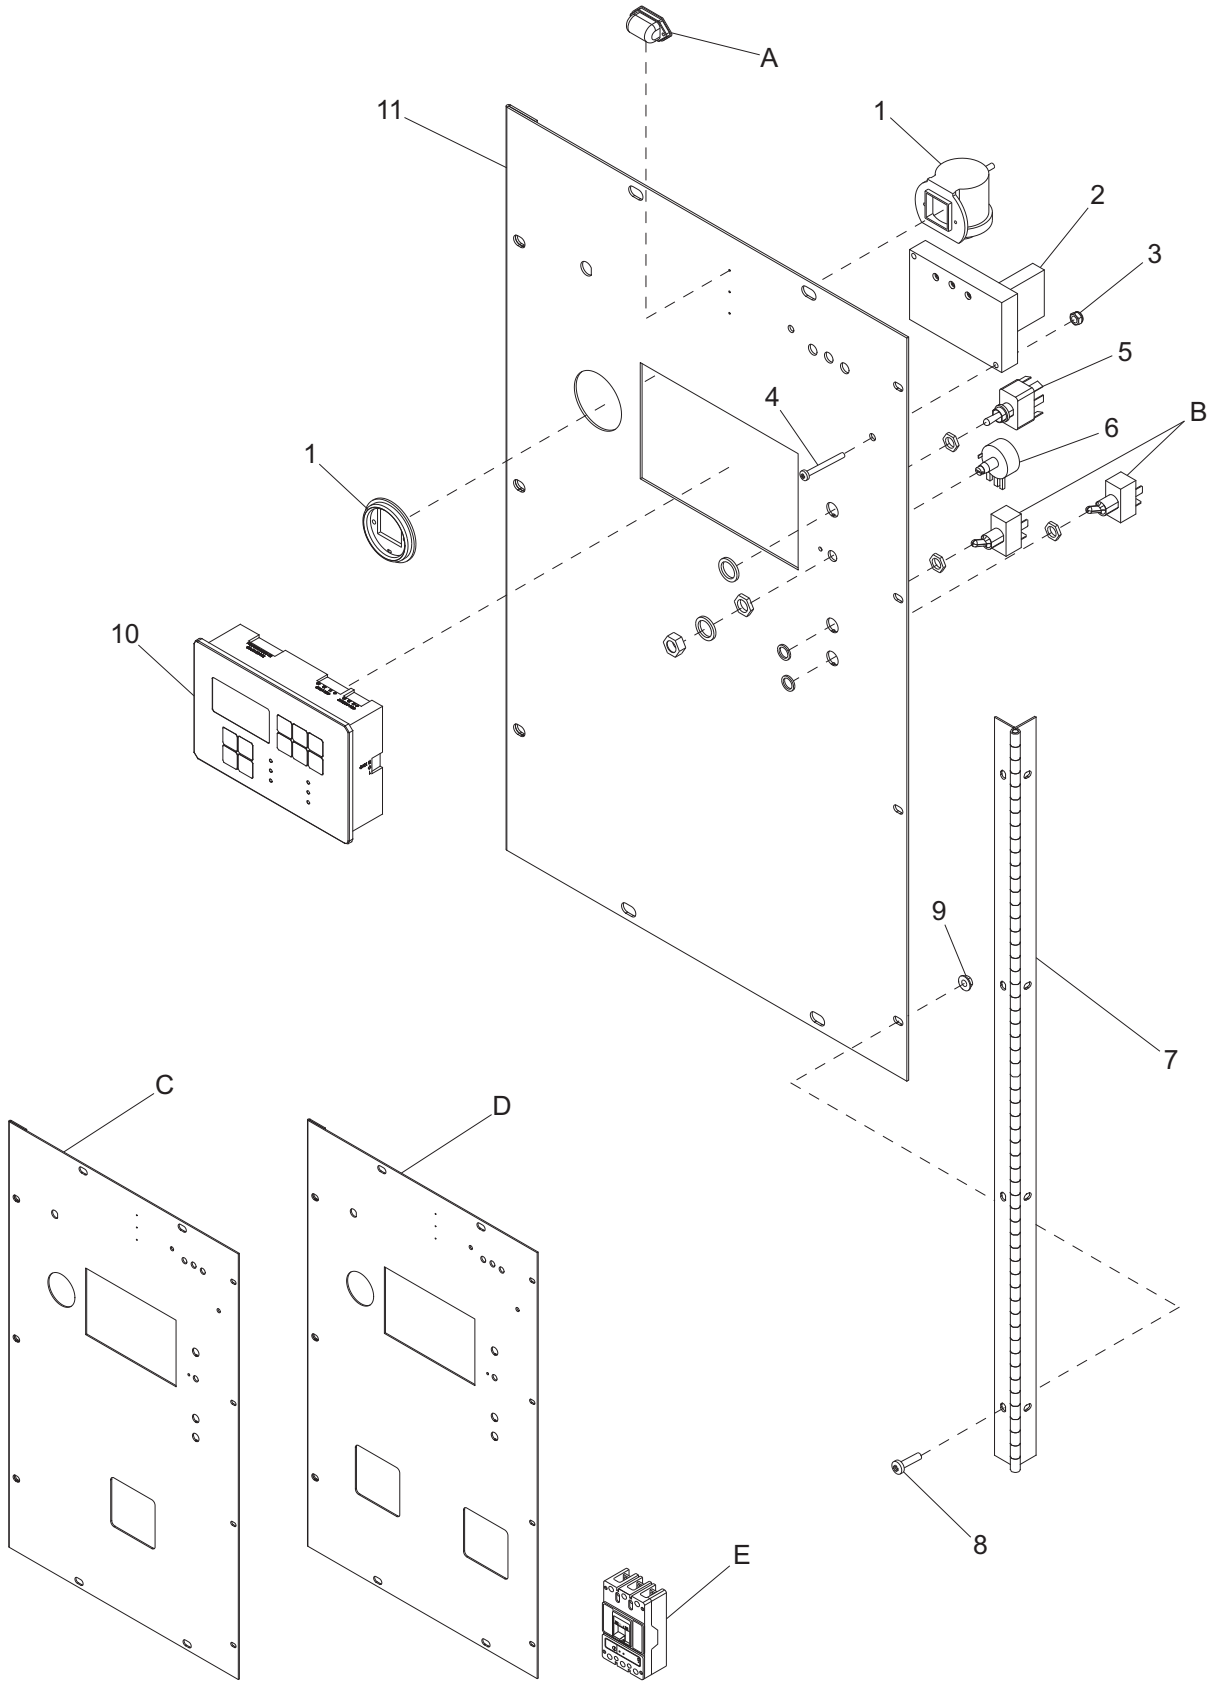

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	18609	1	Kit, air filter minder	
2	18556	1	Regulator, voltage - SE 350	
3	60270	2	Nut, 8-32 nylock	
4	60525	2	Screw, 8-32X1.500 pan phil	
5	25077	1	Switch, toggle - 20A VAC	
6	26229	1	Kit, voltage adjustment pot.	
7	22208	1	Hinge, control panel - 28”	
8	60398	4	Screw, 10-32X.500 pan phil	
9	61045	4	Nut, 10-32 ser flg G5	
10	66189	1	Controller, eng/gen	
11	28634W	1	Panel, digital control	
--	18934	1	Guard, potentiometer	Not shown
A	23025	1	Light, interior control panel	Option
B	25077	2	Switch, toggle	Option
C	28631W	1	Panel, dig. cont. - single brkr	Option
D	28633W	1	Panel, dig. cont. - dual brkr	Option
E	65352	1 or 2	Breaker, 450A, 3 pole	Option

CONTROL BOX ASSEMBLY

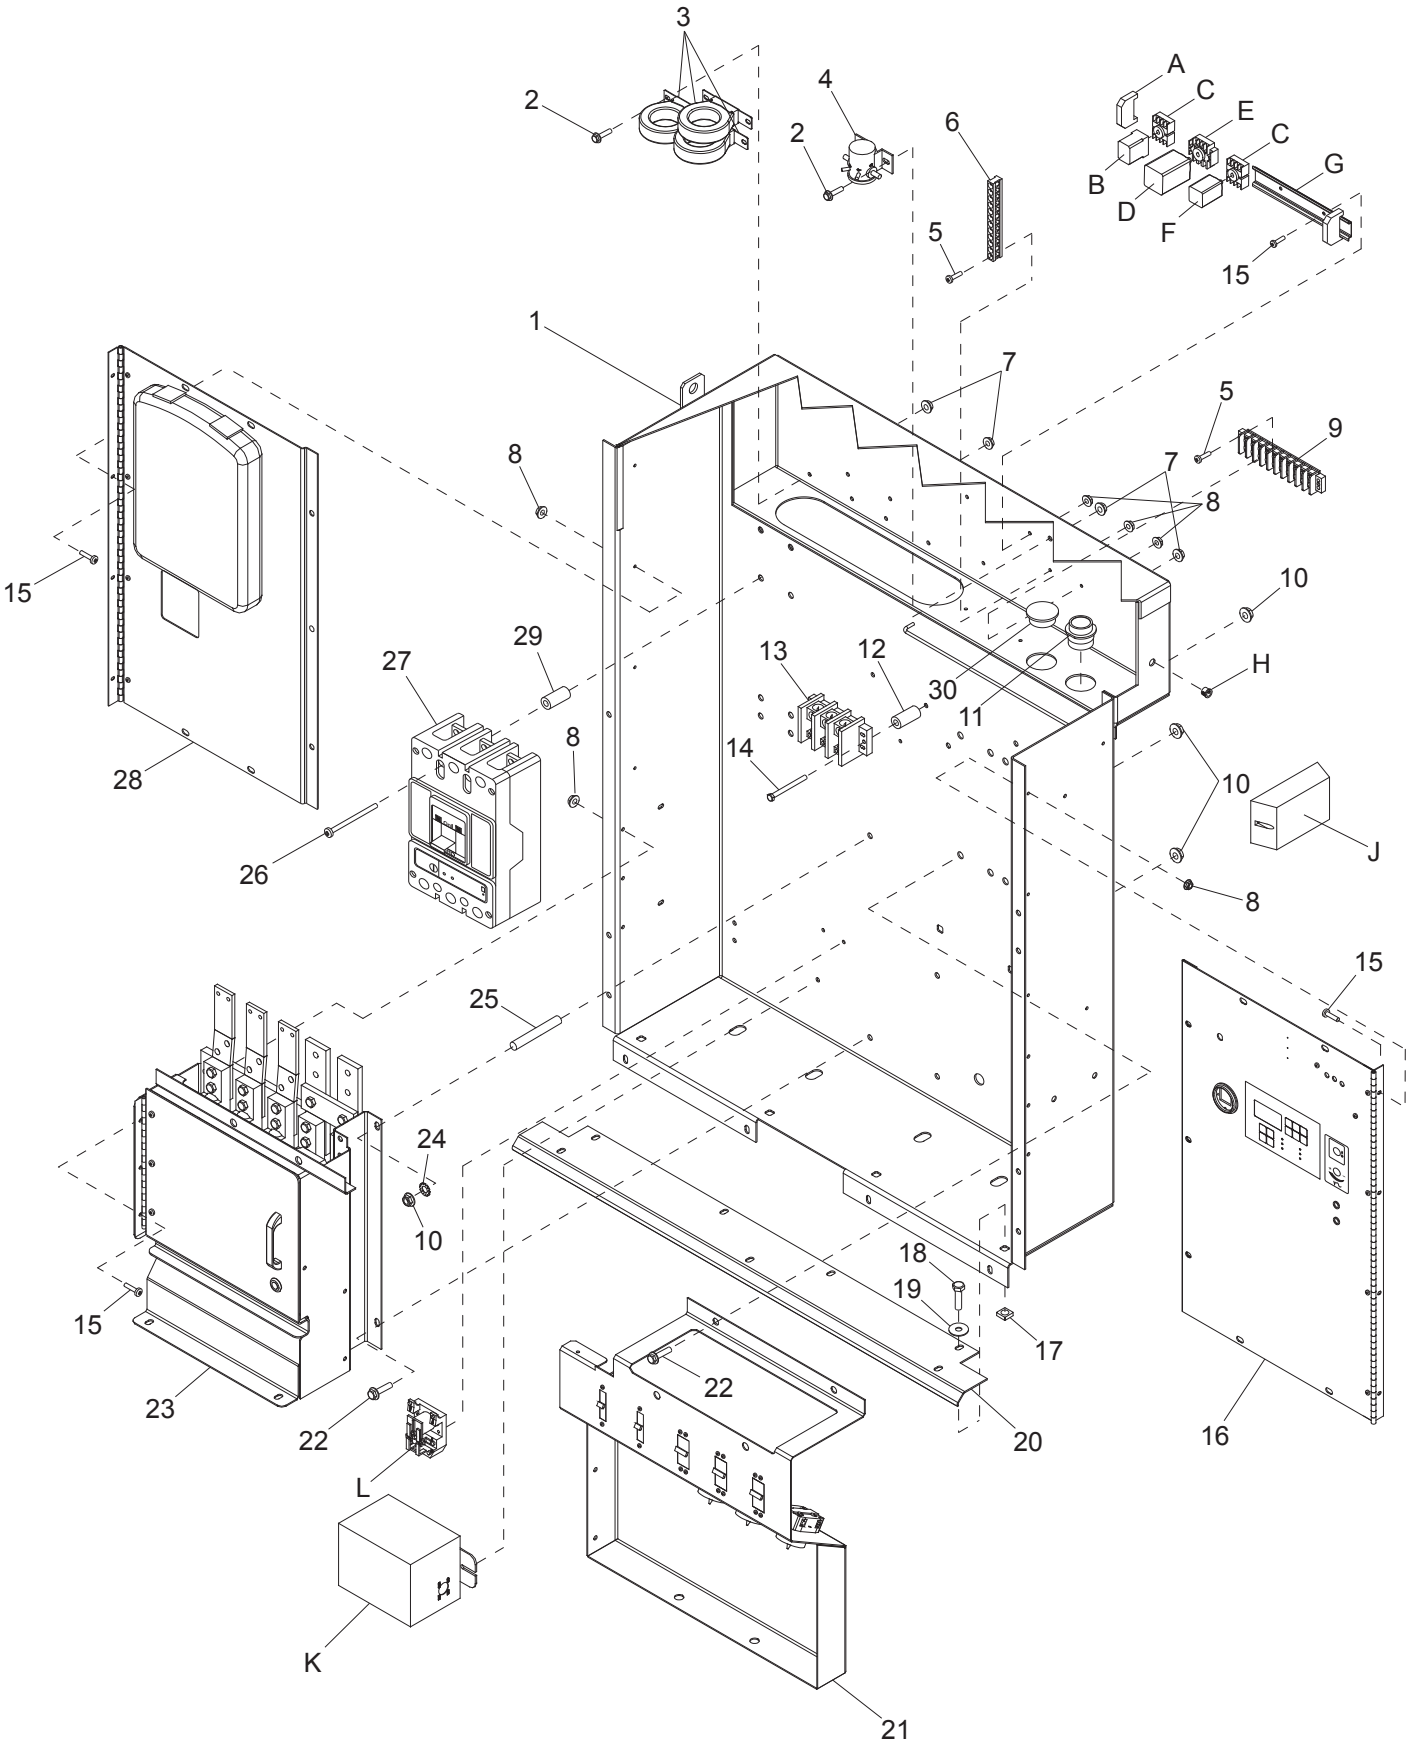

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	28573B	1	Weldment, control box	
2	60175	8	Screw, .250-20X.500 sflg hex	
3	65444	3	Transformer, current	
4	18081	1	Relay, ignition solenoid	
5	60062	4	Screw, 10-32X.750 pan phil	
6	14204	1	Kit, ground bar	
7	60161	16	Nut, .250-20 sflg	
8	61045	17	Nut, 10-32 sflg	
9	14203	1	Block, terminal - 10 pos.	
10	60020	5	Nut, M8-1.25 sflg lock	
11	65309	1	Connector, 21 pin, deutsch	
12	28581B	2	Spacer, breaker 1.5" long	
13	65356	1	Block, terminal - 3 pole	
14	60259	2	Screw, .250-20X2.500 std hex	
15	60398	13	Screw, 10-32X.500 pan phil	
16	Page 12	1	Assembly, right control panel	
17	15425	4	Nut, .312-18 cage	
18	60507	4	Screw, .312-18X1.000 std hex	
19	60452	4	Washer, .313 flat	
20	28582B	1	Panel, cable guard	
21	Page 17	1	Assembly, outlet panel	
22	60114	3	Screw, M8-1.25X20 sflg hex	
23	Page 8	1	Assembly, lug box	
24	60069	1	Washer, M8 ext star	
25	18992	1	Stud, ground	
26	61117	4	Screw, .250-20X4.5” pan phil	
27	65353	1	Breaker, 600A, 3 pole	
28	Page 11	1	Assembly, left control panel	
29	28580B	4	Spacer, breaker 2.625" long	
30	19163	1	Fitting, bushing-.5” x .375”	
A	65674	2	Stop, 35MM din rail end	Option
B	65645	1	Relay, voltage sensing	Option
C	65644	2	Base, relay - 8 pos.	Option
D	65655	1	Relay, overload/current	Option
E	65646	1	Base, relay - 11 pos.	Option
F	65659	1	Relay, DPDT, 12VDC, 8 pos.	Option
G	66003	1	Rail, din 35MM X 6.00"	Option
H	19163	1	Fitting, bushing - .5” x .375”	Option
J	65326	1	Charger, battery	Option
K	21487	1	Transformer, 1-phase 500VA	Option
L	65461	1	Relay, 30A DPDT 120VAC	Option

OUTLET PANEL ASSEMBLY

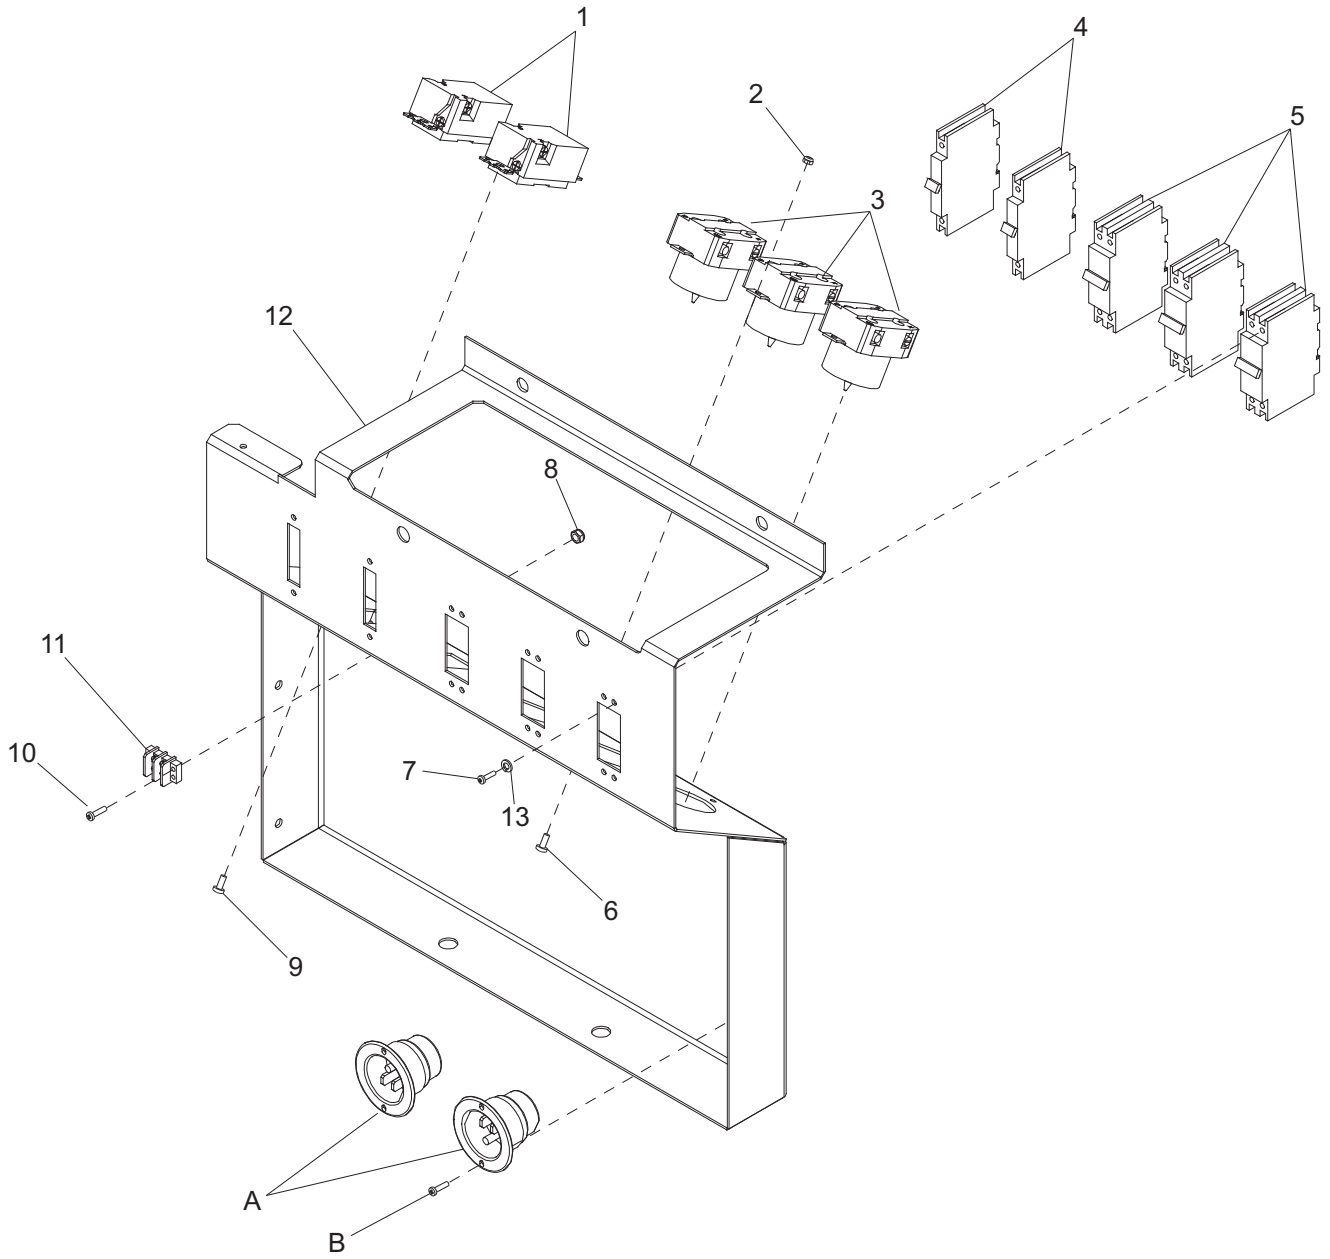

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	14130	2	Receptacle, 120V/20A GFI	
2	60457	6	Nut, 10-24 nylock	
3	18089	3	Receptacle, 120/240V 50A	Twist lock
4	18091	2	Breaker, 20A, 240V, 1-pole	
5	18092	3	Breaker, 50A, 240V, 2-pole	
6	60068	6	Screw, 10-24X.500 pan phil	
7	60046	16	Screw, 6-32X.750 pan phil	
8	60270	2	Nut, 8-32 nylock	
9	60405	4	Screw, 6-32X.250 pan phil	
10	60526	2	Screw, 8-32X.500 pan phil	
11	18890	1	Block, terminal - 2 pos	
12	26355W	1	Panel, outlets	
13	60058	20	Washer, split lock #6	
A	65285	2	Receptacle, 120V/15A inlet	Option: Edison plug
B	60480	4	Screw, 10-16X.750 pan phil	Option: Edison plug

OUTLET PANEL ASSEMBLY FOR CAM LOCK OPTIONS

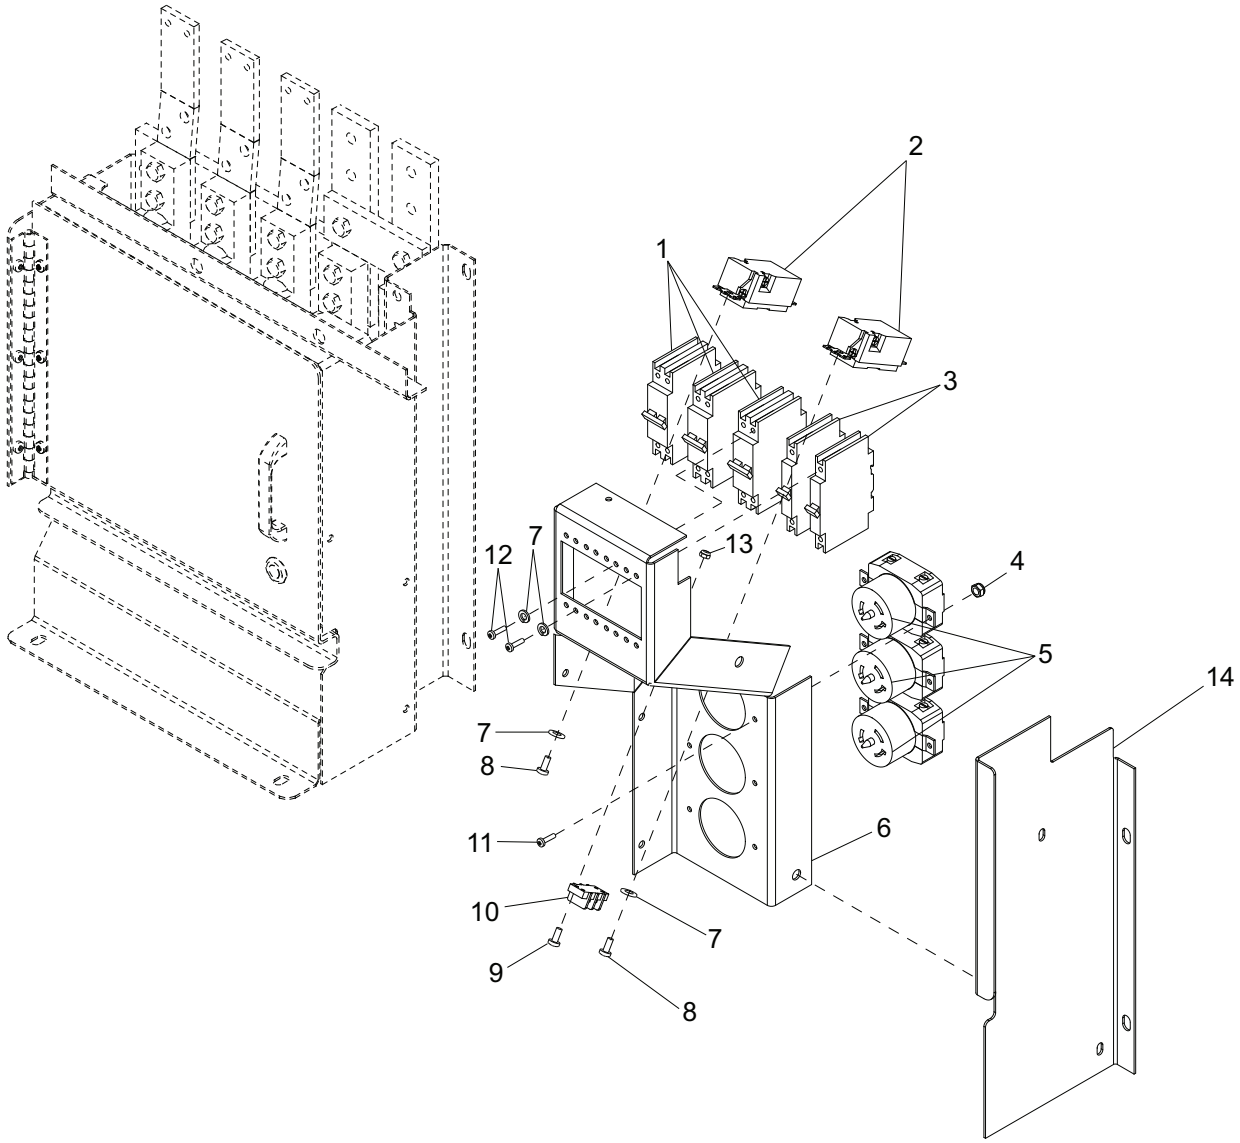

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	18092	3	Breaker, 50A, 240V, 2-pole	
2	14130	2	Receptacle, 120V/20A GFI	
3	18091	2	Breaker, 20A, 240V, 1-pole	
4	60457	6	Nut, 10-24 nylock	
5	18089	3	Receptacle, 120/240V 50A	Twist lock
6	28571W	1	Panel, outlets	
7	60058	20	Washer, split lock #6	
8	60405	4	Screw, 6-32X.250 pan phil	
9	60526	2	Screw, 8-32X.500 pan phil	
10	18890	1	Block, terminal - 2 pos	
11	60068	6	Screw, 10-24X.500 pan phil	
12	60046	16	Screw, 6-32X.750 pan phil	
13	60270	2	Nut, 8-32 nylock	
14	26161W	1	Panel, cam lock box	

CAM LOCK PANEL ASSEMBLY OPTIONS

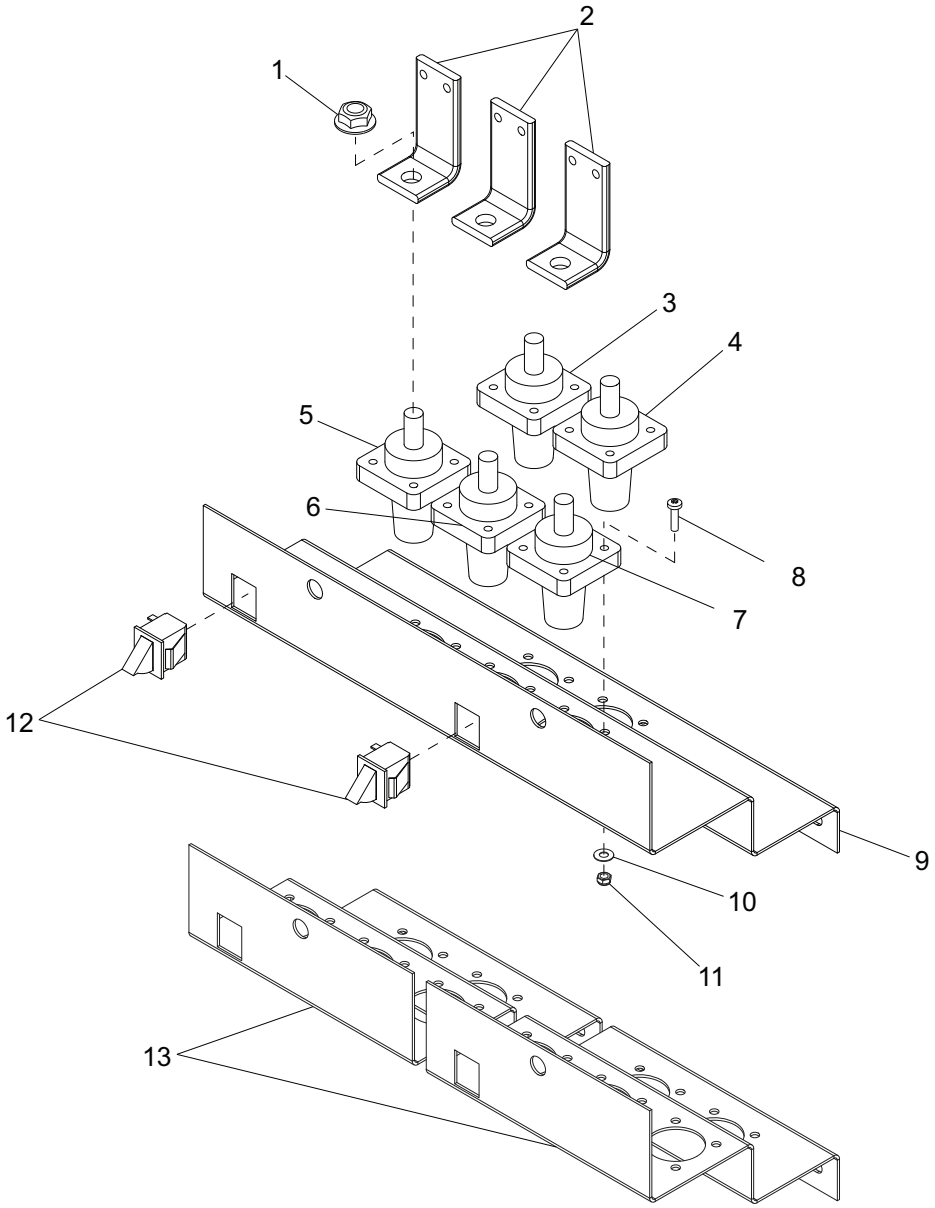

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	60098	3	Nut, .500-13 ser flg	
2	28565	3	Bus, cam lock mount	
3	65554	1	Connector, cam lock - white	
4	65555	1	Connector, cam lock - green	
5	65551	1	Connector, cam lock -black	
6	65552	1	Connector, cam lock - red	
7	65553	1	Connector, cam lock - blue	
8	60488	20	Screw, 8-32X.750 pan phil	
9	28591W	1	Panel, cam lock mounting	Single cam
10	60237	20	Washer, #10 flat .495/.036	
11	60061	20	Nut, 10-32 nylk G5	
12	12632	2	Switch, trigger safety	N.O. & N.C.
13	28574W	2	Panel, cam lock mounting	Dual cam

CAM LOCK DOOR ASSEMBLY (OPTIONAL)

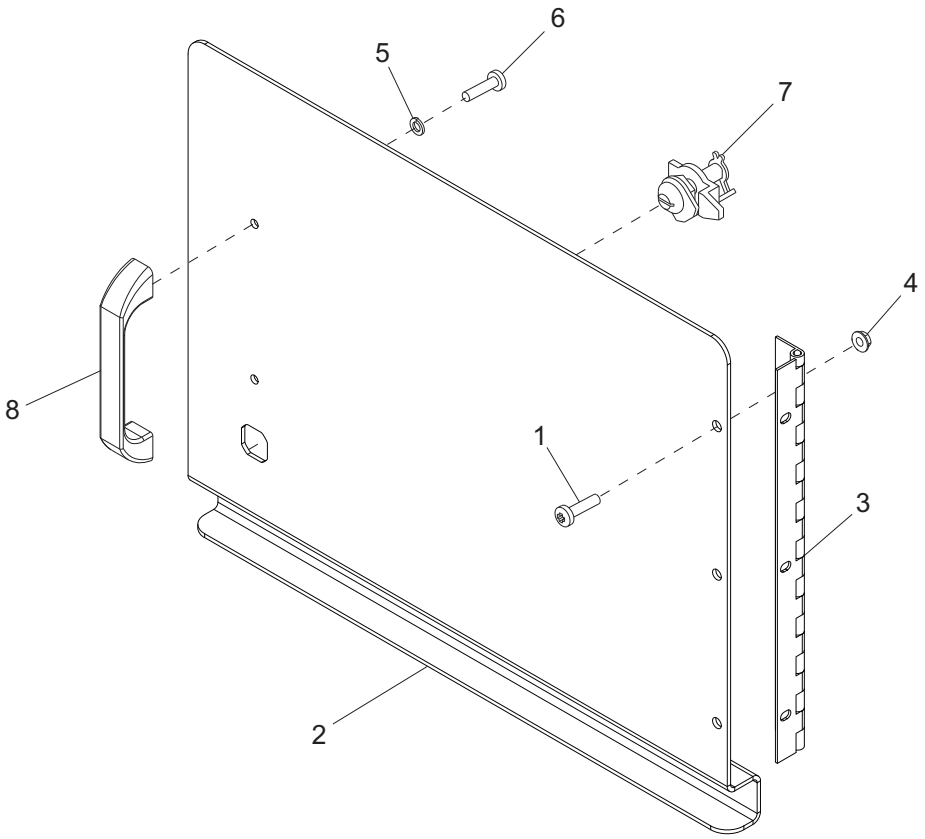

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	60398	3	Screw, 10-32X.500 pan phil	
2	28575W	1	Panel, cam lock door	
3	22018	1	Hinge, continuous - 10.25”	
4	61045	3	Nut, 10-32 ser flg	
5	60252	2	Washer, split lock #10	
6	60068	2	Screw, 10-24X.500 pan phil	
7	12547	1	Assembly, cam lock, qrtr turn	
8	18893	1	Handle, lug door	

AIR FILTER ASSEMBLY

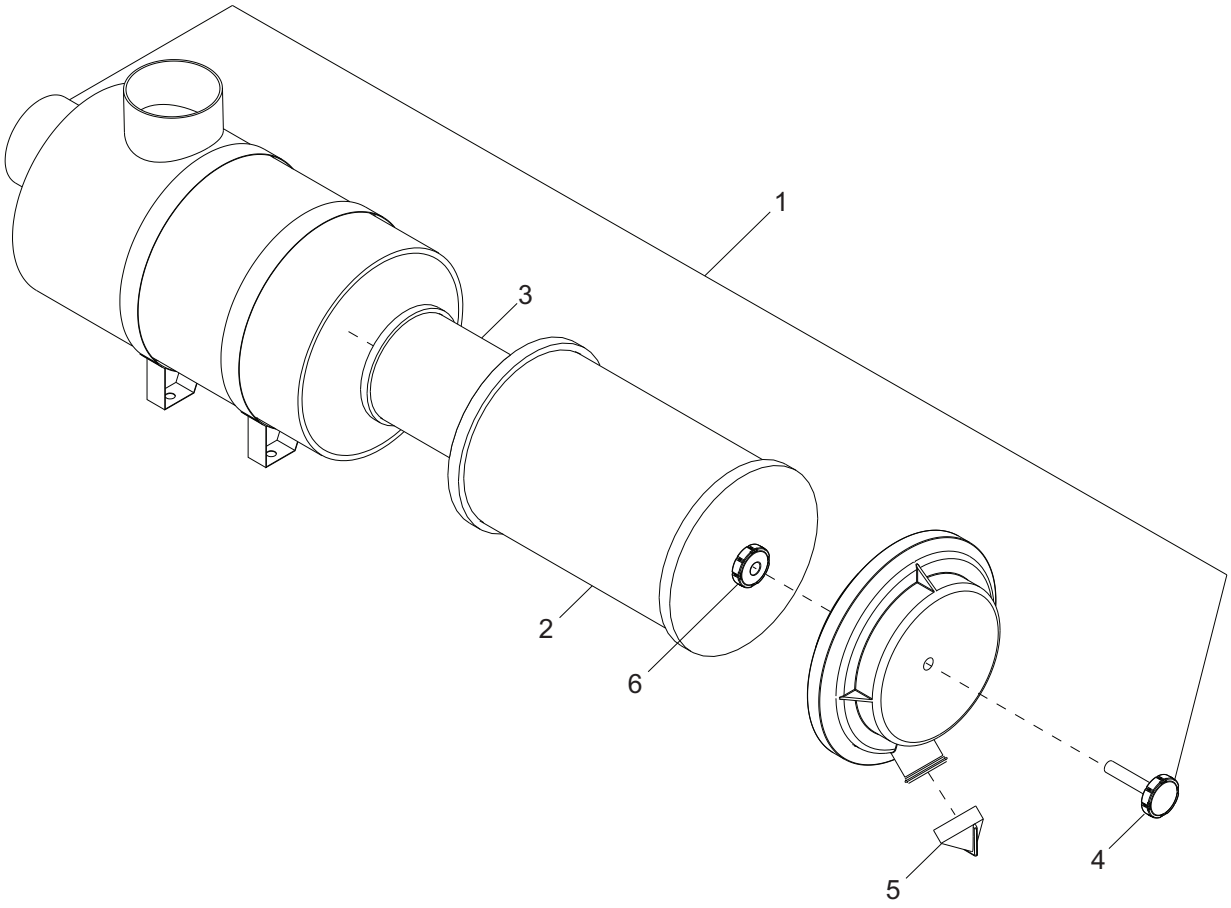

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22118	1	Assembly, air filter	
2	22328	1	Element, air filter	
3	27274	1	Element, air filter - safety	
4	26650	1	Knob, air filter housing	
5	22330	1	Cap, dust ejector	
6	22329	1	Knob, air filter housing	

EXHAUST SYSTEM ASSEMBLY

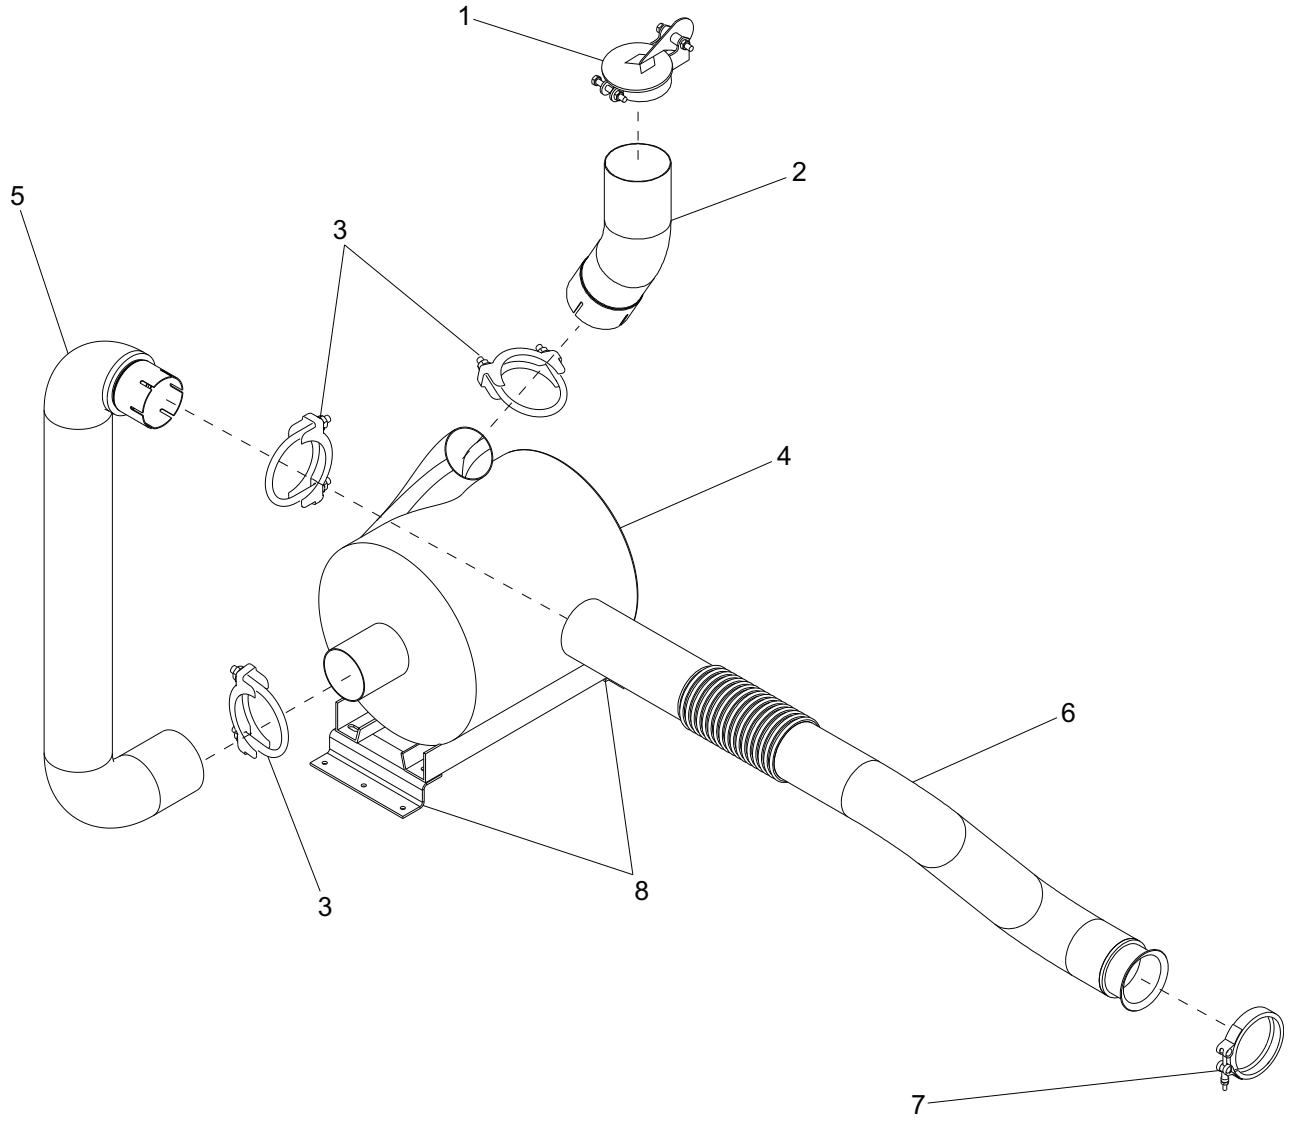

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	21090	1	Cap, rain 4”	
2	21851	1	Pipe, exhaust up - 4”	
3	18822	3	Clamp, muffler 4”	
4	21848	1	Muffler, 4”	
5	22154	1	Pipe, exhaust - down	
6	26381	1	Pipe, exhaust	
7	18820	1	Clamp, V-band - 4”	
8	21869B	2	Bracket, muffler mounting	

ENGINE MOUNT ASSEMBLY

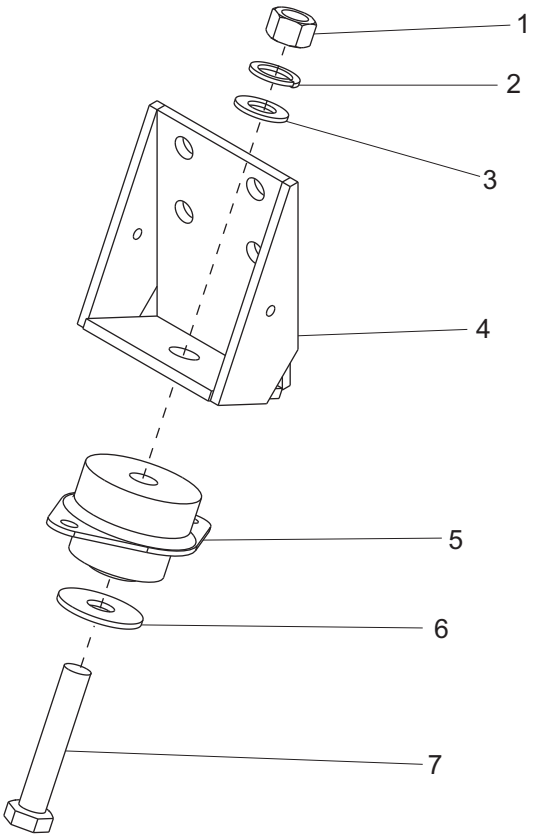

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	60520	1	Nut, .625 - 11 hx hd	
2	60522	1	Washer, .625 split lock	
3	60521	1	Washer, .625 flat	
4	19712B	1	Weldment, engine mount	
5	18084	1	Shock mount, rubber	
6	18086	1	Washer, snubber	
7	60519	1	Screw, .625 - 11 x 3.5” hx hd	

FUEL LEVEL SENDING UNIT ASSEMBLY

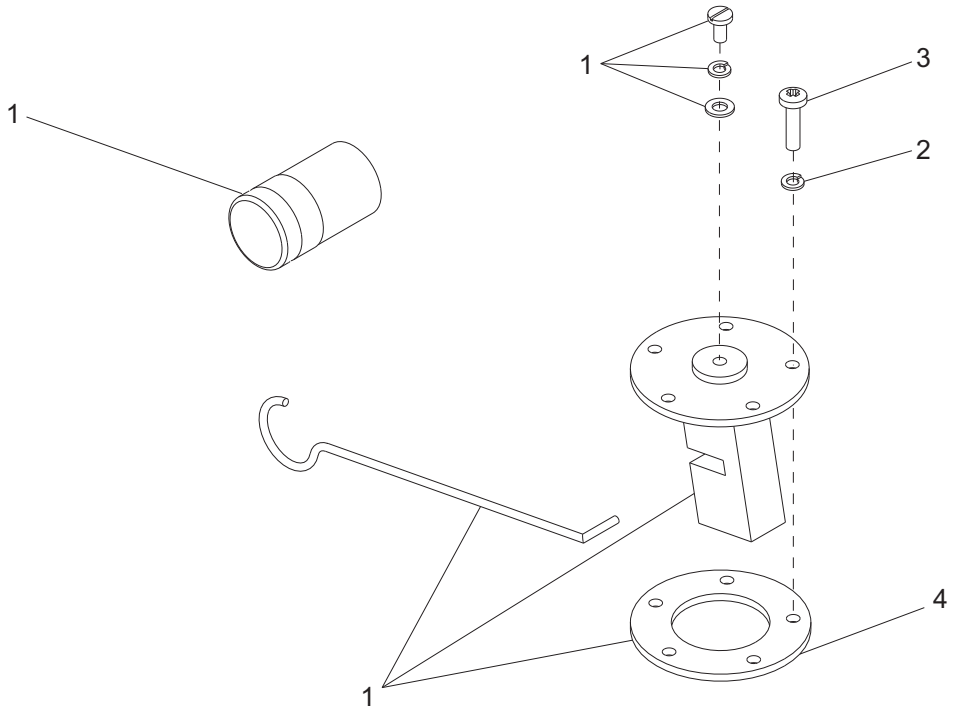

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	21206	1	Sender, fuel	
2	60252	5	Washer, split lock #10	
3	60062	5	Screw, 10-32X.750 pan phil	
4	22323	1	Gasket, fuel sending unit	

FUEL TANK ASSEMBLY

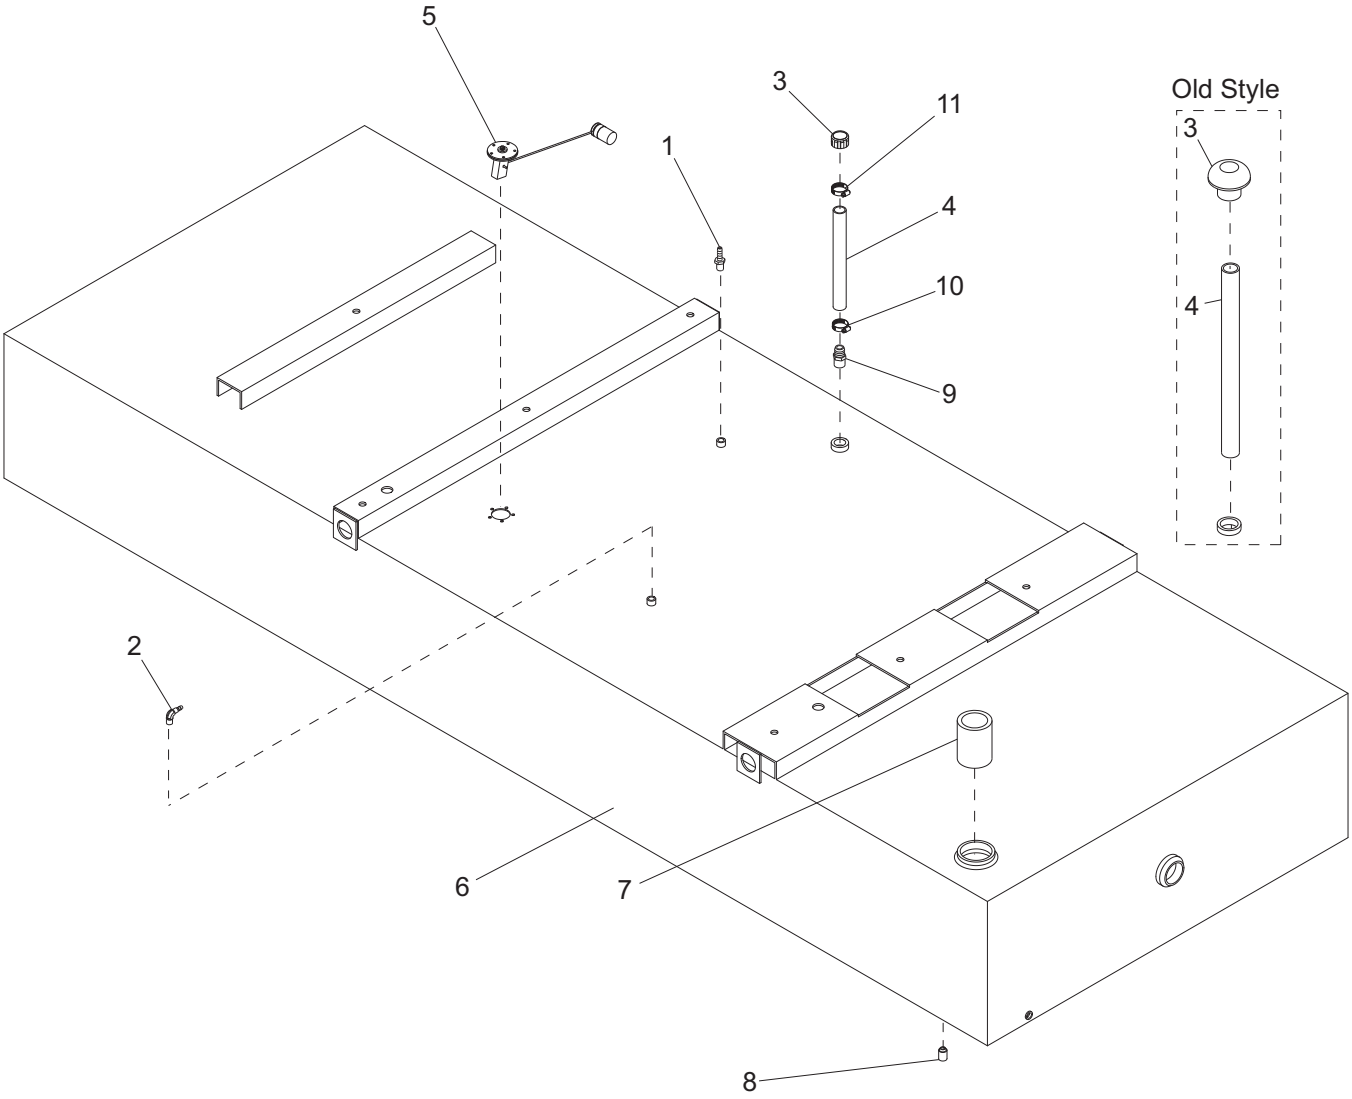

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	19180	1	Fitting, hose barb - .375MNPT x .312	
2	15693	1	Fitting, 90° barb brs - .250NPT x .312	
3	19824	1	Vent, 1 1/2” NPT	Old style
--	26379	1	Vent, plastic fuel - 1”	New style
4	19823	1	Nipple, pipe 1 1/2” NPTX24”	Old style
--	50019	4ft.	Hose, fuel - 1” SAE 20R3 D-2	New style
5	Page 23	1	Assembly, fuel level sender	
6	22104B	1	Tank, fuel - 350 gallon	
7	19778	1	Nipple, pipe - 2.00 NPT X 4”	
8	18394	1	Plug, .500NPT X hex socket	
9	21451	1	Fitting, Strt - 1.00MNPT x 1.00 barb	New style
10	19338	1	Clamp, hose - SAE16	New style
11	62040	1	Clamp, hose - 1.5 fuel hose crimp styel	New style

EXTENDED RUN OPTIONS

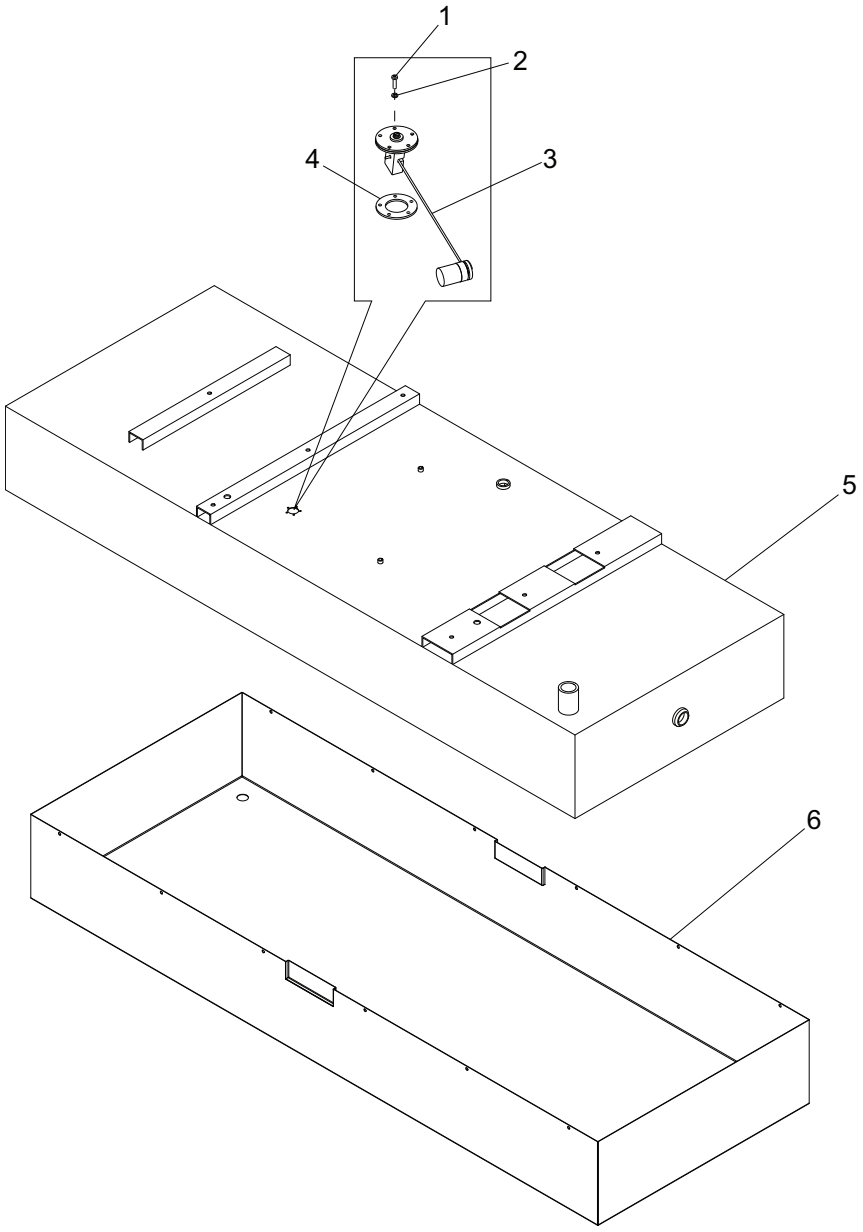

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	60062	5	Screw, 10-32x.750 pan phil	
2	60252	5	Washer, split lock #10	
3	21206	1	Sender, fuel - 15.5-24"	
4	22323	1	Gasket, fuel sending unit	
5	22104B	1	Tank, fuel - 350 gal.	
6	23683B	1	Weldment, containment pan	

COOLING SYSTEM HOSES

Units built before SN: 0930664

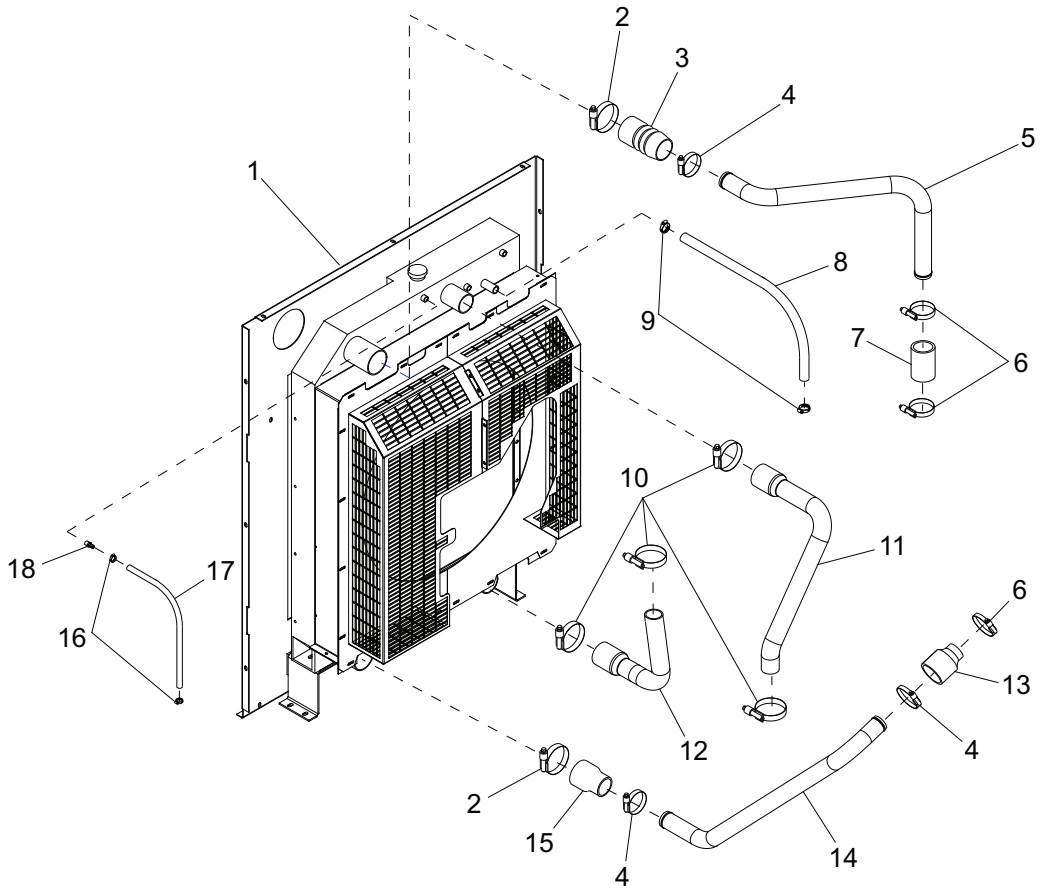

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	24948	1	Assembly, radiator	
2	60664	2	Clamp, hose - const. trq.	2.75-3.625
3	26159	1	Hose, C.A.C. - 2” - 3”X6.5”	
4	60666	3	Clamp, hose - const. trq.	2.25-3.125
5	24984	1	Pipe, C.A.C. in.	
6	60660	3	Clamp, hose - const. trq.	1.75-2.625
7	28540	1	Hose, C.A.C. - 2”X4” long	
8	50169	3 ft.	Hose, 1.00"	
9	19338	2	Clamp, hose - .68-1.50	
10	60316	4	Clamp, hose - 1.56-2.50	
11	24987	1	Hose, radiator - upper	
12	23507	1	Hose, radiator - lower	
13	22060	1	Hose, C.A.C. - 2” - 2.5”X4”	
14	22456	1	Pipe, C.A.C. out - 155-230	
15	22447	1	Hose, C.A.C. - 2.5” - 3”X5.5”	
16	19453	2	Clamp, hose - .37-.87	
17	50017	2.5 ft.	Hose, fuel - .250 ID 50 psi	
18	60999	1	Fitting, barb straight brass	.500MNPT x .312

COOLING SYSTEM HOSES

Units built after SN: 0930663

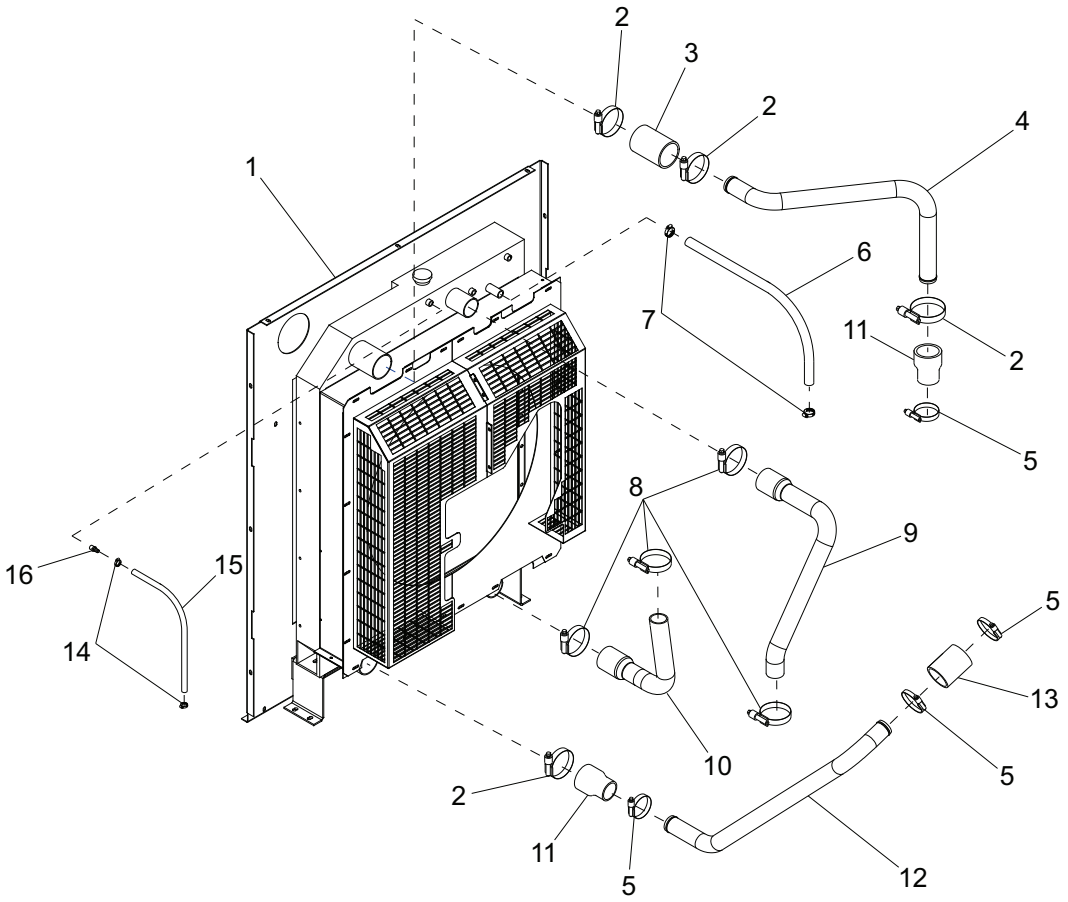

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	24948	1	Assembly, radiator	
2	60666	4	Clamp, hose - const. trq.	2.25-3.125
3	28541	1	Hose, C.A.C. - 2.5” x 4”	
4	22454	1	Pipe, C.A.C. inlet	
5	60660	4	Clamp, hose - const. trq.	1.75-2.625
6	50169	3 ft.	Hose, 1" Goodyear	
7	19338	2	Clamp, hose - .68-1.50	
8	60316	4	Clamp, hose - 1.56-2.50	
9	24987	1	Hose, radiator - upper	
10	23507	1	Hose, radiator - lower	
11	22060	2	Hose, C.A.C. - 2” - 2.5” x 4”	
12	22152	1	Pipe, C.A.C. outlet	
13	28540	1	Hose, C.A.C. - 2” x 4”	
14	19453	2	Clamp, hose - .37-.87	
15	50017	2.5 ft.	Hose, fuel - .250 ID 50 psi	
16	60999	1	Fitting, barb straight brass	.500MNPTX.312

GENERATOR TO ENGINE ASSEMBLY

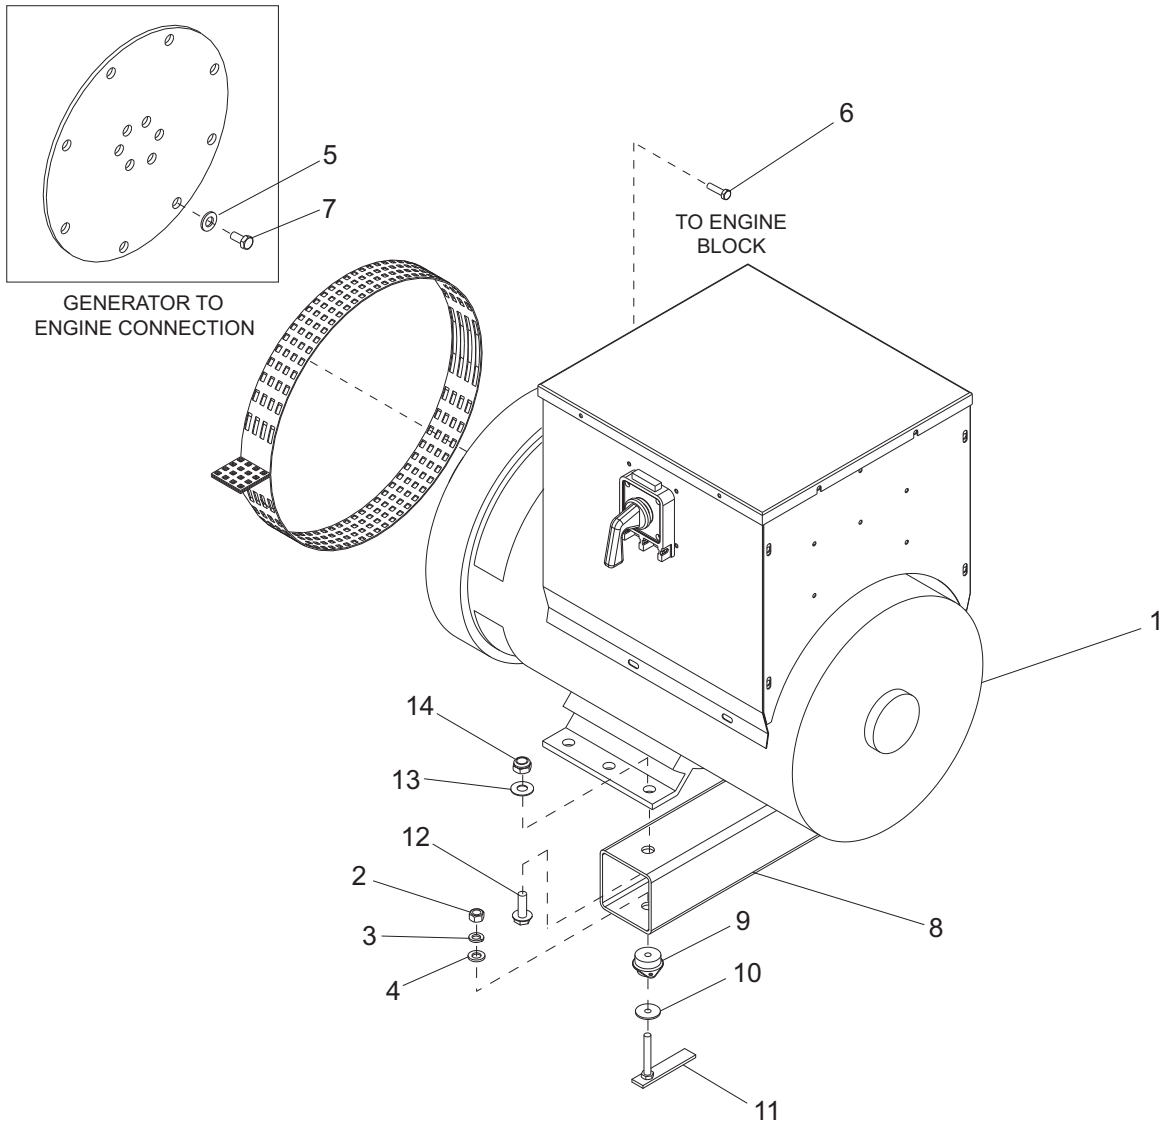

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22098	1	Generator, 363PSL1607	
2	60520	2	Nut, .625-11 hex	
3	60522	2	Washer, .625 split lock	
4	60193	2	Washer, flat M16	
5	60154	8	Washer, flat M10	
6	60179	12	Screw, .375-16X.750 hx hd	
7	60055	8	Screw, M10X1.25X35 hx hd	
8	26373B	2	Spacer, generator	
9	18084	2	Shock mount, rubber	
10	18086	2	Washer, snubber	
11	27168B	2	Anti-turn bolt .625 X 4.00	
12	61078	2	Screw, .625-11X2” flg hex	
13	60180	2	Washer, .625 flat 1.750/.120	
14	60240	2	Nut, .625-11 nylock G5	
--	23165	1	Generator, 432PSL6210	Option: Superstart - not shown

Note: *Engine and generator parts used in all Magnum Products LLC equipment carry the Original Equipment Manufacturer (OEM) warranty unless otherwise stated. OEM warranty parts must be purchased through an OEM dealer. Please contact Magnum Products LLC with questions.*

GENERATOR BOX ASSEMBLY

Standard Generator, 3-position voltage selector switch

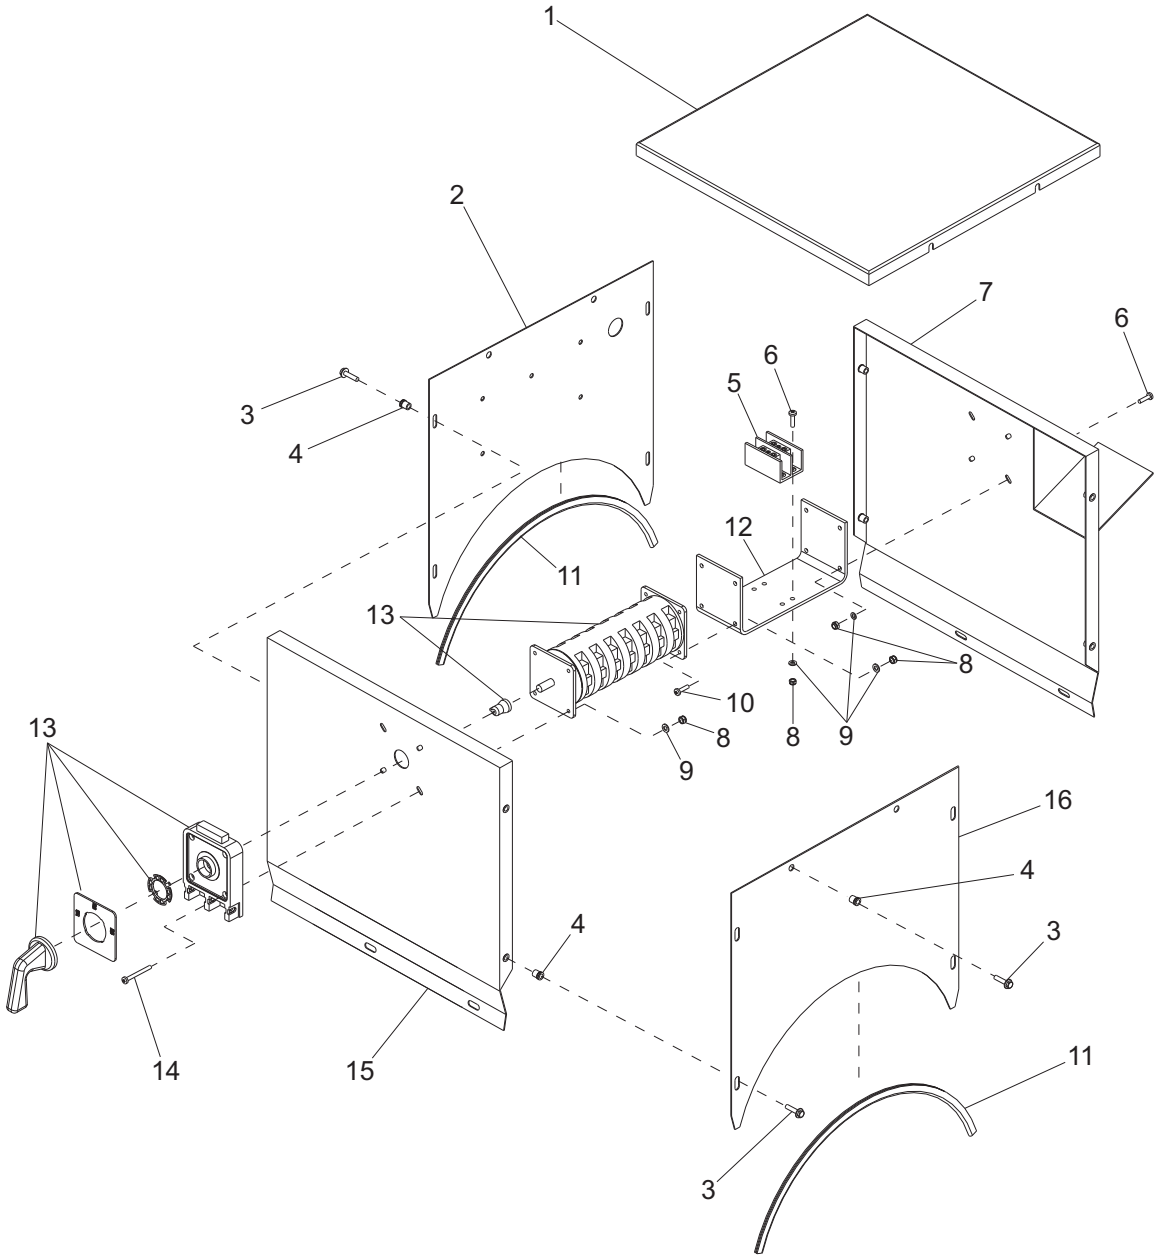

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	19761B	1	Panel, generator box top	
2	22287B	1	Panel, generator box front	
3	60115	12	Screw, M6X1.0X12 hx ser flg	
4	60023	12	Insert, M6 threaded	
5	65165	1	Block , terminal - 2 pole	
6	60156	8	Screw, M5X0.8X16 pan phil	
7	22288B	1	Panel, generator box right	
8	60038	16	Nut, M5 hx nylock	
9	60041	16	Washer, flat M5	
10	60037	4	Screw, M5X0.8X20 pan phil	
11	19046	2	Seal, generator box	
12	19772B	1	Bracket, phase switch	
13	18103	1	Switch, phase - 315A, 3-pos	
14	60167	4	Screw, M5X0.8X35 pan phil	
15	19776B	1	Panel, generator box left	
16	18769B	1	Panel, generator box rear	

GENERATOR BOX ASSEMBLY

Standard Generator, 4-position voltage selector switch

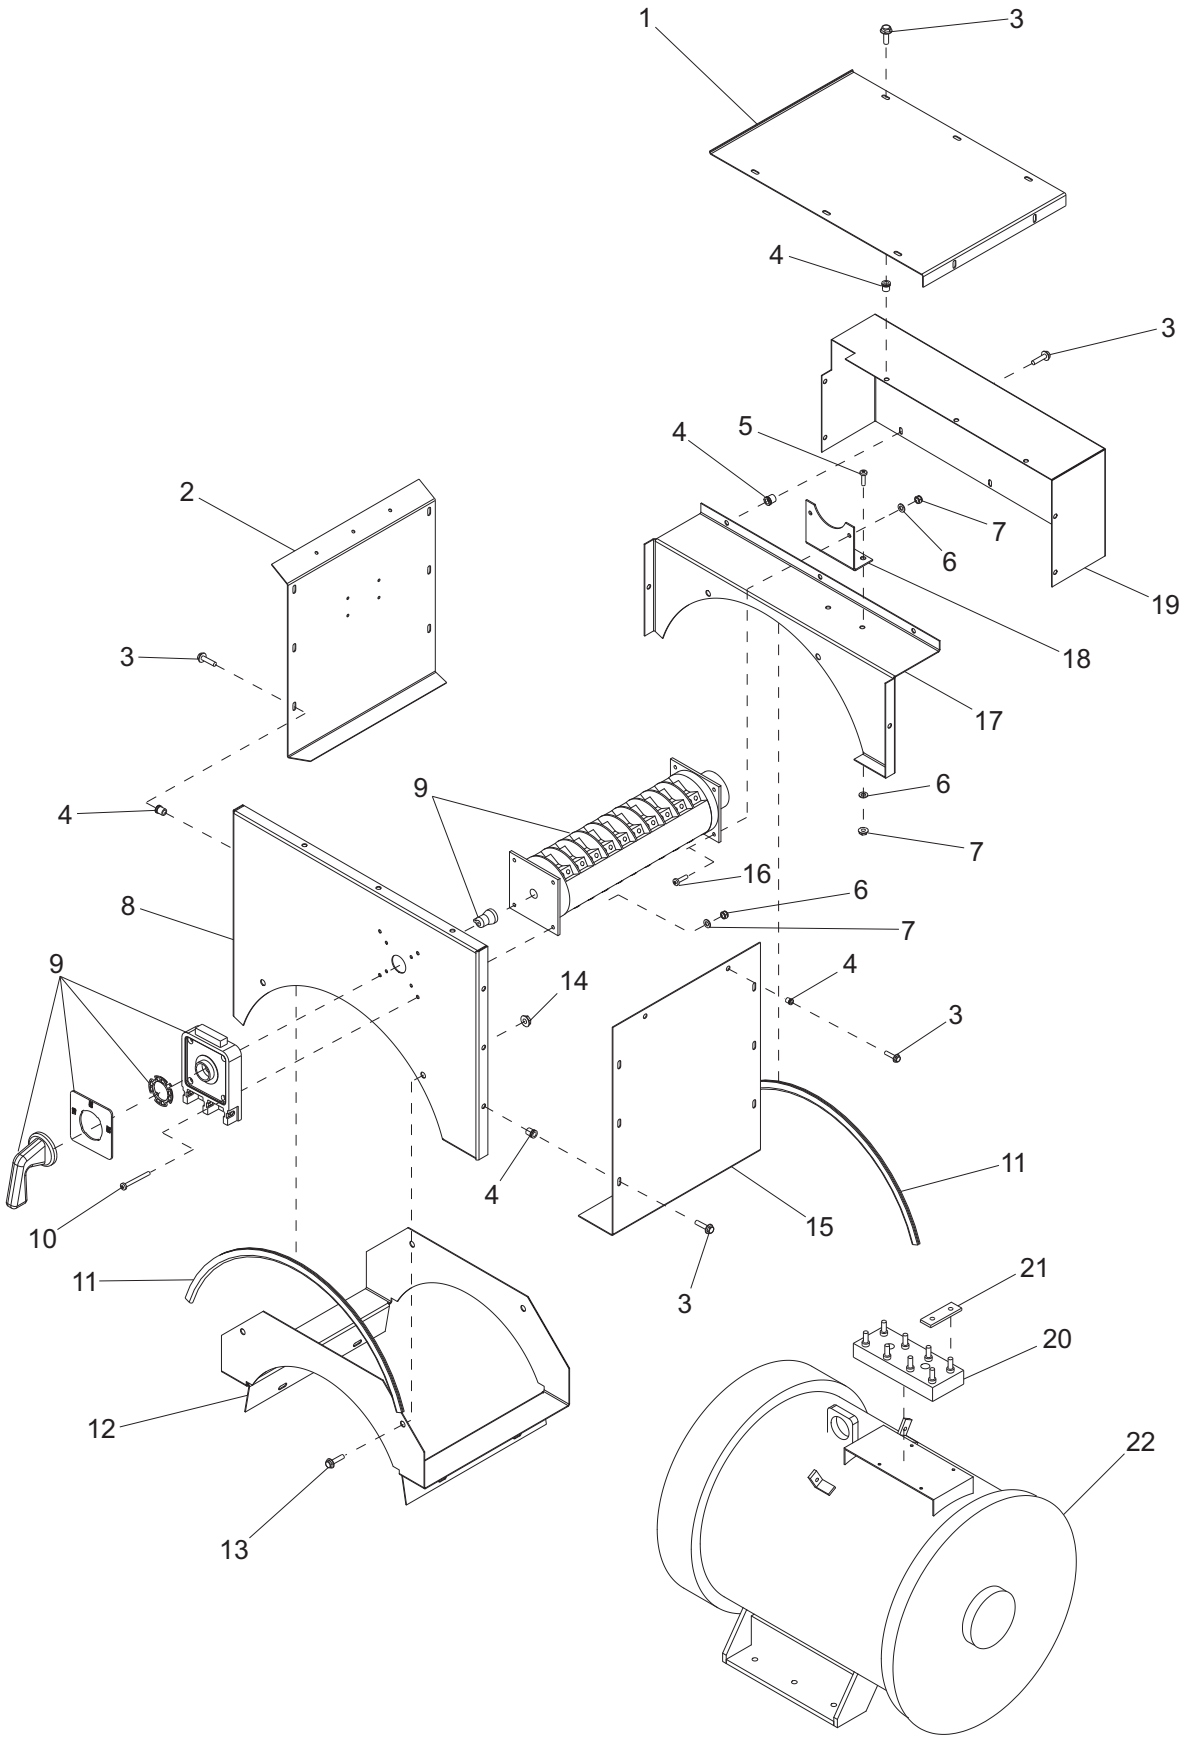

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22243B	1	Panel, generator box top	
2	22241B	1	Panel, generator box right	
3	60115	23	Screw, M6X1.0X12 hx ser flg	
4	60023	23	Insert, M6 threaded	
5	60156	2	Screw, M5X0.8X16 pan phil	
6	60041	8	Washer, flat M5	
7	60038	8	Nut, M5 hx nylock	
8	22239B	1	Panel, generator box front	
9	65688	1	Switch, phase - 315A, 4-pos	
10	60167	4	Screw, M5X0.8X35 pan phil	
11	19046	2	Seal, generator box	
12	26267B	1	Panel, generator box adapter	
13	60451	4	Screw, .375-16X.625 hx flg	
14	60145	4	Nut, .375-16 hx ser flg lock	
15	22240B	1	Panel, generator box left	
16	60037	2	Screw, M5-0.8X20 pan phil	
17	23730B	1	Panel, generator box rear	
18	28595B	1	Bracket, phase switch	
19	23731B	1	Box, rear generator extension	
20	65740	1	Lug block, 4 pos	
21	18935	4	Lug, switch extension terminal	
22	22098	1	Generator, 363PSL1607	

GENERATOR BOX ASSEMBLY

Super Start Generator, 3-position voltage selector switch

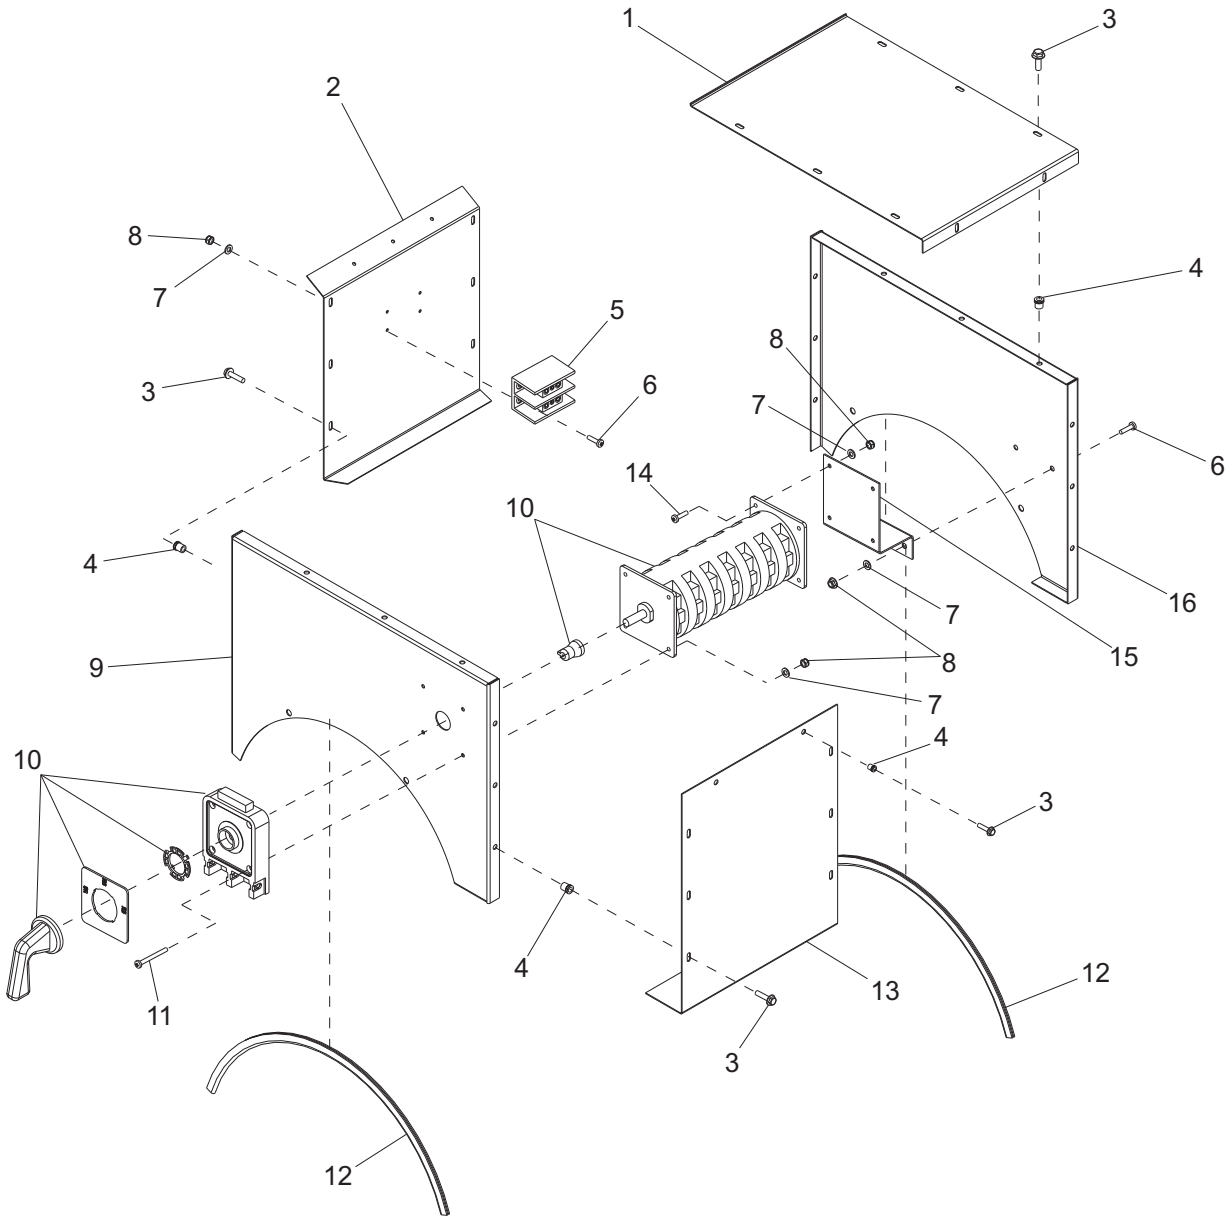

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22243B	1	Panel, generator box top	
2	22241B	1	Panel, generator box right	
3	60115	20	Screw, M6X1.0X12 hx ser flg	
4	60023	20	Insert, M6 threaded	
5	65165	1	Block , terminal - 2 pole	
6	60156	6	Screw, M5X0.8X16 pan phil	
7	60041	14	Washer, flat M5	
8	60038	14	Nut, M5 hx nylock	
9	22239B	1	Panel, generator box front	
10	18103	1	Switch, phase - 315A, 3-pos	
11	60167	4	Screw, M5X0.8X35 pan phil	
12	19046	2	Seal, generator box	
13	22240B	1	Panel, generator box left	
14	60037	4	Screw, M5X0.8X20 pan phil	
15	20178B	1	Bracket, phase switch	
16	22242B	1	Panel, generator box rear	

GENERATOR BOX ASSEMBLY

Super Start Generator, 4-position voltage selector switch

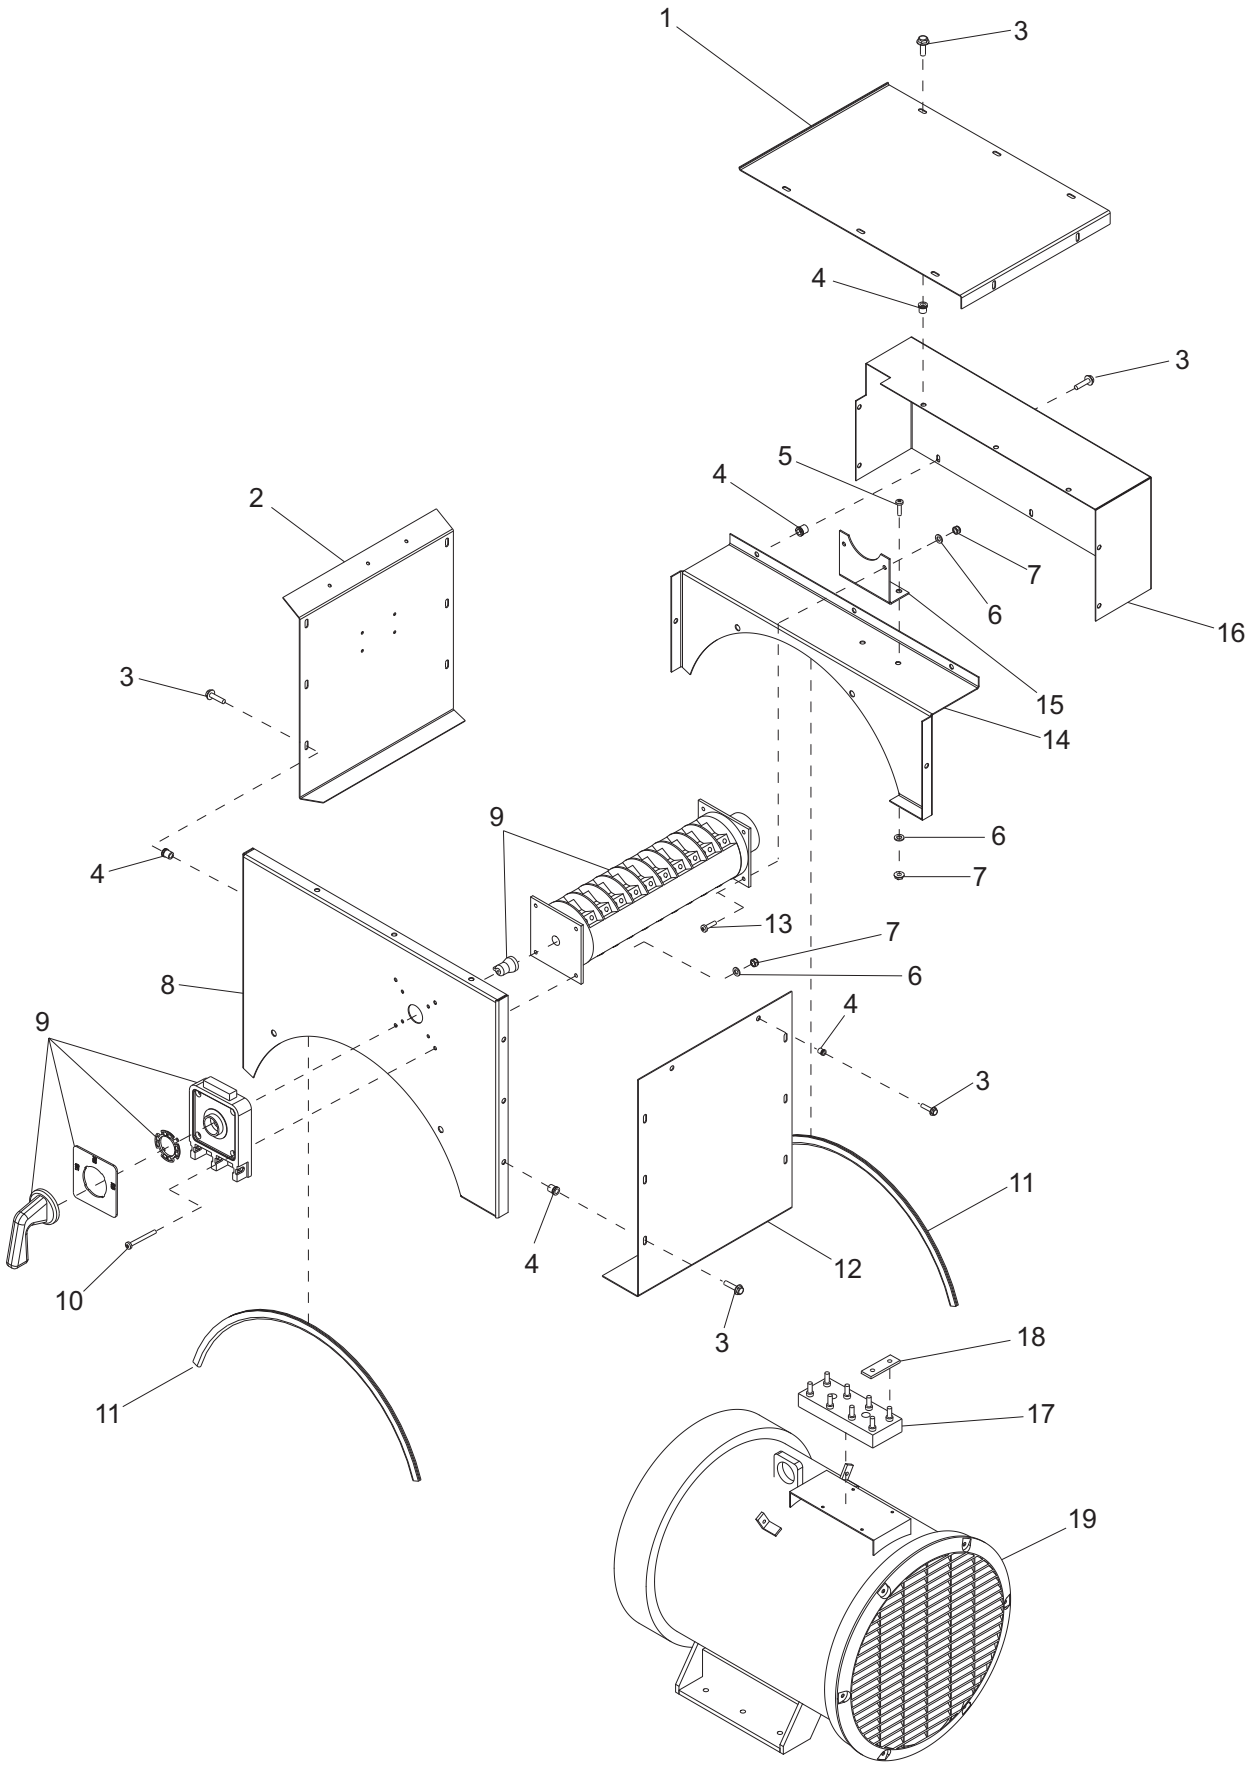

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22243B	1	Panel, generator box top	
2	22241B	1	Panel, generator box right	
3	60115	23	Screw, M6X1.0X12 hx ser flg	
4	60023	23	Insert, M6 threaded	
5	60156	6	Screw, M5X0.8X16 pan phil	
6	60041	12	Washer, flat M5	
7	60038	12	Nut, M5 hx nylock	
8	22239B	1	Panel, generator box front	
9	65688	1	Switch, phase - 315A, 4-pos	
10	60167	4	Screw, M5X0.8X35 pan phil	
11	19046	2	Seal, generator box	
12	22240B	1	Panel, generator box left	
13	60037	2	Screw, M5-0.8X20 pan phil	
14	23730B	1	Panel, generator box rear	
15	28595B	1	Bracket, phase switch	
16	23731B	1	Box, rear generator extension	
17	65740	1	Lug block, 4 pos	
18	18935	4	Lug, switch ext. terminal	
19	23165	1	Generator, 432PSL6210	Super start

ENGINE ASSEMBLY

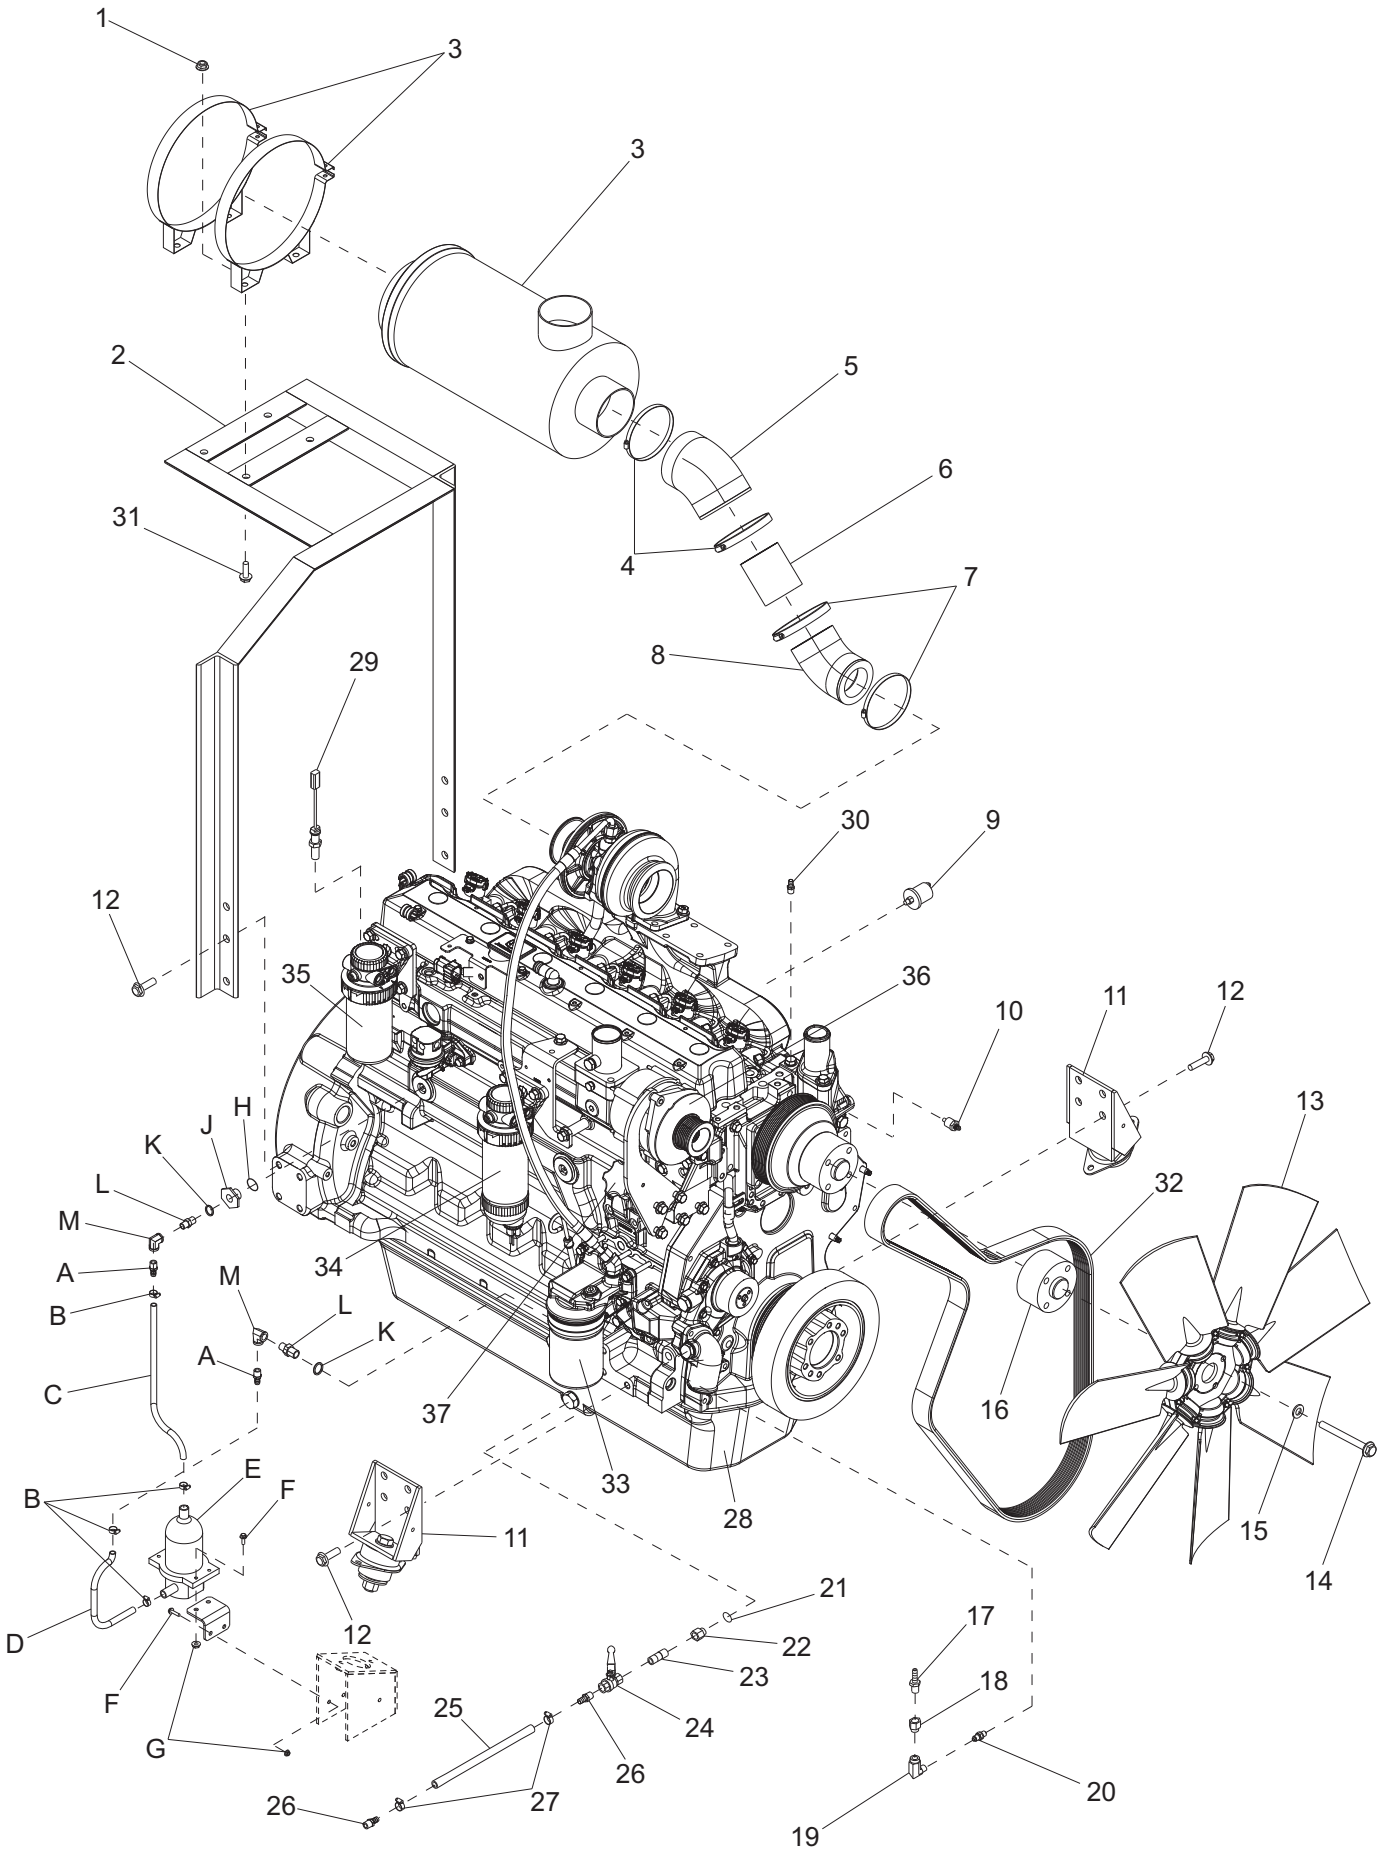

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	60020	4	Nut, M8 hx ser flg lock	
2	22226B	1	Weldment, air cleaner brckt.	
3	Page 20	1	Assembly, air filter	
4	20182	2	Clamp, hose - 4.09-6.00	
5	22225	1	Elbow, 45° molded rubber	
6	26191B	1	Tube, 4" steel, air filter	
7	18663	2	Clamp, hose - 3.31-4.25	
8	22286	1	Elbow, 45° molded rubber	
9	18106	1	Sensor, oil pressure	
10	18107	1	Sensor, temperature	
11	Page 22	2	Assembly, engine mount	
12	60072	6	Screw, M12X25 hx ser flg	
13	26156	1	Fan, engine - 28"	
14	60153	4	Screw, M10X1.5X80 hx	
15	60027	4	Washer, flat M10	
16	19524	1	Spacer, fan G50-G85	
17	25496	1	Fitting, hose barb	.750NPT x 1”
18	22461	1	Fitting, straight	.500MNPT x .750 NPT
19	22462	1	Fitting, 90° - brass	.500FNPT x .500FNPT
20	19257	1	Fitting, oring seal	.500MNPT x M18
21	19467	1	Seal, M22	
22	19307	1	Fitting, straight	.500FNPT x M22 x 1.5”
23	60438	1	Nipple, pipe	.500 NPT
24	19279	1	Valve, ball - 90°	.500 NPT
25	50201	1.54 ft.	Hose, - .625 I.D.	
26	60502	2	Fitting, hose barb	.500MNPT x .625
27	60365	2	Clamp, hose - .56-1.06	
28	26149	1	Engine, Deere 6068HF285	
29	18105	1	Sensor, magnetic pickup	
30	61111	1	Fitting, .250 barb	M12 x1.5
31	60009	4	Screw, M8X1.25X25 ser flg	
32	26234	1	Belt, fan/alternator	
33	22378	1	Filter, oil	
34	26597	1	Filter, fuel - primary	
35	26236	1	Filter, fuel - secondary	
36	22372	1	Alternator, engine	
37	22375	1	Cap, engine oil fill	With gasket
--	26344	--	Assembly, engine	Items 1 - 37
A	60502	2	Fitting, hose barb	.500MNPT x .625
B	60365	4	Clamp, hose - .56-1.06	Option: coolant heater
C	50201	2 ft.	Hose, coolant - .625 I.D.	Option: coolant heater
D	50201	2 ft.	Hose, coolant - .625 I.D.	Option: coolant heater
E	25939	1	Heater, coolant, 120V	Option: coolant heater
F	60024	4	Screw, M6X1.0X25 hx ser flg	Option: coolant heater
G	60036	4	Nut, M6 hx ser flg lock	Option: coolant heater
H	22589	1	O ring, 1.625" for eng. heater	Option: coolant heater
J	22588	1	Fitting, 1.625 x M18 - O ring seal	Option: coolant heater
K	19466	2	Seal, M18	Option: coolant heater
L	19257	2	Fitting, M18 - O ring seal	Option: coolant heater
M	22462	2	Fitting, 90° - brass - .500FNPT	Option: coolant heater

Note: *Engine and generator parts used in all Magnum Products LLC equipment carry the Original Equipment Manufacturer (OEM) warranty unless otherwise stated. OEM warranty parts must be purchased through an OEM dealer. Please contact Magnum Products LLC with questions.*

OIL VAPOR RECIRCULATION SYSTEM ASSEMBLY

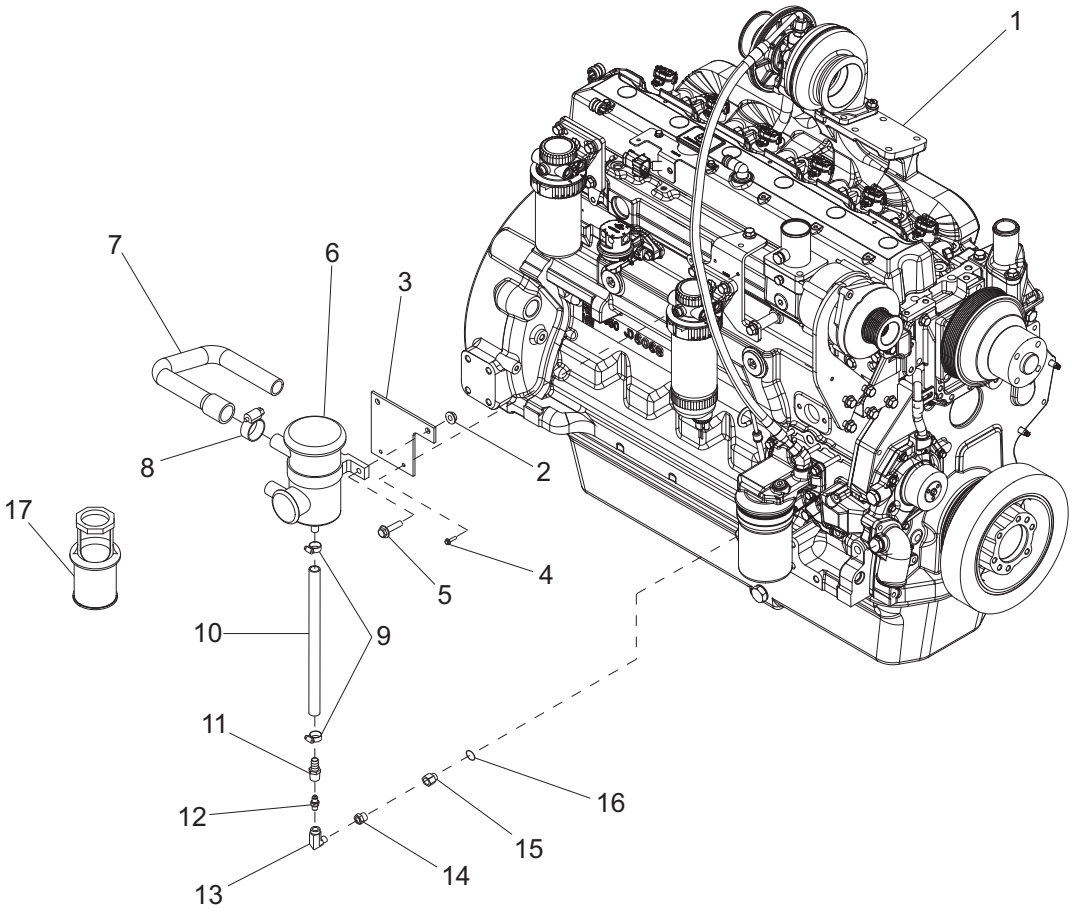

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	Page 36	1	Assembly, engine	
2	60020	2	Nut, M8 hx ser flg lock	
3	26219B	1	Bracket, OCV system	
4	60087	2	Screw, M6X1.0X16 hx ser flg	
5	60160	2	Screw, M8X1.25X30 ser flg	
6	24318	1	Kit, oil recirculation	
7	24170	1	Hose, OCV vent	
8	19338	1	Clamp, hose - .68-1.50	
9	60365	2	Clamp, hose - .56-1.06	
10	50206	1.66 ft.	Hose, fuel - .500 ID 50 psi	
11	19308	1	Fitting, hose barb	
12	19216	1	Drain, check valve	
13	19404	1	Fitting, 90°	.250MNPT X .250FNPT
14	19401	1	Fitting, straight	.250FNPT X .500MNPT
15	19307	1	Fitting, straight brass	.500FNPT x M22 x 1.5”
16	19467	1	Seal, M22	
17	24552	1	Filter, oil recirc. - pro-vent	

FUEL TANK AND SKID ASSEMBLY

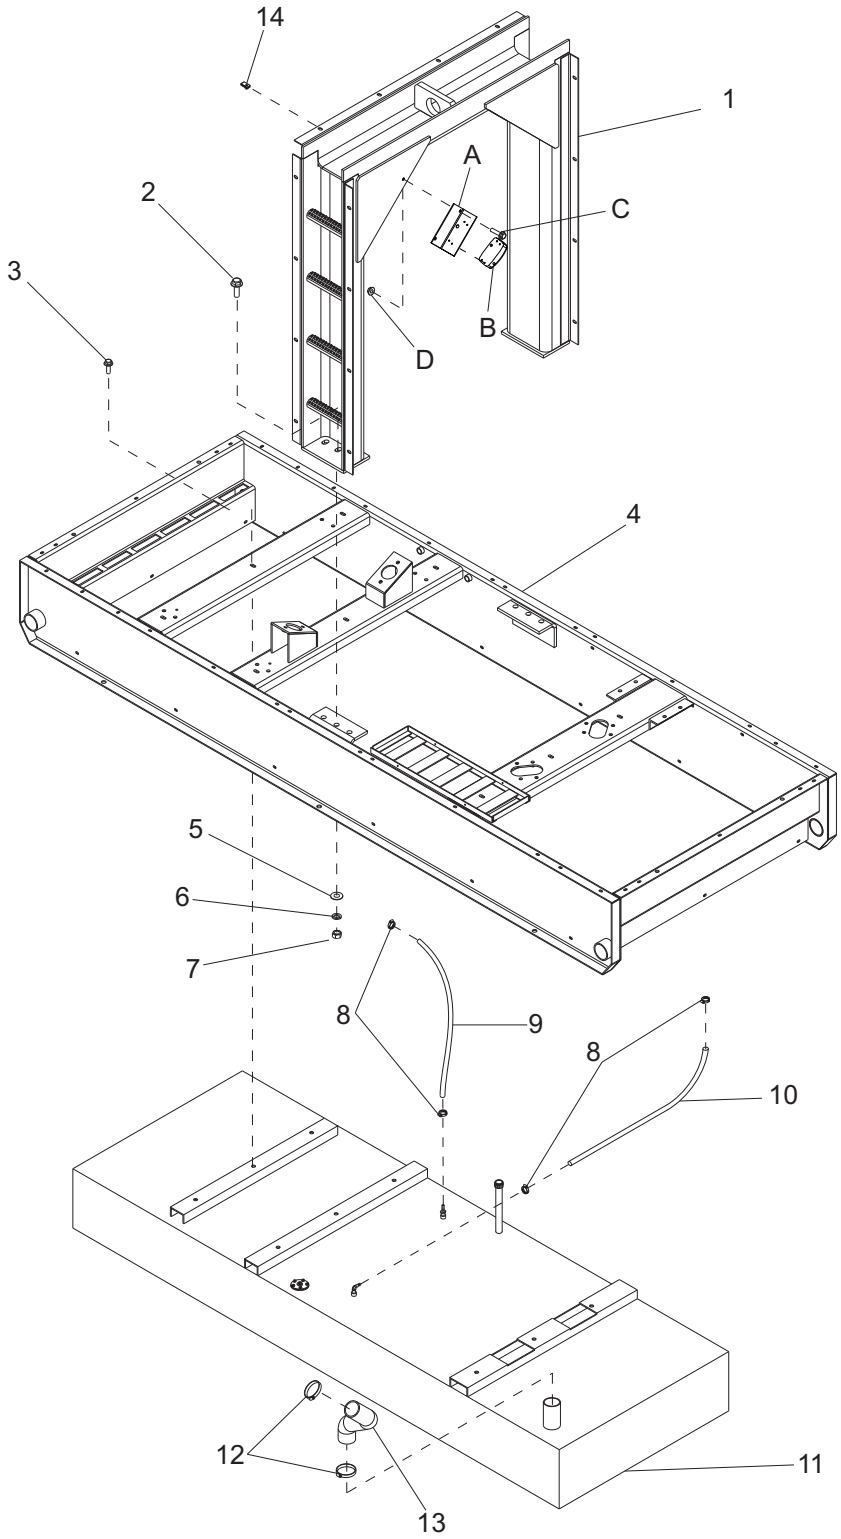

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22082B	1	Weldment, lift structure	
2	60508	6	Screw, flg hd	.750-10 x 2”
3	60018	6	Screw, hx ser flg	M10 x 1.25 x 20
4	22106B	1	Weldment, skid	
5	60247	6	Washer, flat .750	
6	60248	6	Washer, split lock .750	
7	60249	6	Nut, .750-10 hx hd	
8	14216	4	Clamp, hose	
9	19178	1	Hose, fuel - .312 ID X 36”	
10	50018	3.83 ft.	Hose, fuel - .312 ID 50 psi	
11	Page 24	1	Assembly, fuel tank	
12	19336	2	Clamp, hose - 2.31-3.25	
13	18301	1	Hose, fuel fill	
14	60505	24	Nut, U-clip - .312-18	
A	24546B	1	Bracket, interior light	Option: interior light
B	11947	1	Light, interior with switch	Option: interior light
C	61091	1	Screw, .312-18 x 1” ser flg	Option: interior light
D	60095	1	Nut, .312-18 ser flg	Option: interior light

ENGINE TO SKID ASSEMBLY

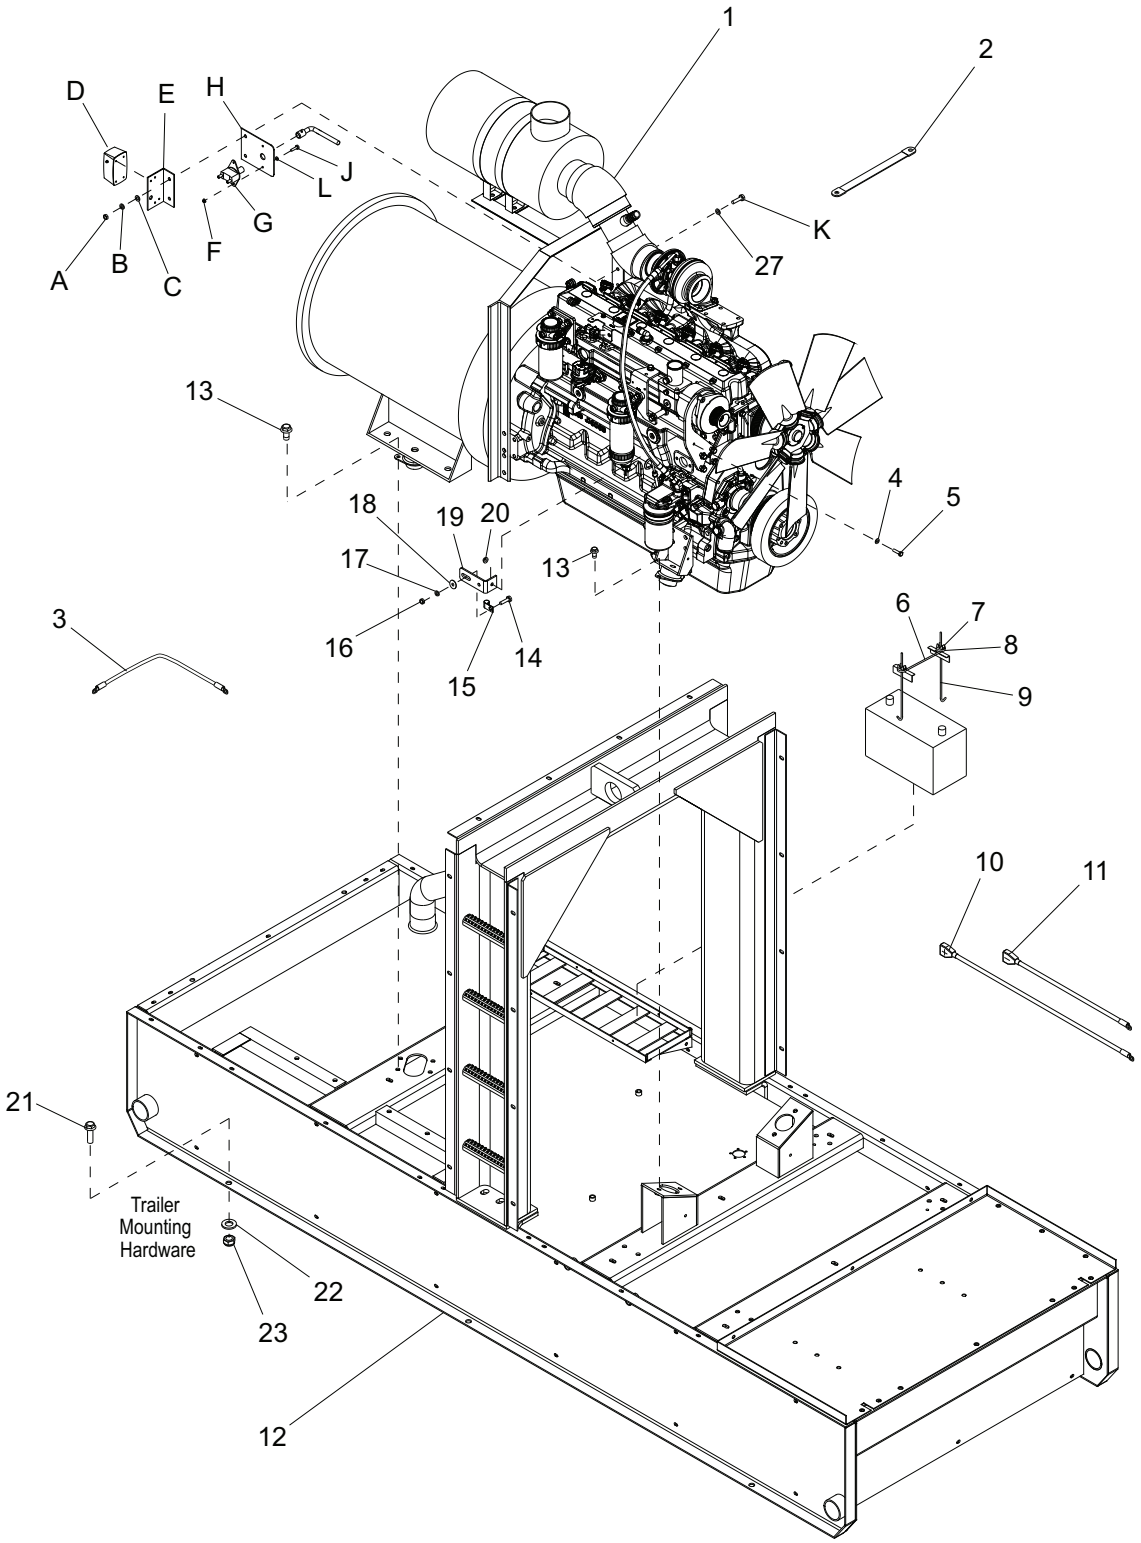

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	Page 36	1	Assembly, engine	
2	19042	1	Strap, ground - 10 in.	
3	20268	1	Cable - assy, grd	
4	60698	1	Washer, flat .375	
5	60831	1	Screw, .375-16X1.500 hx hd	
6	14682	1	Bracket, battery hold-down	
7	60090	2	Nut, .250-20 wing	
8	60089	2	Washer, fender	.265 I.D. 1.25 O.D.
9	14146	2	Bolt, J - .250-20 x 10”	
10	18693	1	Cable, battery - 38" red	
11	10425	1	Cable, battery - 16" blk	
12	Page 40	1	Assembly, skid	
13	60018	8	Screw, hx ser flg	M10 x 1.25 x 20
14	60507	1	Screw, .312-18x 1.0 hx hd	
15	60716	1	Clamp, tubing - 1.50 lt duty	
16	60285	1	Nut, .312-18 hx hd	
17	60271	1	Washer, split lock .312	
18	60119	2	Washer, flat .312	
19	11131B	1	Bracket	
20	60145	1	Nut, .375-16 hx ser flg lock	
21	61078	6	Screw, hx hd flange	.625-11 x 2”
22	60180	6	Washer, flat .625	
23	60240	6	Nut, .625-11 hx nylock	
A	60285	2	Nut, .312-18 hx hd	Option
B	60271	2	Washer, split lock .312	Option
C	60119	4	Washer, flat .312	Option
D	11947	1	Light, interior with switch	Option
E	23528B	1	Bracket, interior light	Option
F	60161	2	Nut, .250-20 hx ser flg	Option
G	21489	1	Battery disconnect switch	Option
H	21494B	1	Bracket, battery disconnect	Option
J	60393	2	Screw, .250-20X1.0 hx hd	Option
K	60256	2	Screw, .312-18X1.5 hx hd	Option
L	60696	2	Washer, flat .250	Option

COOLING SYSTEM ASSEMBLY

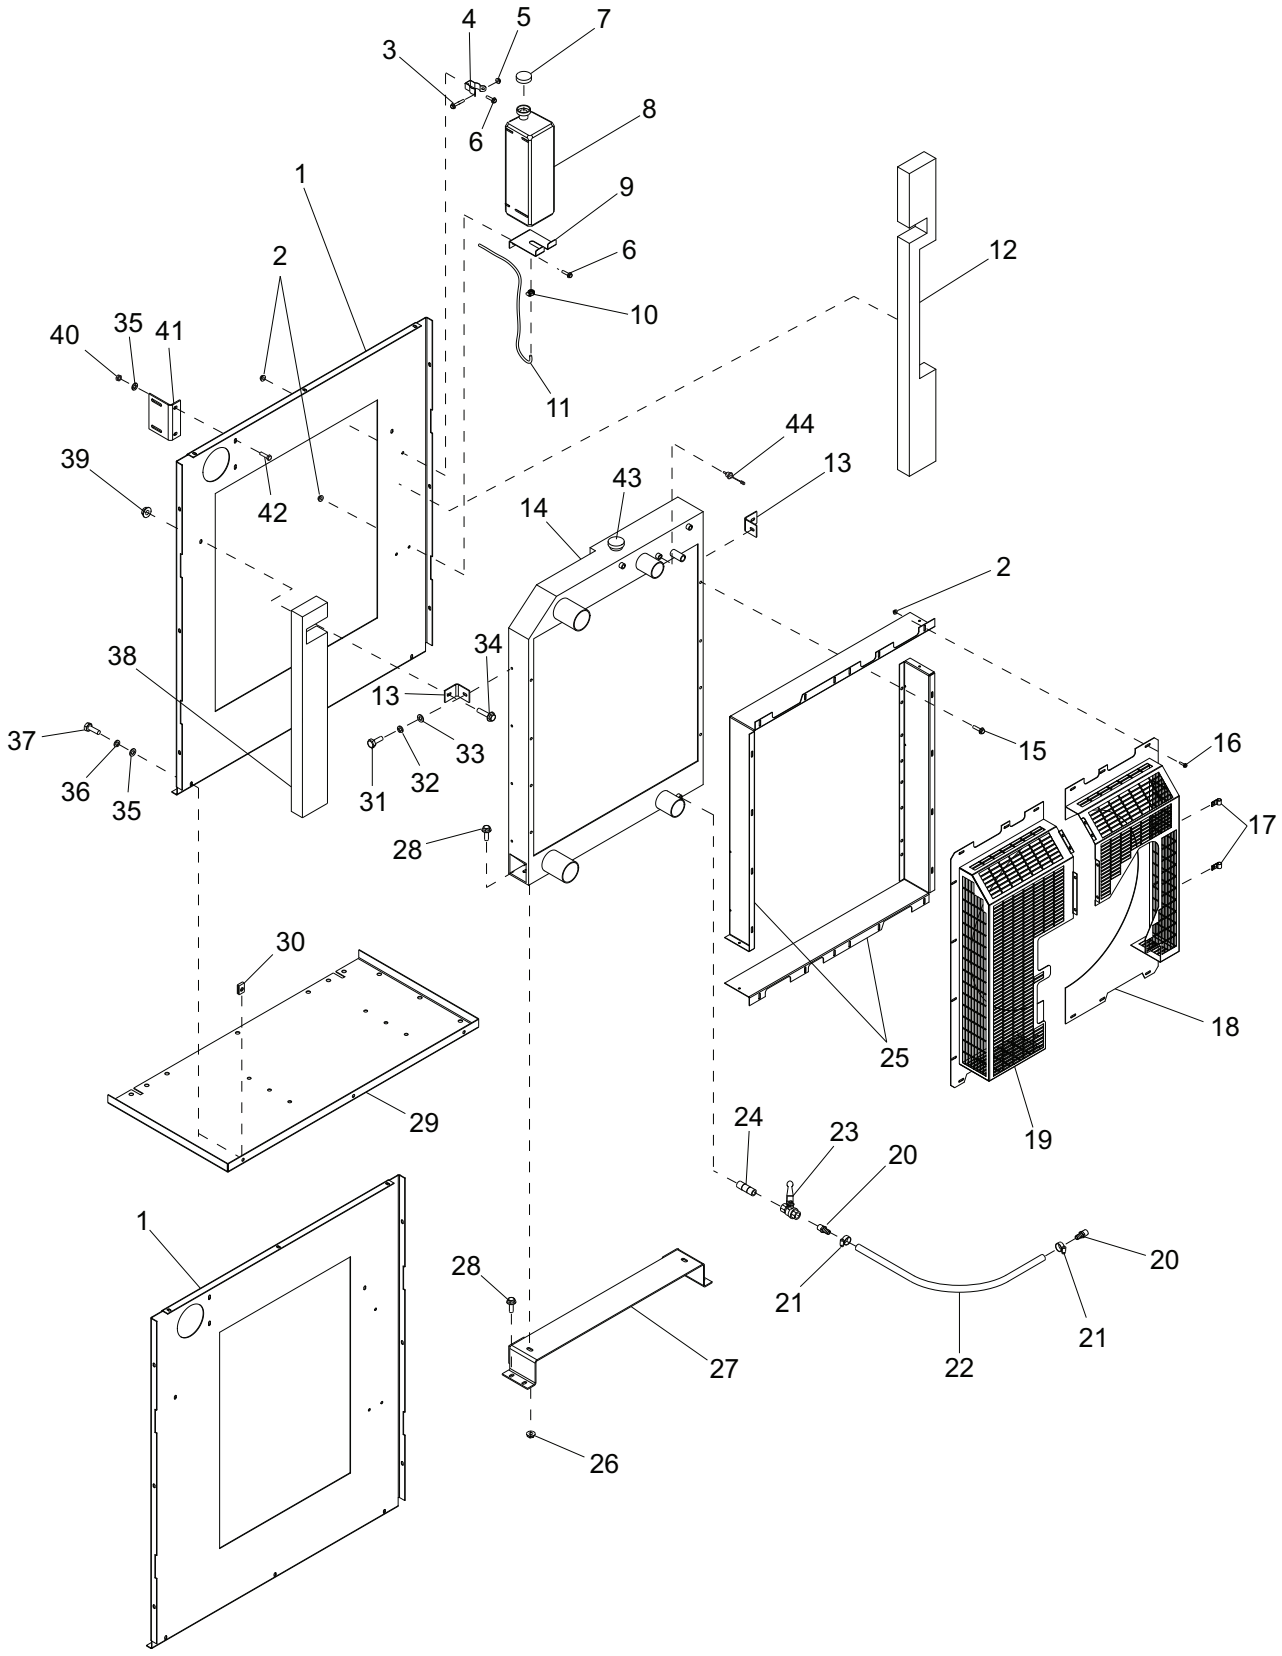

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	26192B	1	Panel, bulkhead	Built before SN:0930664
--	27194B	1	Panel, bulkhead	Built after SN: 0930663
2	60161	24	Nut, .250-20 hx ser flg	
3	60518	1	Screw, .250-20X1.500 hx	
4	19726	1	Clamp, overflow bottle	
5	60144	1	Nut, .250-20 nylock	
6	60523	2	Screw, hx ser flg	.250-20 x .875
7	19714	1	Cap, overflow bottle	
8	20212	1	Jug, overflow (6 qt)	
9	20213B	1	Support, overflow jug	
10	14216	1	Clamp, hose - .21-.62	
11	19220	1	Hose, overflow	
--	20454	1	Assembly, overflow jug	Items 2-11
12	23404	1	Panel, foam - right radiator	
13	21920B	2	Bracket, upper radiator	
14	26522	1	Radiator Tier III	Built before SN: 0930664
--	26503	1	Radiator, Tier III ver. 3	Built after SN: 0930663
15	60451	8	Screw, hx flg hd	.375-16 x .625
16	60175	22	Screw, hx ser flg	.250-20 x .500
17	60649	2	Clamp, tubing - .750	
18	26104B	1	Weldment, fan guard	
19	26103B	1	Weldment, fan guard	
20	60502	2	Fitting, hose barb	.500MNPT x .625
21	60365	2	Clamp, hose - .56-1.06	
22	50201	1.54 ft.	Hose, coolant - .625 I.D.	
23	19279	1	Valve, ball 90 - .500 NPT	
24	60438	1	Nipple, pipe	.500 NPT x close
25	24949B	2	Radiator shroud	
26	60064	2	Nut, M10 hx ser flg lock	
27	22236B	1	Weldment, rad support	
28	60018	6	Screw, hx ser flg	M10 x 1.25 x 20
29	22051B	1	Panel, muffler mount	
30	60505	3	Nut, U-clip, .312-18	
31	60168	2	Screw, .312-18X.750 hx	
32	60271	2	Washer, split lock .312	
33	60119	2	Washer, flat .312	
34	61091	2	Screw, .312-18X1” hx flg	
35	60340	5	Washer, flat .312	
36	60701	3	Washer, split lock .312	
37	60507	3	Screw, .312-18X1.000 hx	
38	23403	1	Panel, foam - left radiator	
39	60095	2	Nut, .312-18 ser flg	
40	60412	2	Nut, .312-18 Lhex G5	
41	26668B	1	Bracket, pipe support	
42	60851	2	Screw, .312-18X1.250 flat	
43	22376	1	Cap, radiator	
44	65592	1	Sensor, low coolant	

LEFT FRONT DOOR ASSEMBLY

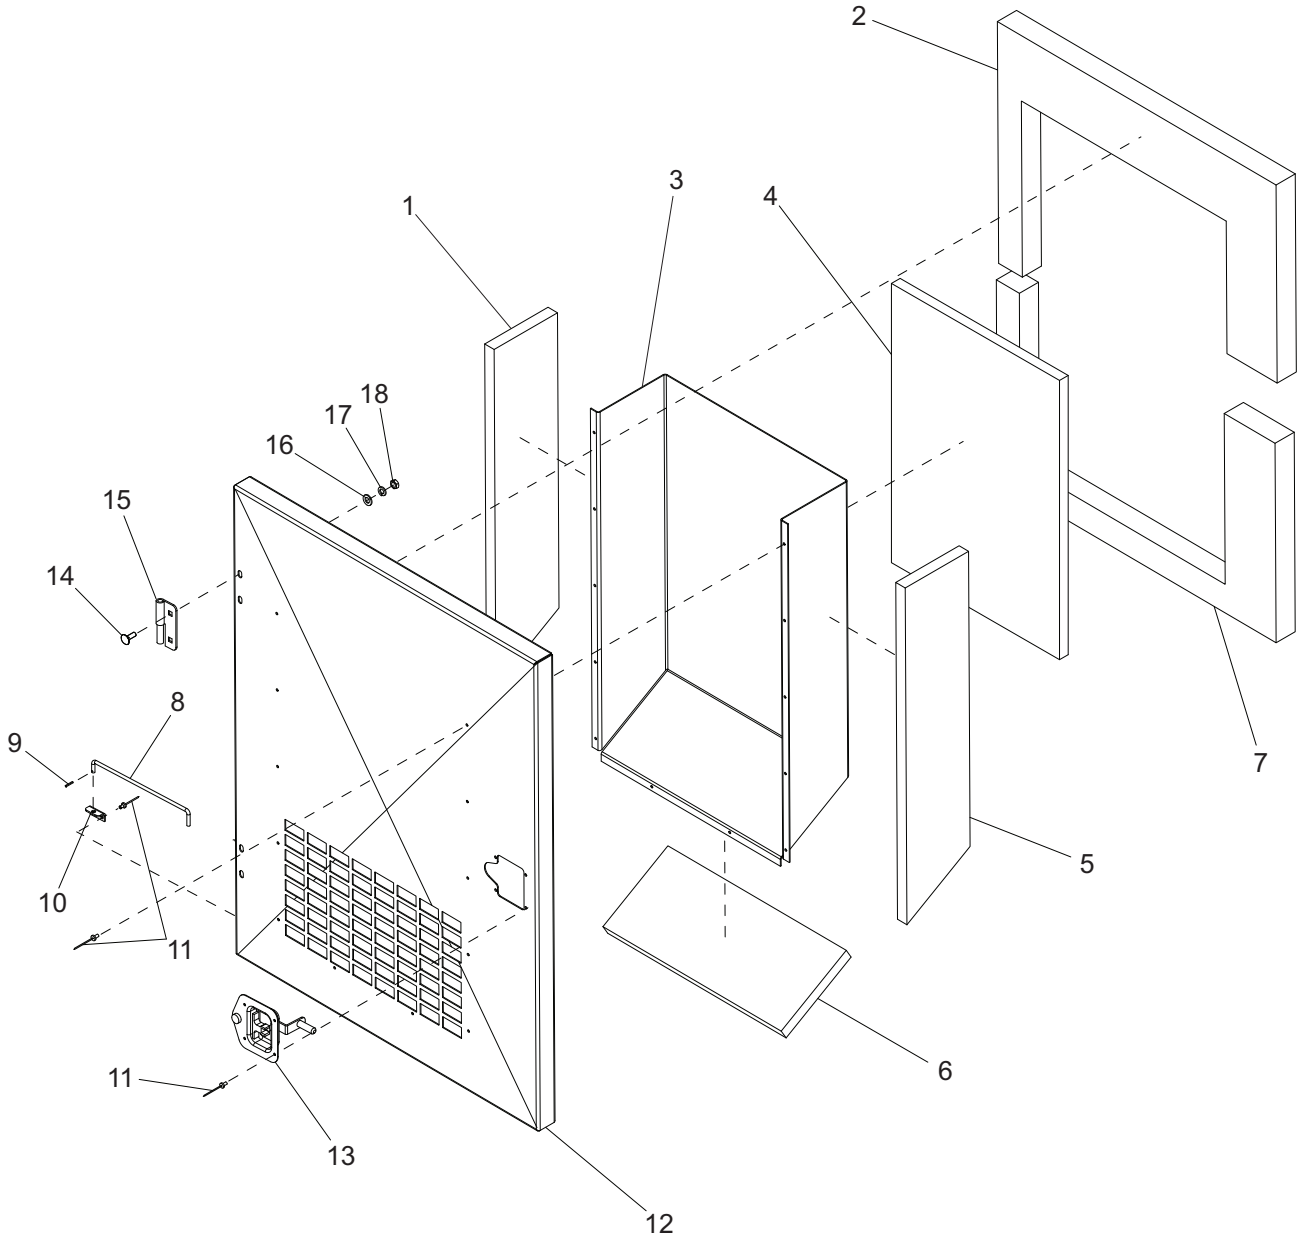

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22486	1	Foam, small duct rht	
2	22193	1	Foam, front lft door upper	
3	26089W	1	Duct, front door	
4	22487	1	Foam, front duct face - lft	
5	22485	1	Foam, door duct lft	
6	22488	1	Foam, small duct lower	
7	22194	1	Foam, front lft door lower	
8	18900	1	Rod, door prop	
9	60048	1	Pin, roll .125 X .625	
10	20916Z	1	Bracket, prop rod	
11	60268	18	Rivet, .188 dia	
12	22160W	1	Door, front left	
13	22498	1	Latch, T-handle right - ccw	
14	61066	4	Screw, .312-18X1” carriage	
15	18459	2	Hinge, left (male)	
16	60243	4	Washer, .250 flat .735/.060	
17	60271	4	Washer, .312 split lock	
18	60285	4	Nut, .312-18 hx G5	
--	26090	1	Assy, front left door	Items 1 - 18

LEFT REAR DOOR ASSEMBLY

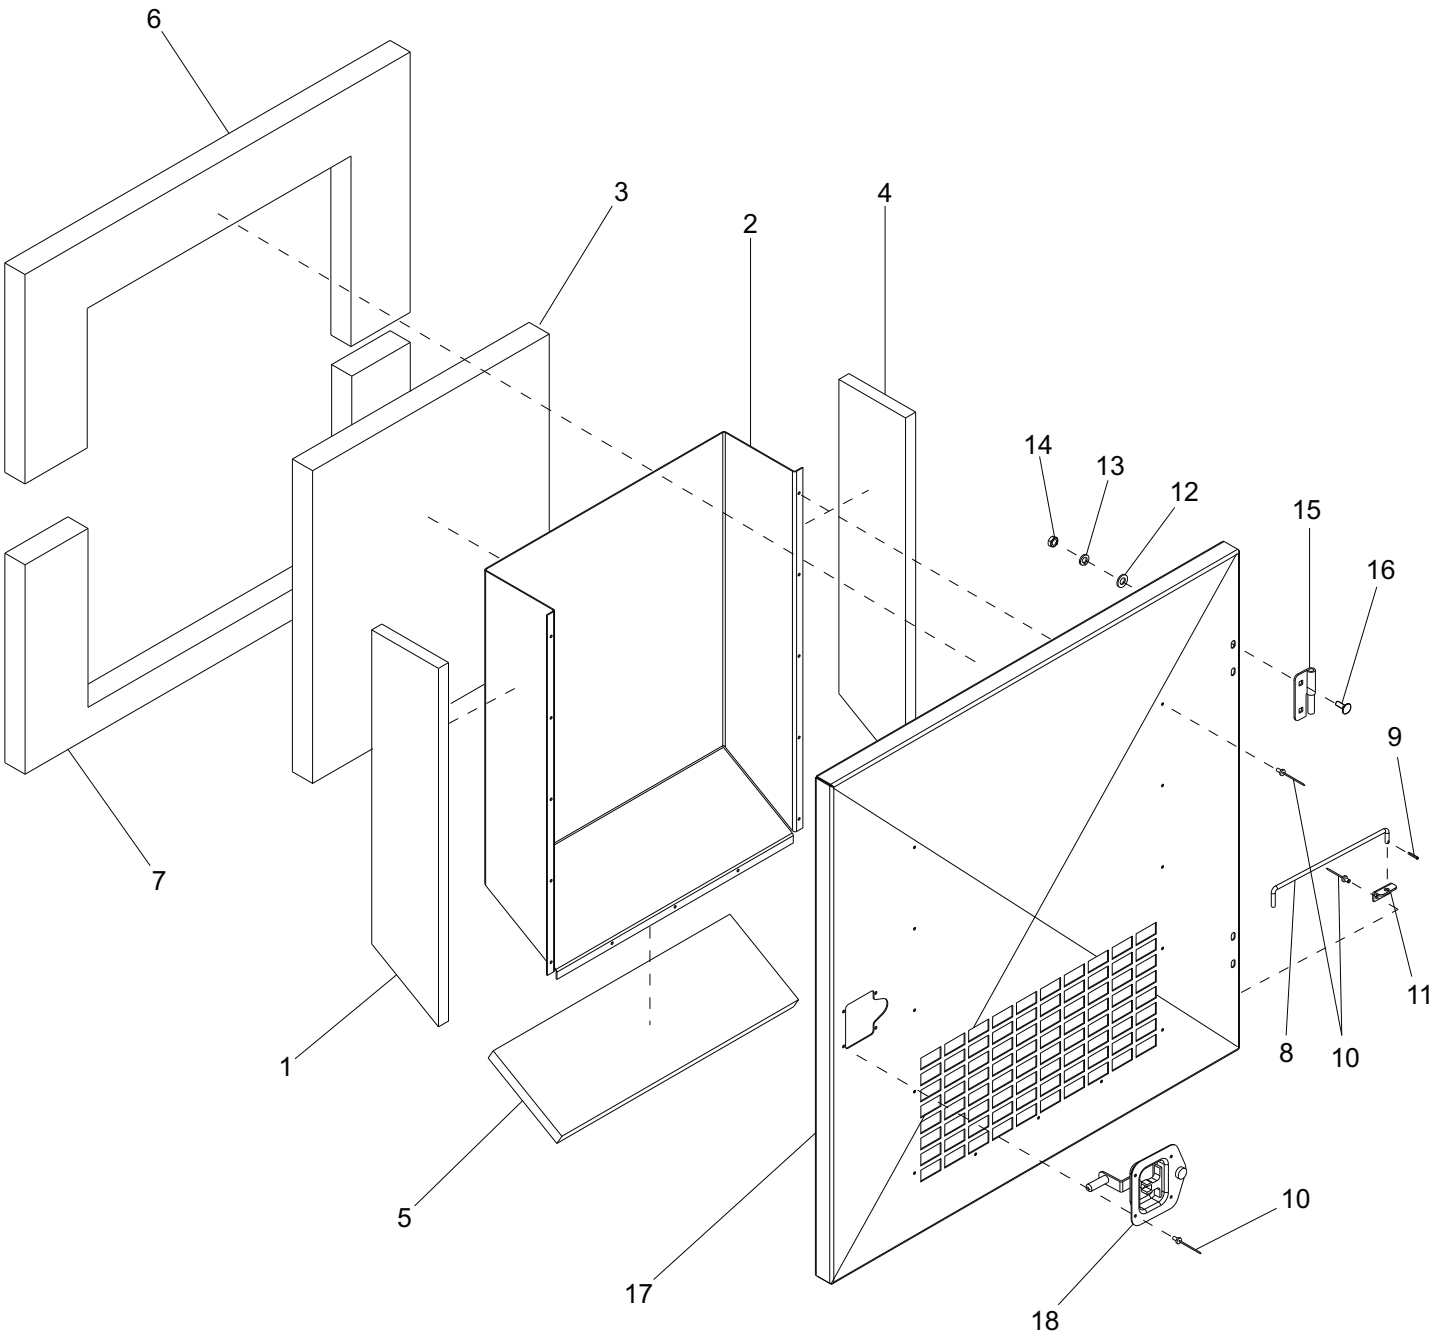

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22189	1	Foam, small duct rght	
2	22169W	1	Duct, rear door	
3	22197	1	Foam, rear lft duct face	
4	22190	1	Foam, door duct lft	
5	22198	1	Foam, rear lft duct lower	
6	22195	1	Foam, rear lft door upper	
7	22196	1	Foam, rear lft door lower	
8	18900	1	Rod, door prop	
9	60048	1	Roll pin, .125 x .625	
10	60268	19	Rivet, .188 dia	
11	20916Z	1	Bracket, prop rod	
12	60243	4	Washer, .250 flat .735/.060	
13	60271	4	Washer, .312 split lock	
14	60285	4	Nut, .312-18 hx G5	
15	18461	2	Hinge, right (male)	
16	61066	4	Screw, .312-18X1” carriage	
17	22161W	1	Door, rear left	
18	22497	1	Latch, T-handle - left cw	
--	22166	1	Assy, rear left door	Items 1 - 18

RIGHT FRONT DOOR ASSEMBLY

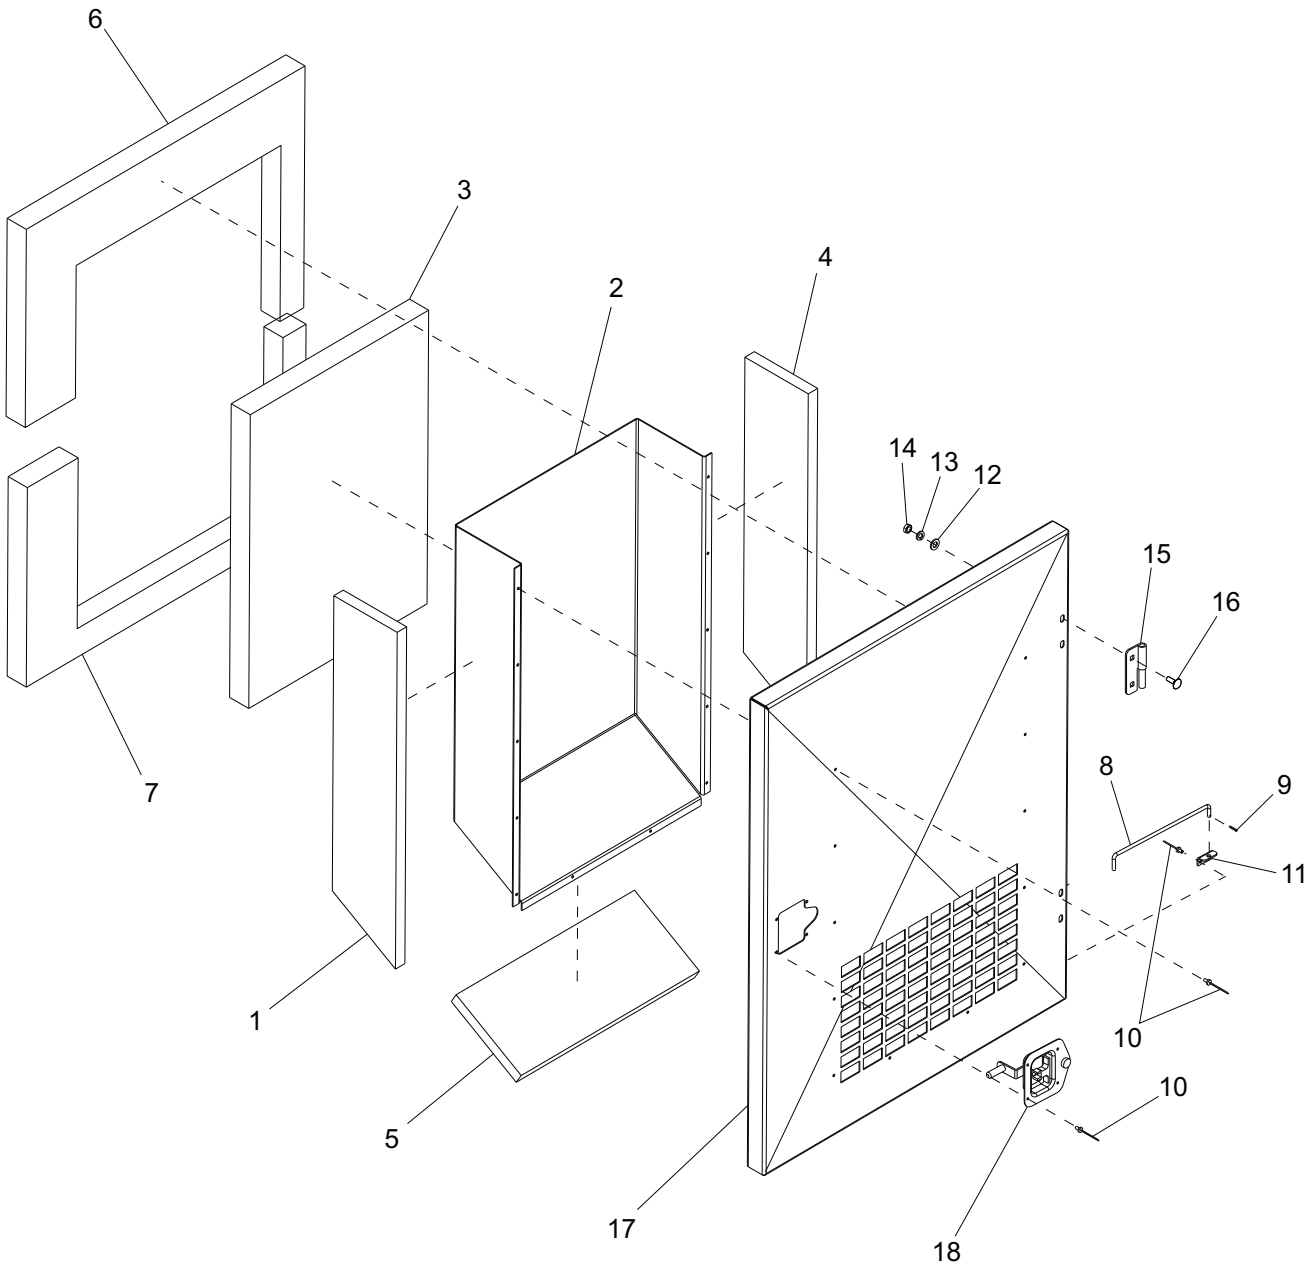

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22486	1	Foam, small duct rht	
2	22484W	1	Duct, front door	
3	22487	1	Foam, front duct face - lft	
4	22485	1	Foam, door duct lft	
5	22488	1	Foam, small duct lower	
6	22191	1	Foam, front right door upper	
7	22192	1	Foam, front right door lower	
8	18900	1	Rod, door prop	
9	60048	1	Pin, roll .125 X .625	
10	60268	18	Rivet, .188 dia	
11	20916Z	1	Bracket, prop rod	
12	60243	4	Washer, .250 flat .735/.060	
13	60271	4	Washer, .312 split lock	
14	60285	4	Nut, .312-18 hx G5	
15	18461	2	Hinge, right (male)	
16	61066	4	Screw, .312-18X1” carriage	
17	22159W	1	Door, front right	
18	22497	1	Latch, T-handle - lft cw lock	
--	24997	1	Assy, front right door	Items 1 - 18

CONTROL DOOR ASSEMBLY

New Style Door

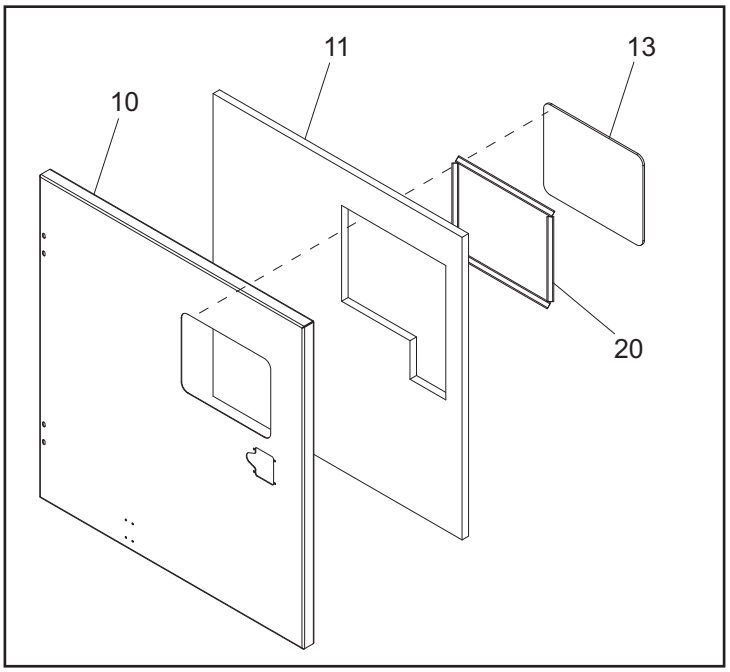

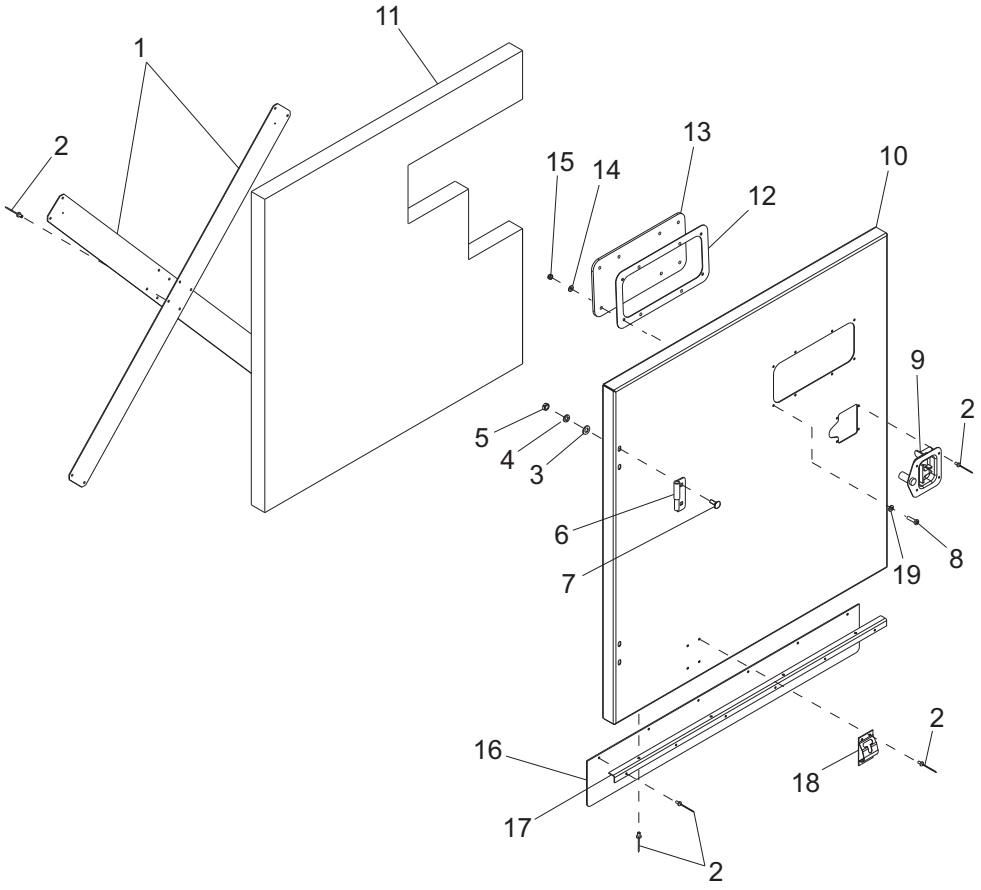

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22278B	2	Brace, control door	
2	60268	30	Rivet, .188 dia	
3	60243	4	Washer, .250 flat .735/.060	
4	60271	4	Washer, .312 split lock	
5	60285	4	Nut, .312-18 hx G5	
6	18459	2	Hinge, left (male)	
7	61066	4	Screw, .312-18X1” carriage	
8	60529	8	Screw, 10-24X.625 pan phil	Old style door
9	22498	1	Latch, T-handle right - ccw	
10	22162W	1	Door, control	Old style door
--	29040W	1	Door, control	New style door
11	22172	1	Foam, panel - control door	Old style door
--	27542	1	Foam, panel - control door	New style door
12	23511	1	Gasket, control door	Old style door
13	23512	1	Window, control door	Old style door
--	21477	1	Window, control door	New style door
14	60237	8	Washer, flat #10	Old style door
15	60457	8	Nut, 10-24 nylock	Old style door
16	22171	1	Flap, control door	
17	22170W	1	Bracket, door flap	
18	60652	1	Latch, door - spring loaded	
19	60067	8	Washer, flat #10X.06	Old style door
20	50192	4.58ft.	Tape, .5” double sided type VHB	New style door
--	22167	1	Assy, control door	Items 1 - 19

LEFT SIDE CENTER PANEL ASSEMBLY

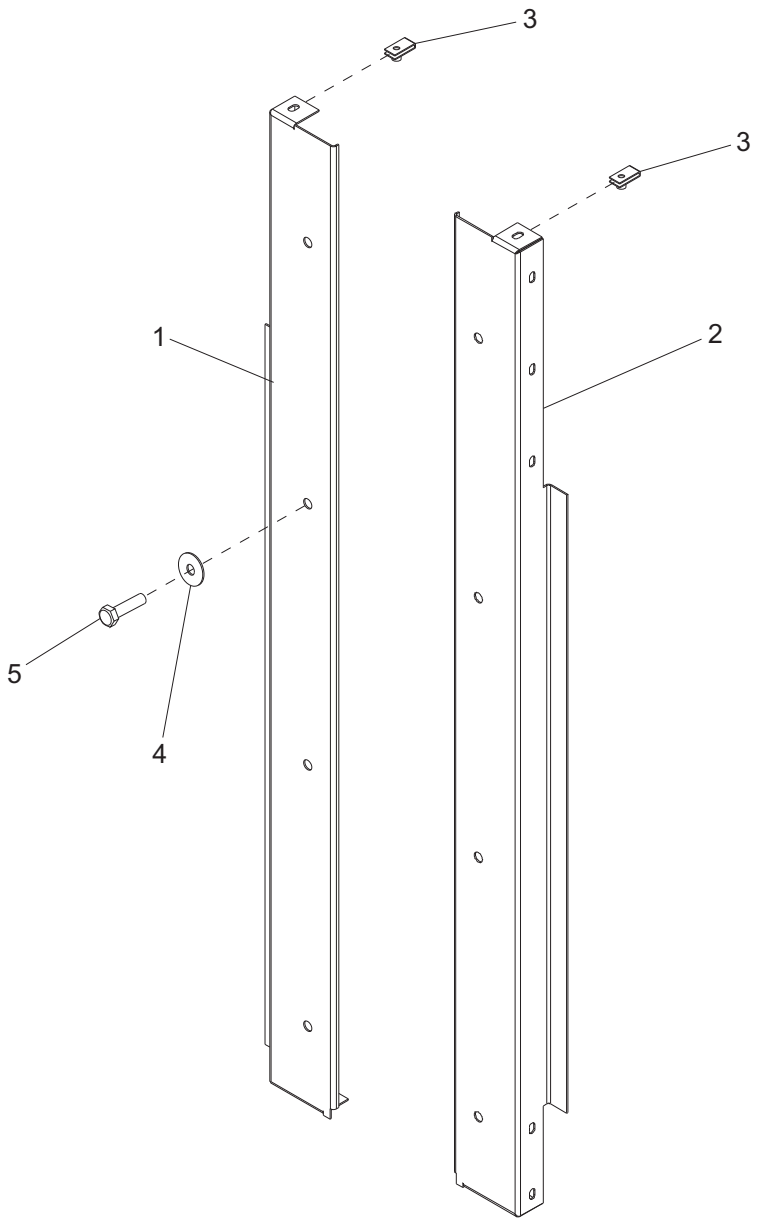

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22131W	1	Panel, left/middle/front	
2	22130W	1	Panel, right/middle/front	
3	60505	2	Nut, U-clip, .312-18	
4	60452	8	Washer, flat .313	
5	60507	8	Screw, .312-18X1” std hex	

RIGHT SIDE CENTER PANEL ASSEMBLY

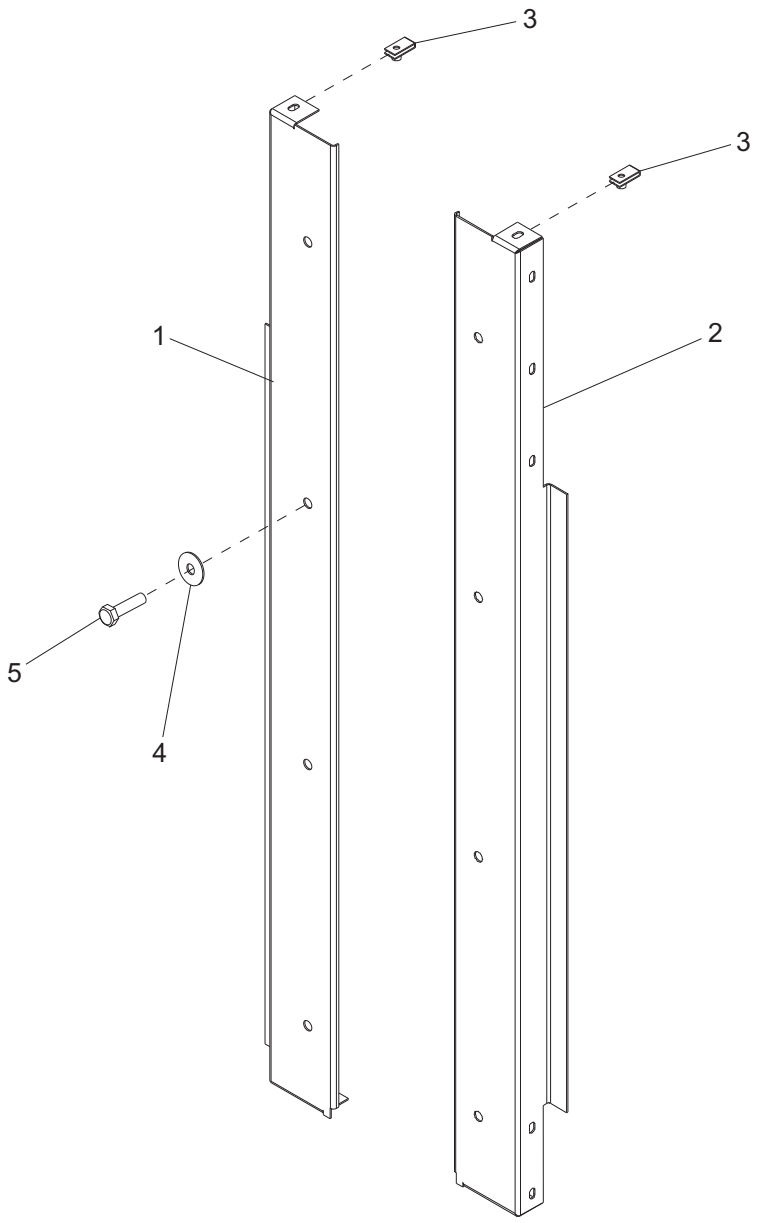

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22129W	1	Panel, right/middle/rear	
2	22130W	1	Panel, right/middle/front	
3	60505	2	Nut, U-clip, .312-18	
4	60452	8	Washer, flat .313	
5	60507	8	Screw, .312-18X1” std hex	

LEFT FRONT CORNER ASSEMBLY

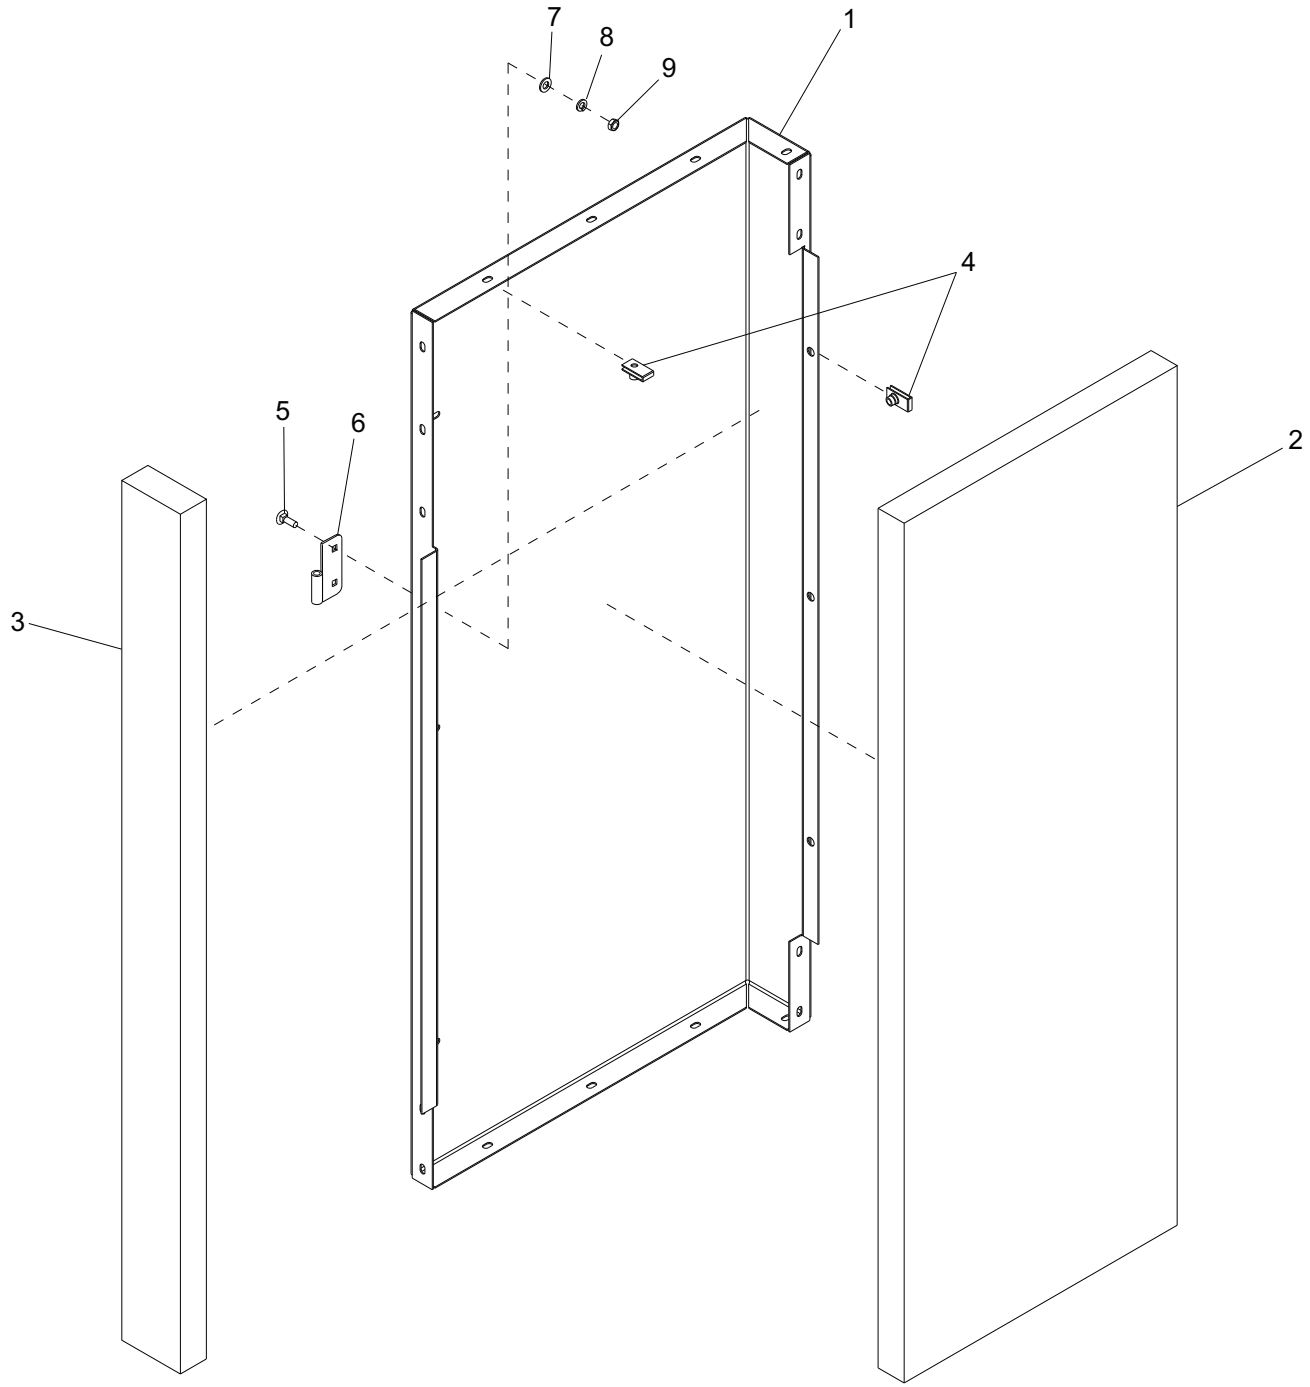

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22052W	1	Panel, front left	
2	21956	1	Foam, front left	
3	21963	1	Foam, corner	
4	60505	7	Nut, U-clip, .312-18	
5	61066	4	Screw, .312-18X1” carriage	
6	18462	2	Hinge, left (female)	
7	60243	4	Washer, .250 flat .735/.060	
8	60271	4	Washer, .312 split lock	
9	60285	4	Nut, .312-18 hx G5	
--	22080	1	Assy, left front corner	Items 1 - 9

RIGHT FRONT CORNER ASSEMBLY

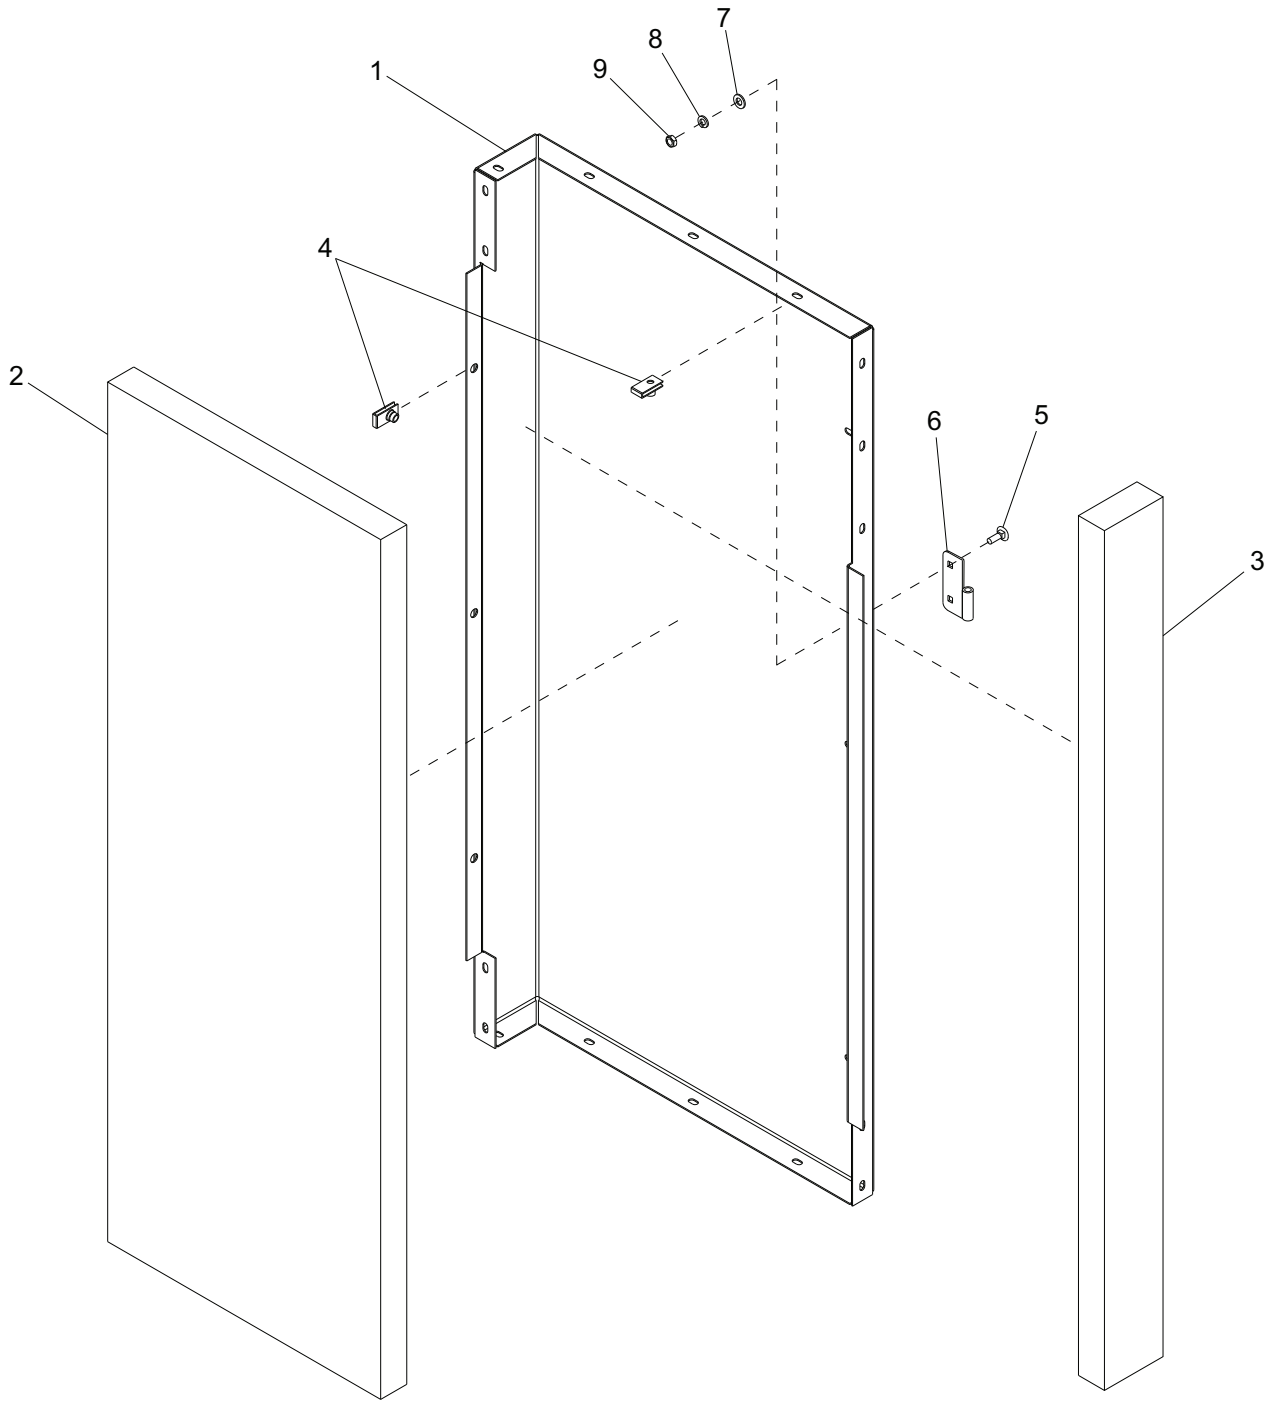

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22053W	1	Panel, front right	
2	21956	1	Foam, front right	
3	21963	1	Foam, corner	
4	60505	7	Nut, U-clip, .312-18	
5	61066	4	Screw, .312-18X1” carriage	
6	18460	2	Hinge, right (female)	
7	60243	4	Washer, .250 flat .735/.060	
8	60271	4	Washer, .312 split lock	
9	60285	4	Nut, .312-18 hx G5	
--	22079	1	Assy, right front corner	Items 1 - 9

FRONT PANEL ASSEMBLY

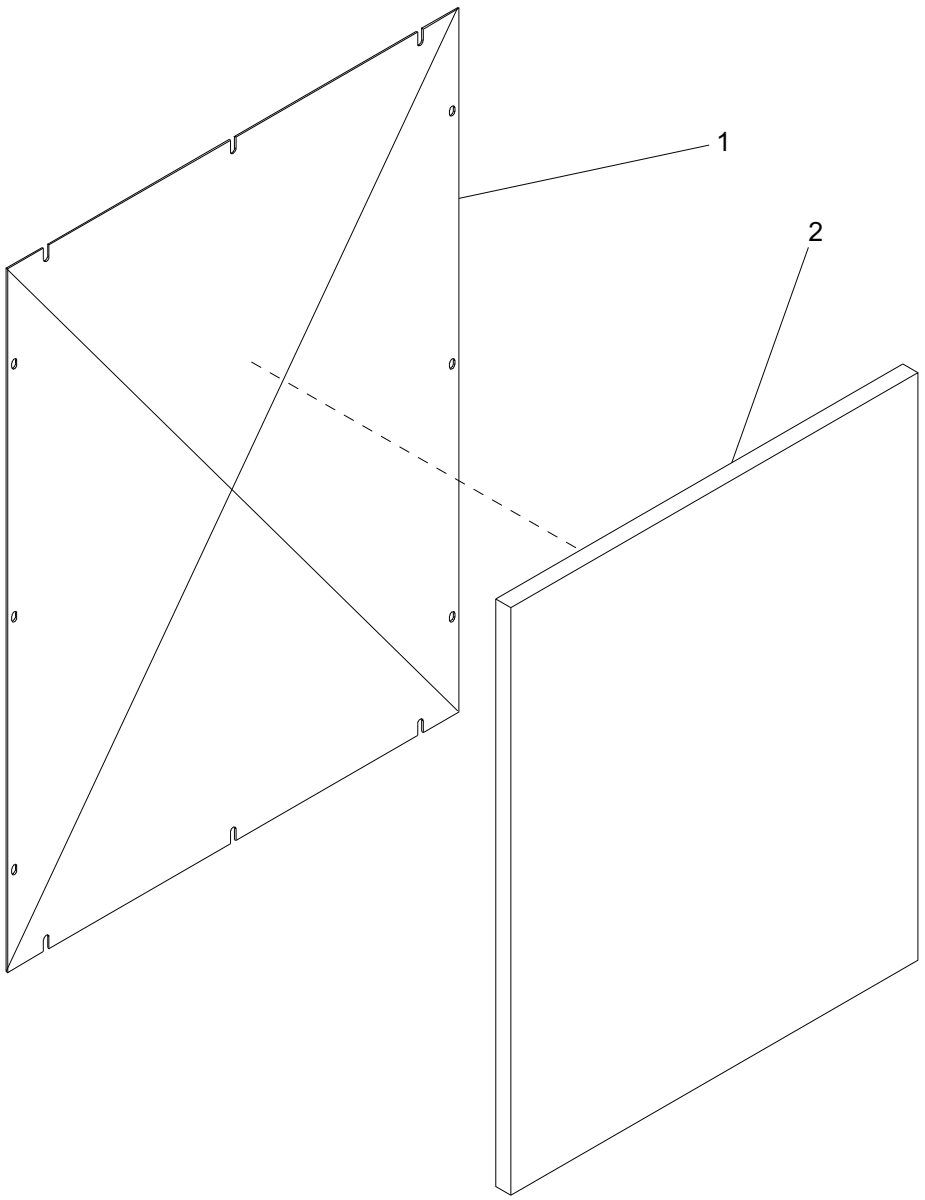

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22065W	1	Panel, front	
2	22183	1	Foam, front panel	
--	22089	1	Assy, front panel	Items 1 - 2

REAR PANEL ASSEMBLY

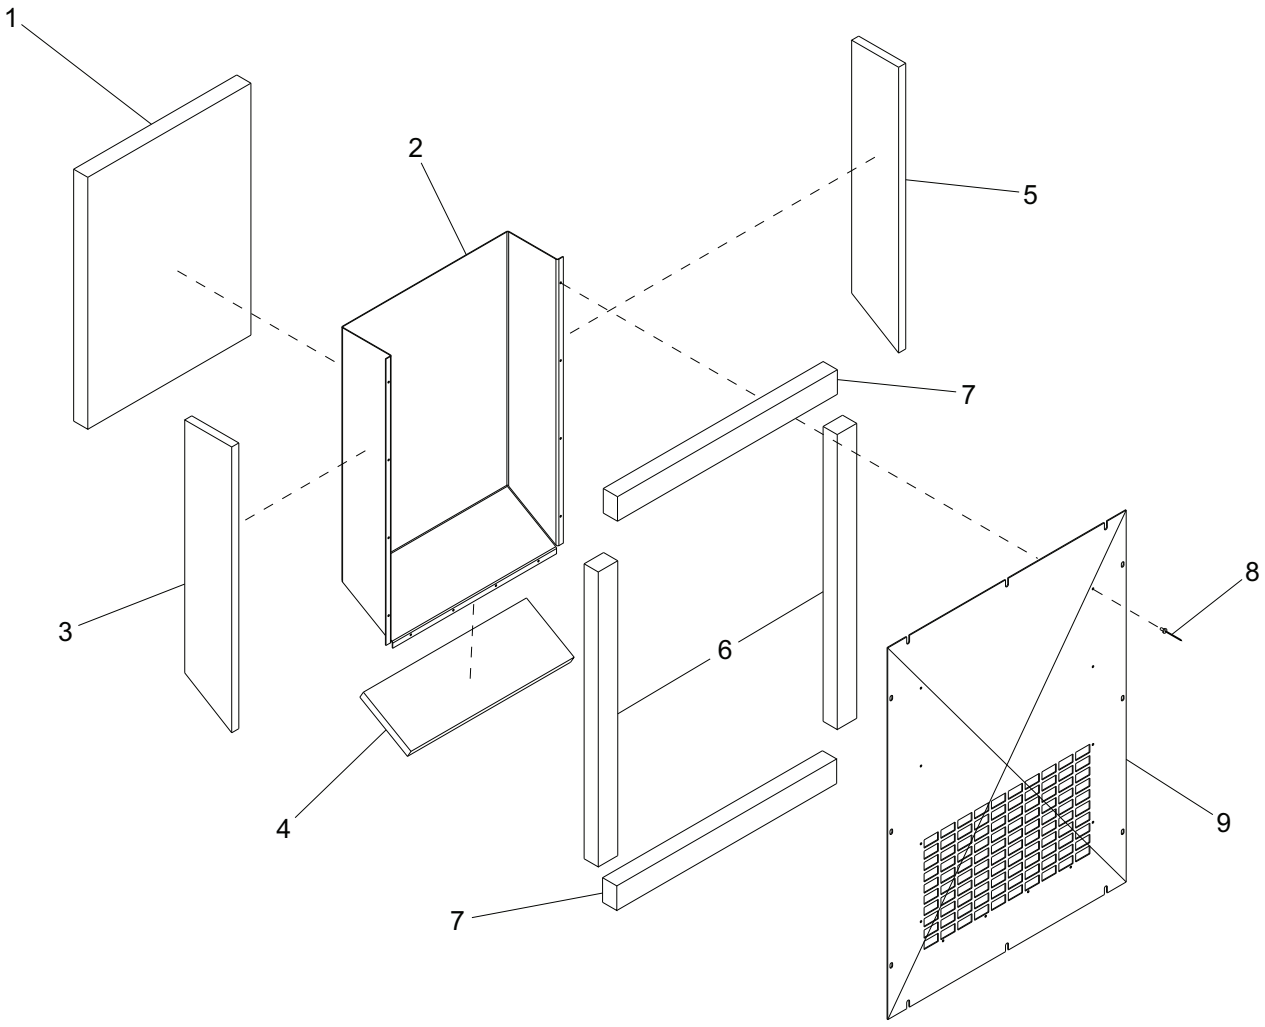

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22184	1	Foam, panel - rear duct face	
2	22138W	1	Duct, rear	
3	21966	1	Foam, duct (L)	
4	22185	1	Foam, rear duct lower	
5	21965	1	Foam, duct (R)	
6	21989	2	Foam, panel long	
7	22186	2	Foam, rear panel short	
8	60268	12	Rivet, .188 dia	
9	22066W	1	Panel, rear	
--	22144	1	Assy, rear panel	Items 1 - 9

FRONT ROOF PANEL ASSEMBLY

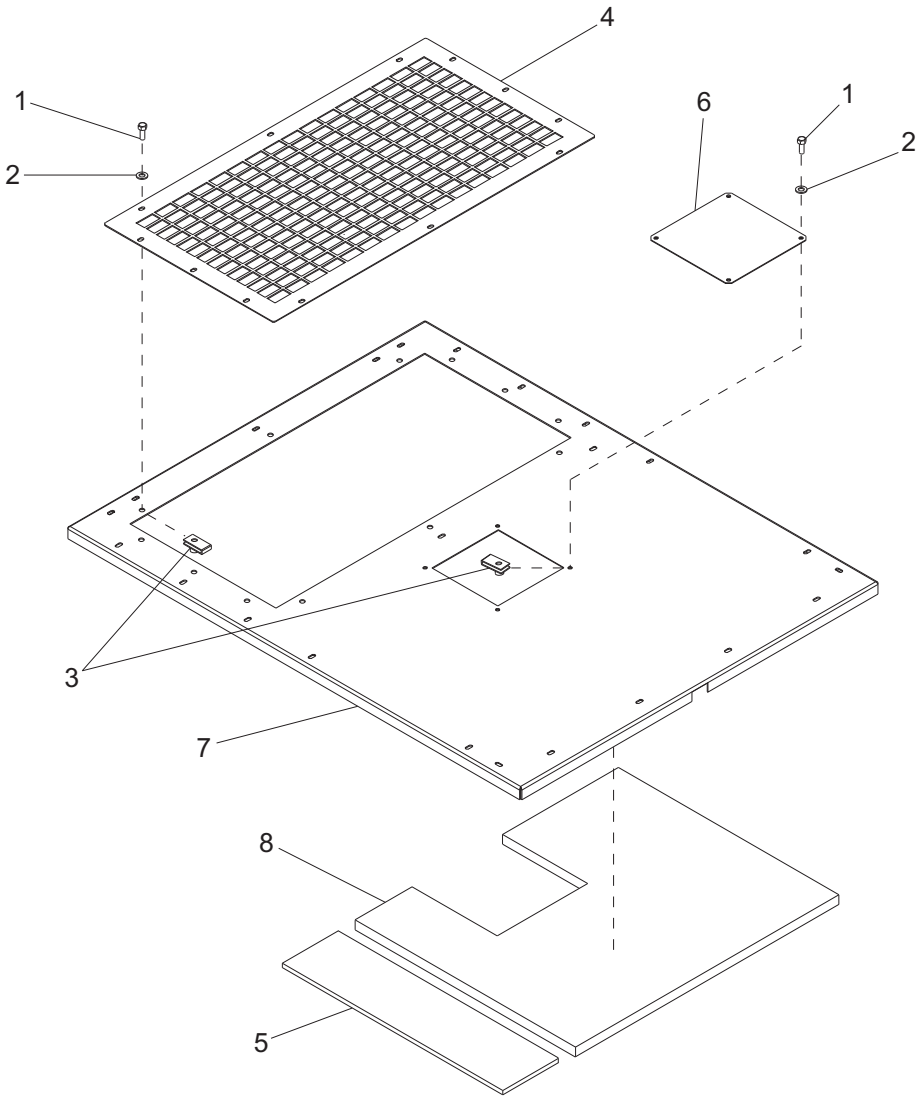

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	60507	16	Screw, .312-18X1” std hex	
2	60452	16	Washer, flat .313	
3	60505	16	Nut, U-clip, .312-18	
4	22175W	1	Panel, roof insert	
5	23982	1	Insulation, ceramic roof	
6	25053W	1	Panel, access	
7	22068W	1	Panel, roof front	
8	22174	1	Foam, roof front	
--	22091	1	Assy, front roof	Items 1 - 8

REAR ROOF PANEL ASSEMBLY

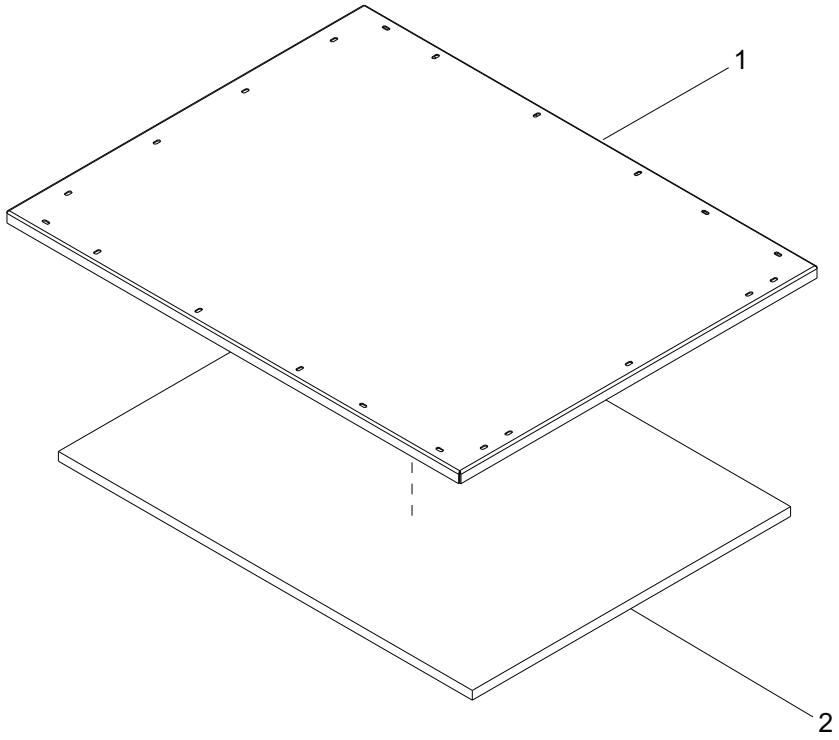

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22067W	1	Panel, roof rear	
2	22173	1	Foam, rear roof panel	
--	22090	1	Assy, rear roof	Items 1 - 2

LEFT REAR CORNER ASSEMBLY

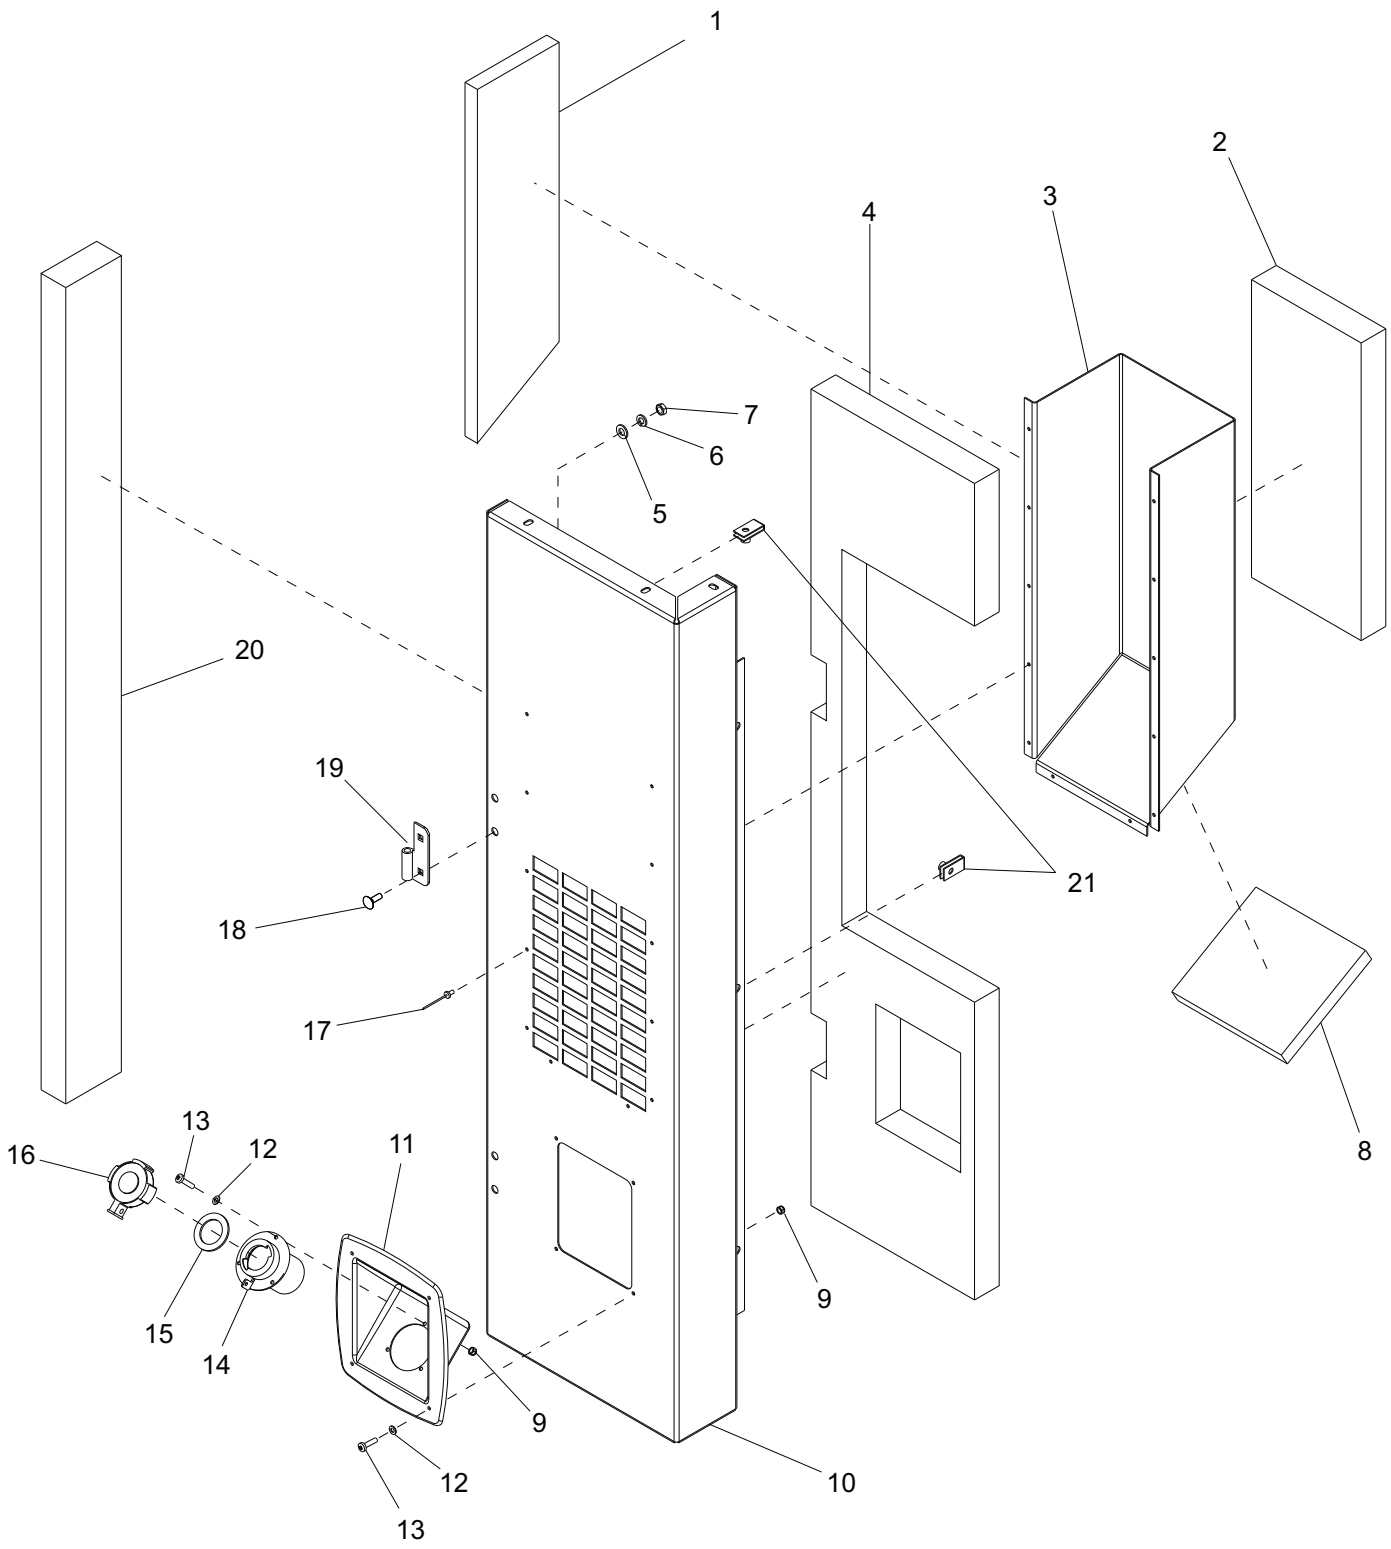

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	21970	1	Foam, small duct right	
2	21968	1	Foam, small duct face	
3	21871W	1	Duct, side air	
4	22176	1	Foam, rear left corner	
5	60243	4	Washer, .250 flat .735/.060	
6	60271	4	Washer, .312 split lock	
7	60285	4	Nut, .312-18 hx G5	
8	21969	1	Foam, small duct lower	
9	60530	7	Nut, 10 - 24 18 - 8 nylock	
10	22062W	1	Panel, left rear	
11	18506	1	Port, fuel fill	
12	60067	7	Washer, flat #10 SS	
13	60529	7	Screw, 10-24X.625 pan phil	
14	18666B	1	Tube, filler	
15	19238	1	Gasket, fuel fill	
16	18648	1	Cap, fuel fill	
17	60473	12	Rivet, 3/16", closed end, alu.	
18	61066	4	Screw, .312-18X1” carriage	
19	18460	2	Hinge, right (female)	
20	21963	1	Foam, corner	
21	60505	6	Nut, U-clip, .312-18	
--	22086	1	Assy, left rear corner	Items 1 - 21

RIGHT REAR CORNER ASSEMBLY

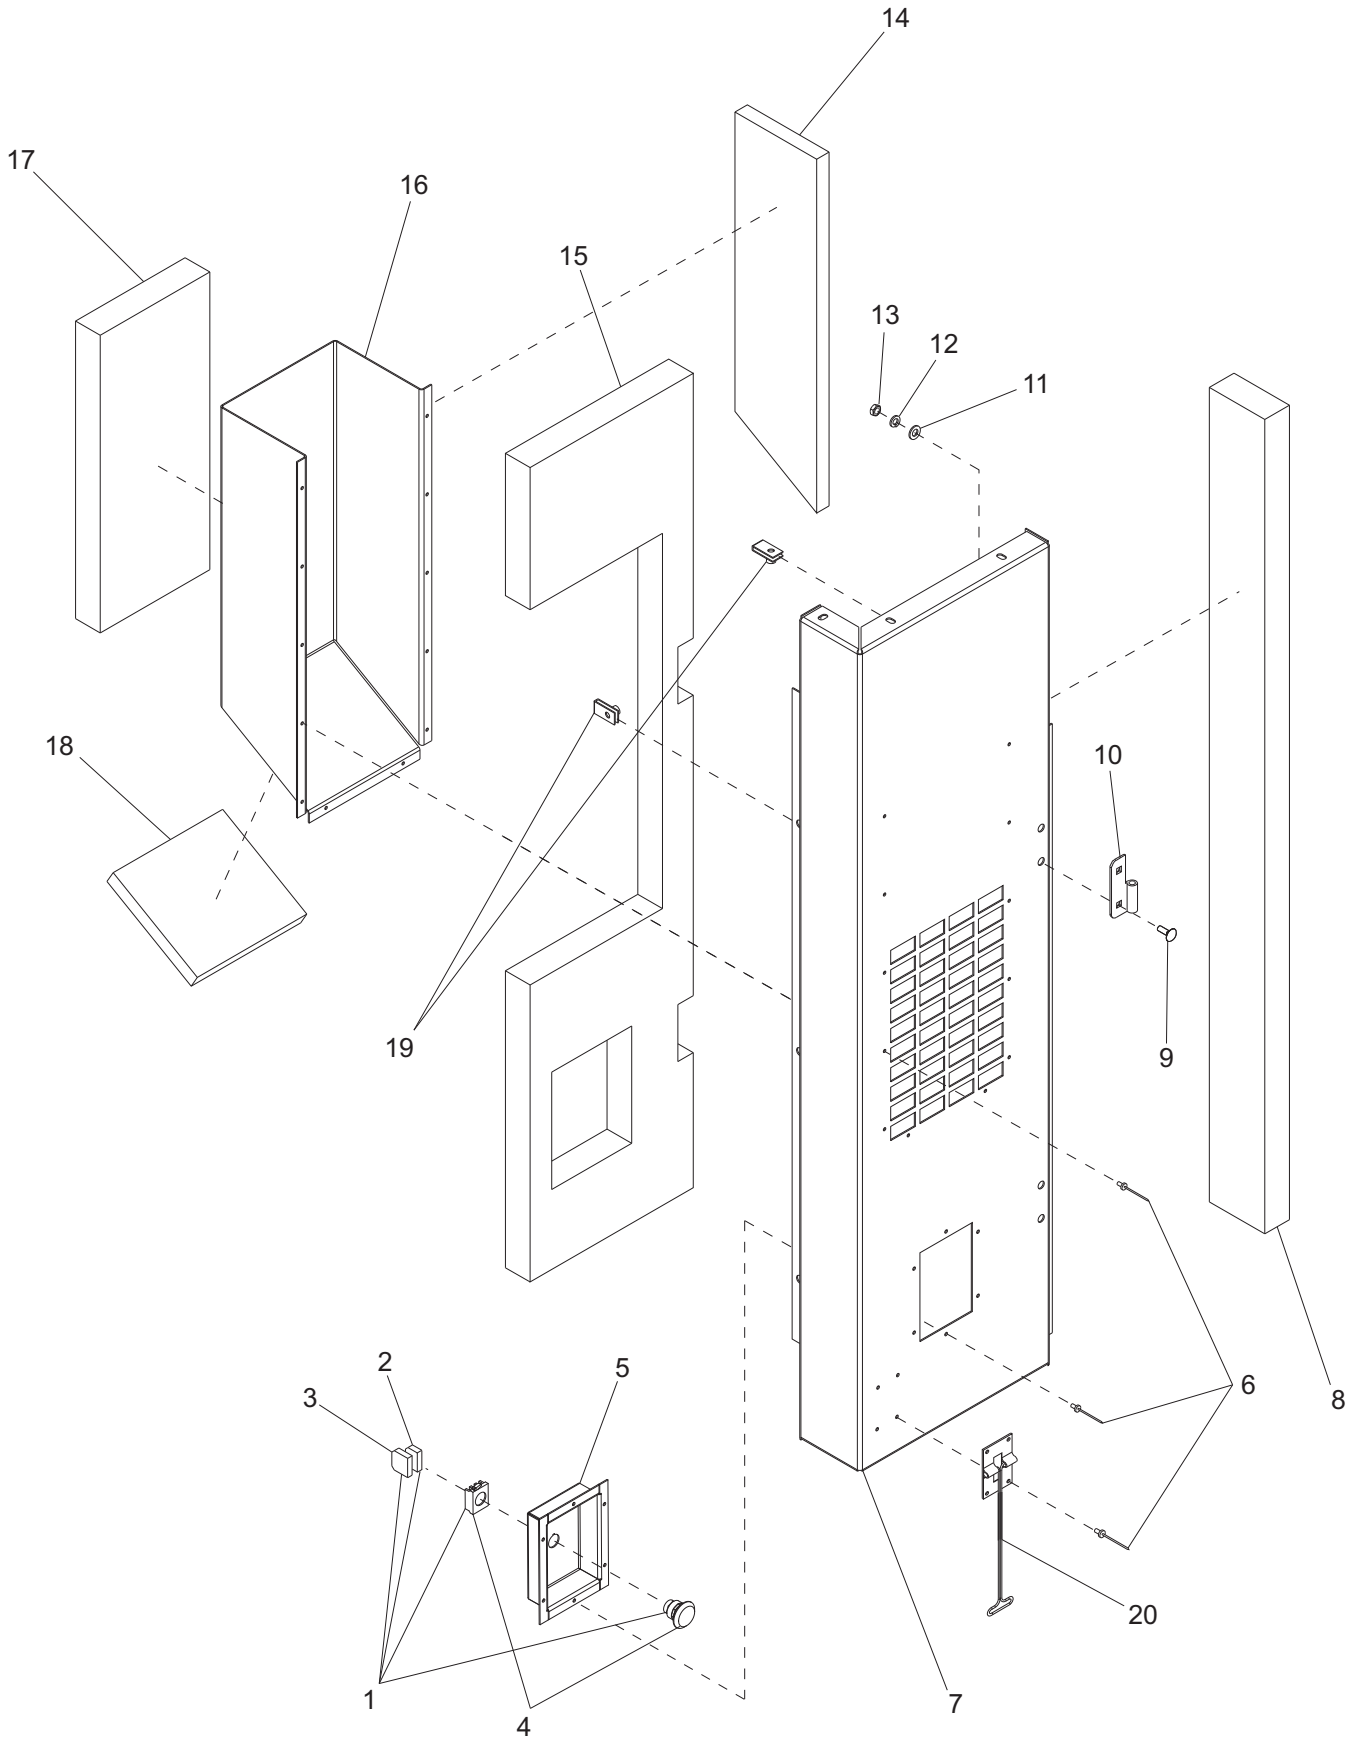

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22550	1	Switch, e-stop, assy	2 N.O./1 N.C.
2	65580	1	Block, e-stop contactor	N.C.
3	65584	1	Block, e-stop contactor	N.O./N.O.
4	65470	1	Switch, e-stop operator	
5	22816B	1	Panel, emergency stop	
6	60268	22	Rivet, .188 dia	
7	22063W	1	Panel, rear right	
8	21963	1	Foam, corner	
9	61066	4	Screw, .312-18X1” carriage	
10	18462	2	Hinge, left (female)	
11	60243	4	Washer, .250 flat .735/.060	
12	60271	4	Washer, .312 split lock	
13	60285	4	Nut, .312-18 hx G5	
14	21971	1	Foam, duct (L)	
15	22177	1	Foam, rear right corner	
16	21871W	1	Duct, side	
17	21968	1	Foam, duct face	
18	21969	1	Foam, duct lower	
19	60505	6	Nut, U-clip, .312-18	
20	60652	1	Latch, door - spring loaded	
--	22087	1	Assy, right rear corner	Items 1 - 20

END AND LOWER SIDE PANEL ASSEMBLY

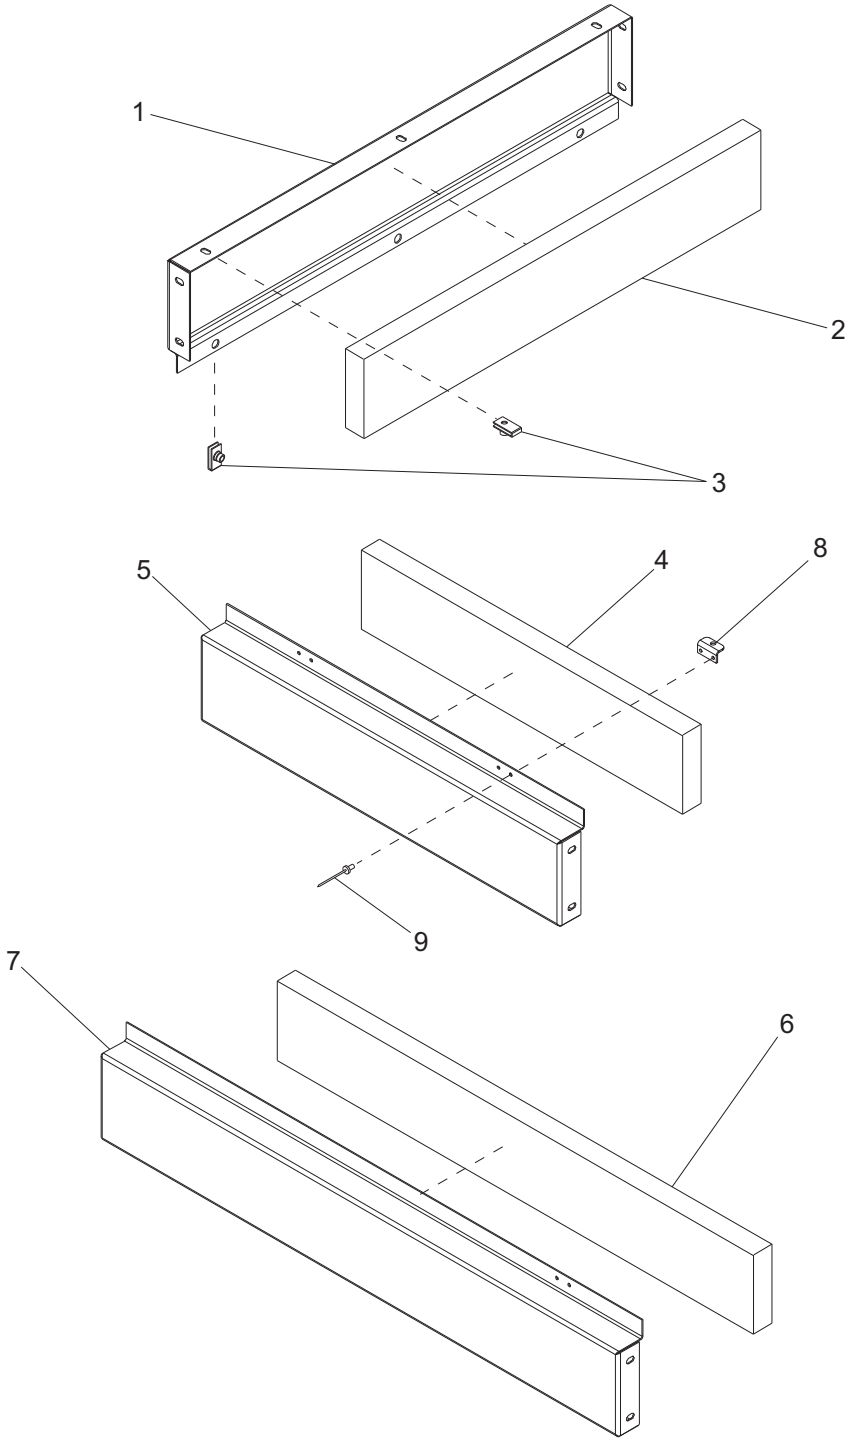

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22064W	4	Panel, end	
2	22178	4	Foam, end panel	
--	22088	4	Assy, front/rear panel	Items 1 - 2
3	60505	24	Nut, U-clip, .312-18	
4	22180	2	Foam, lower side panel	
5	22134W	2	Panel, lower side	
--	22140	2	Assy, front lower panel	Items 4 - 5
6	22182	1	Foam, lower side panel	
7	22137W	1	Panel, side	
--	22143	1	Assy, rear lower panel	Items 6 - 7
8	20916Z	2	Bracket, prop rod	
9	60268	4	Rivet, .188 dia	

UPPER SIDE PANEL ASSEMBLY

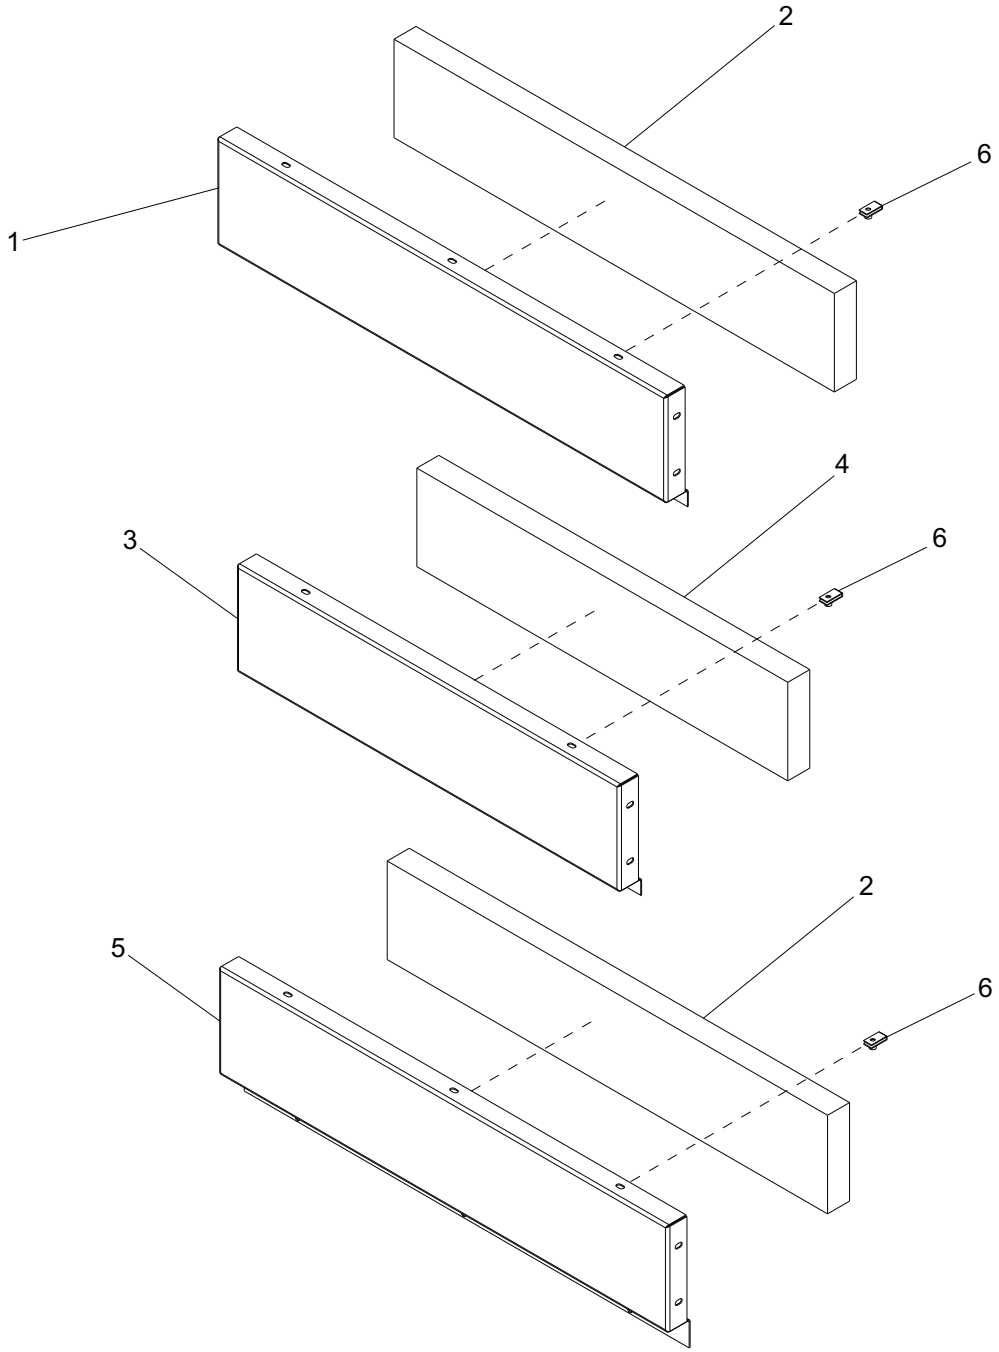

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	22135W	1	Panel, left rear upper	
2	22181	2	Foam, right rear upper	
--	22141	1	Assy, rear/left upper panel	Items 1 - 2
3	22133W	2	Panel, right front upper	
4	22179	2	Foam, right front upper	
--	22139	2	Assy, front upper panel	Items 3 - 4
5	22136W	1	Panel, right rear upper	
--	22142	1	Assy, rear/right upper panel	Items 2 & 5
6	60505	8	Nut, U-clip, .312-18	

TRAILER ASSEMBLY

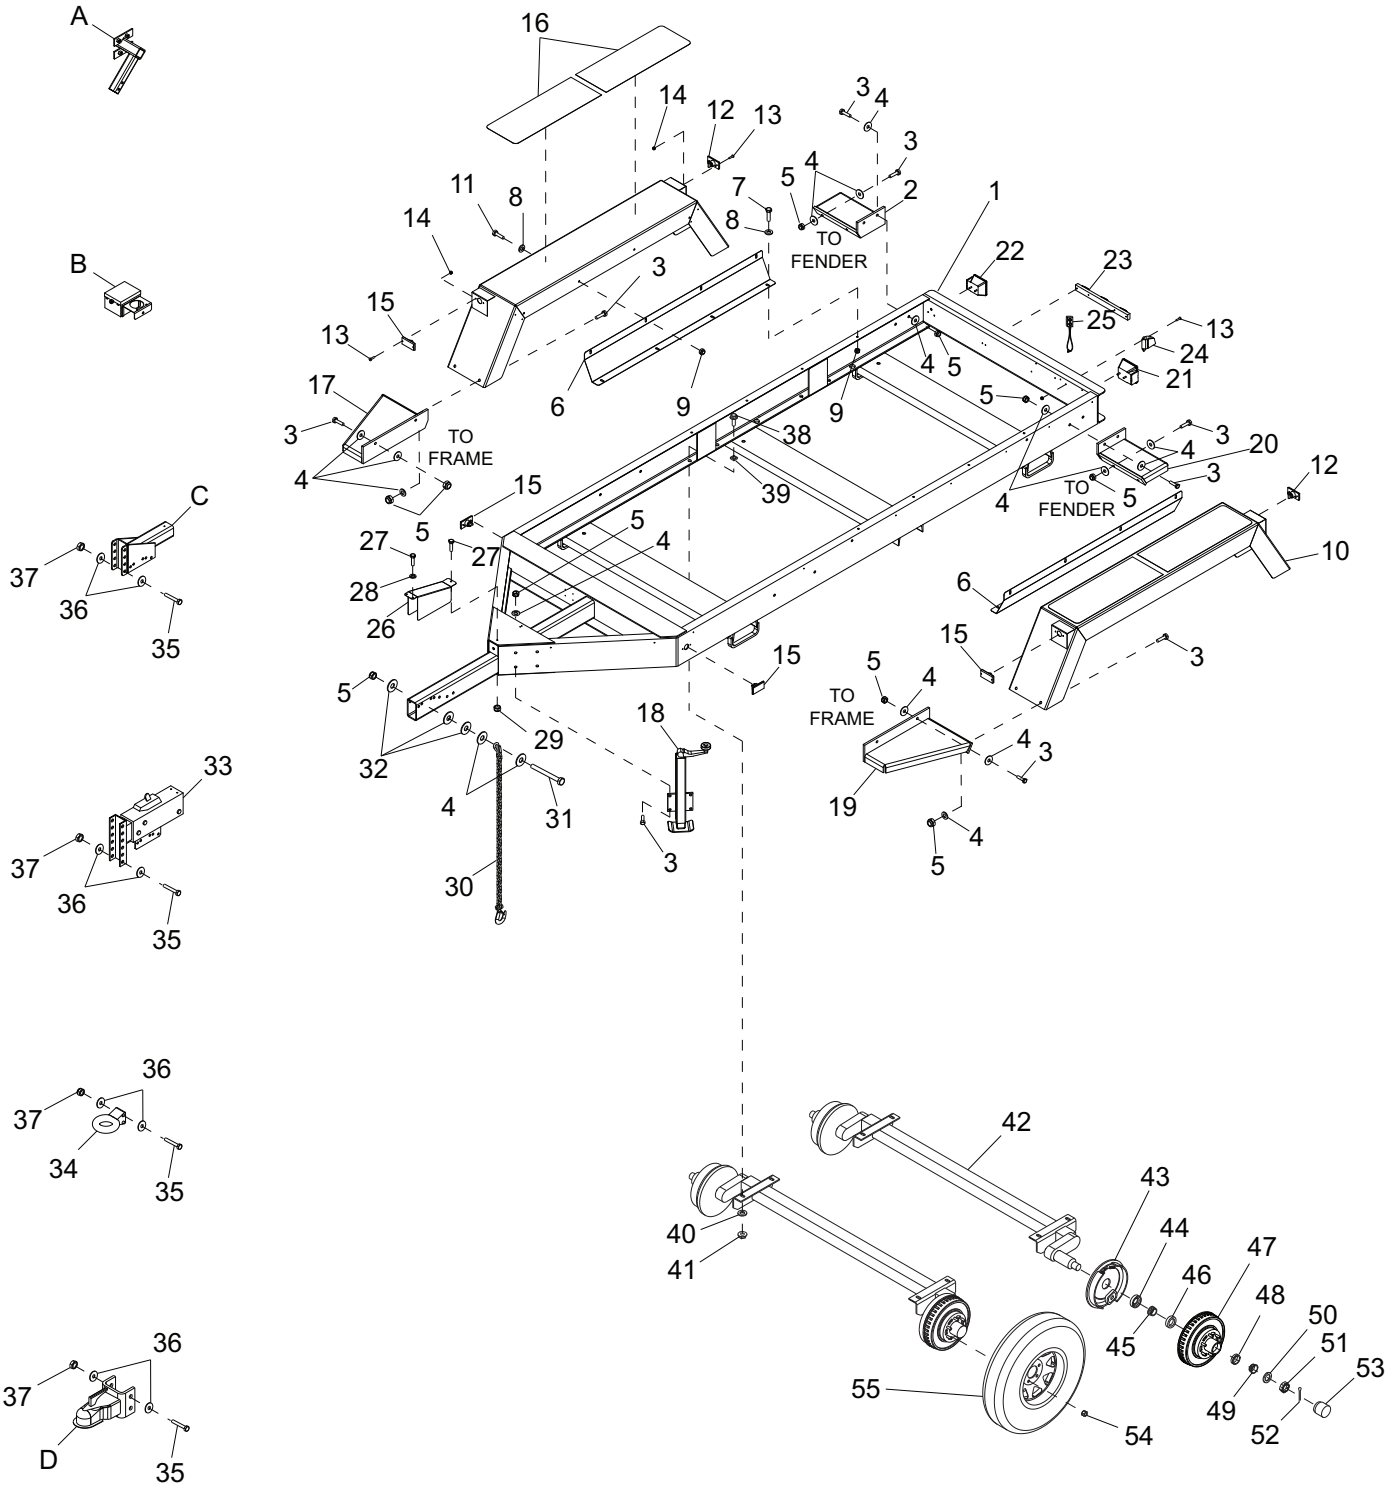

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	21887B	1	Weldment, trailer frame	
2	22358B	1	Weldment, rear step rh	
3	60481	20	Screw, .500-13X1.750 hx	
4	60671	44	Washer, flat .500 fender	
5	60307	22	Nut, .500-13 nylock	
6	22351B	2	Fender shield, large trailer	
7	60352	8	Screw, .375-16X1.250 hx	

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
8	60386	24	Washer, flat .375	
9	60358	16	Nut, .375-16 nylock	
10	22353B	2	Weldment, fender	
11	60052	8	Screw, .375-16X.750 hx	
12	65406	2	Light, clearance marker	Red
13	60277	14	Screw, 10-32X.500 pan phil	
14	60061	14	Nut, 10-32 nylock	
15	65407	4	Light, clearance marker	Amber
16	22398	4	Pad, slip resistant 10” x 28”	
17	22360B	1	Weldment, front step rh	
18	22317B	1	Weldment, jack	
19	22359B	1	Weldment, front step lh	
20	22357B	1	Weldment, rear step lh	
21	65449	1	Light, stop/turn/tail - lh	
22	65448	1	Light, stop/turn/tail - rh	
23	16337	1	Light bar - 3 lights	
24	65605	1	Light, license plate - 12V	
25	10226	1	Plug, 2 wire, license light	
26	22302B	1	Cover, brake guard	
27	60684	3	Screw, .250-20X.875 std hex	
28	60286	2	Washer, split lock .250	
29	60144	1	Nut, .250-20 nylock	
30	20159	2	Chain, trailer safety, hi test	
31	60376	2	Screw, .500-13X4.500 hx hd	
32	60309	6	Washer, flat .500 SAE	
33	18373	1	Actuator, trailer	
34	19335B	1	Hitch, pintle eye (adj) - 3” ID	
35	60239	1	Screw, .625-11X5.000 hx	
36	60180	2	Washer, flat .625	
37	60240	9	Nut, .625-11 nylock	
38	61078	8	Screw, .625-11X2.00 flg hex	
39	60651	8	Washer, sqr. bevel structural	.625 galvanized
40	60180	8	Washer, flat .625	
41	60531	8	Nut, .625 - 11 ser flg	
42	22145	2	Axle 6000# - 57” frame	Hydraulic brake
--	22146	2	Axle 6000# - 57” frame	Option: electric brake
43	26571	2	Surge free-backing brake	Left
--	26572	2	Surge free-backing brake	Right
--	26573	2	Electric brake assy	Option: left
--	26574	2	Electric brake assy	Option: right
44	26575	4	Inner grease seal 2.25"	
45	26576	4	Inner hub bearing	
46	26577	4	Inner bearing cup	
47	22387	4	Drum, large trailer brake	6000# axle
48	26584	4	Outer bearing cup	
49	26585	4	Outer hub bearing	
50	26581	4	Spindle washer	
51	12308	4	Spindle nut	
52	26583	4	Spindle nut - cotter pin	
53	26586	4	Dust cap	
54	60096	24	Nut, wheel lug	
55	20374	4	Wheel, 750-16 LTE	
--	27451	1	Decal, reflective tape kit - white	Not shown
--	27452	27.7ft.	Tape, conspicuity - 2” red/white	Not shown
A	24345B	1	Weldment, spare tire carrier	Option: spare tire carrier
B	19417	1	Breakaway kit	Option
C	19763B	1	Weldment, hitch elec.	Option: 4-pos adjustable
D	19519	1	Coupler, 2.31 ball	Option: adjustable hitch

TRAILER BRAKE LINES

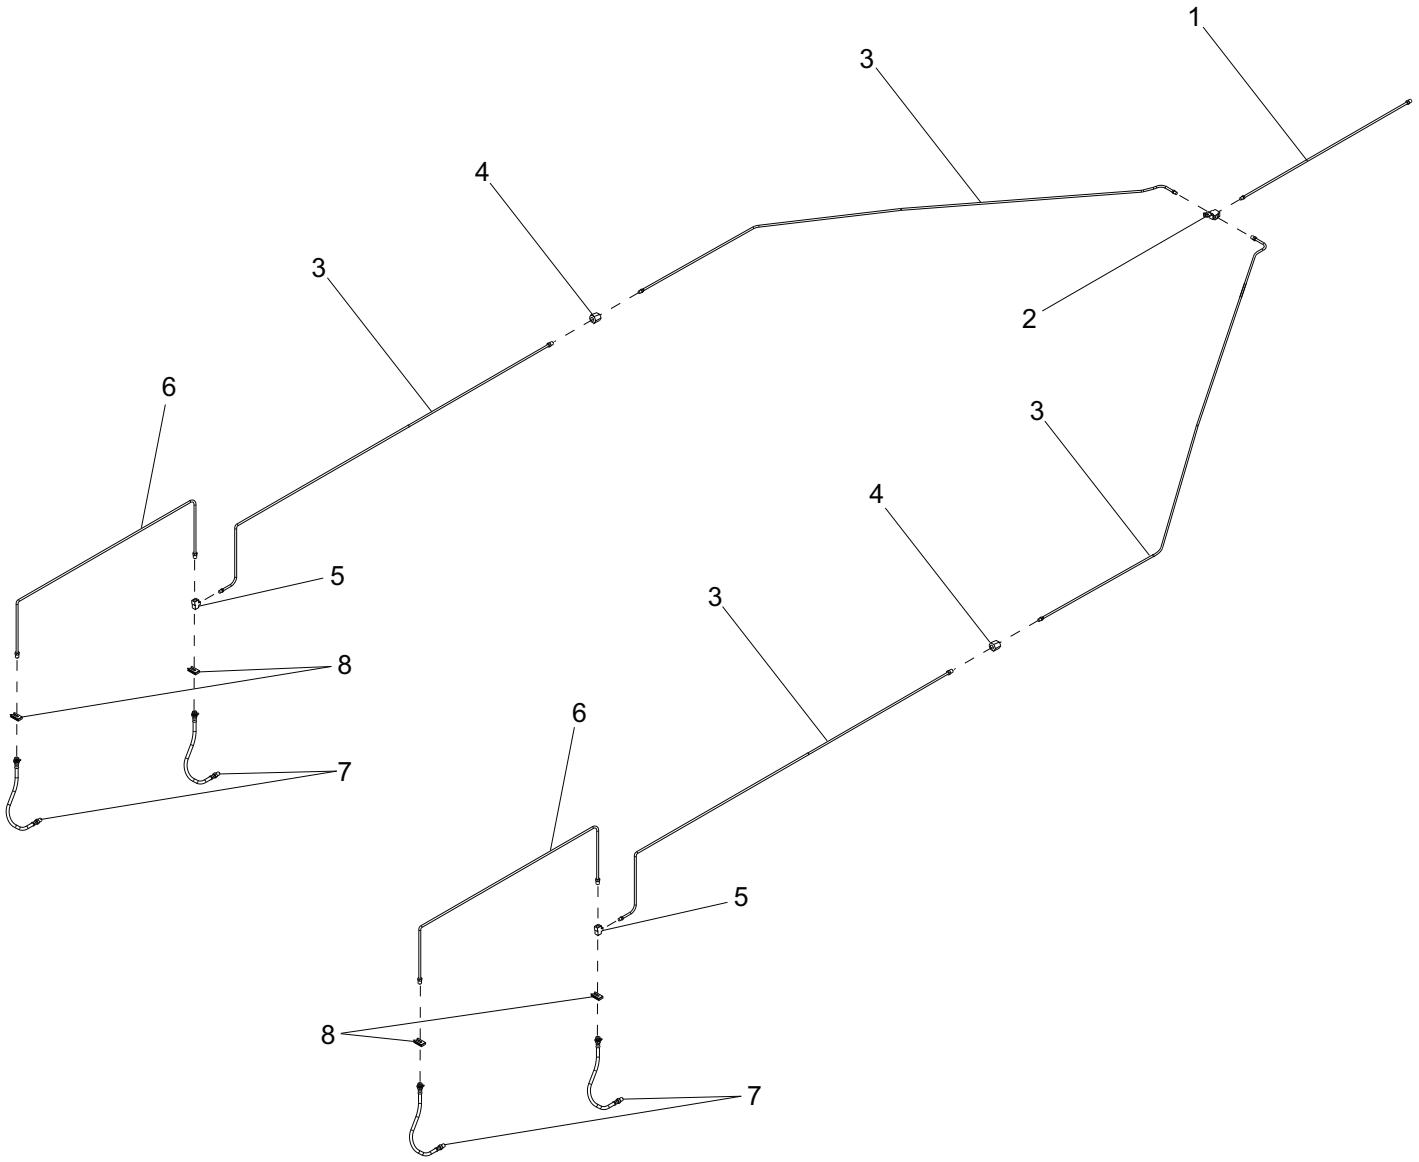

ITEM	PART NO.	QTY	DESCRIPTION	NOTES
1	40495	1	Brake line, 3/16 x 20”	
2	19252	1	Fitting, T w/bracket	
3	22338	4	Brake line, 3/16 x 60”	
4	22339	2	Connector, brake line	
5	40498	2	Fitting, T	
6	40493	2	Brake line, 3/16 x 40”	
7	40497	4	Hose, brake	
8	40499	4	Clip, brake hose	

RECOMMENDED SPARE PARTS LIST

Lug Door Safety Swtiches (2)	12632
Voltage Regulator	18556
Digital Controller	66189
Voltage Potentiometer	26229
Starter Relay	18081
2000 Hour Service Kit	SK017
Hose, Radiator - Upper	24987
Hose, Radiator - Lower	23507
Sensor, Low Coolant	65592
E-Stop Assembly	22550
Overflow Jug Assembly	20454
Engine Alternator	22372

REV: C
PART NO: 26461
12.10.09